

NuTool - PinConfigure User Manual

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1	Introduction	4
2	Starting to Use the NuTool - PinConfigure.....	5
2.1	System Requirements	5
2.2	Supported Chips.....	6
2.3	Running the NuTool - PinConfigure	6
3	User Interface Guide.....	7
3.1	GUI Overview	7
3.2	Select Field of Chip Series and Part No.....	8
3.3	MFP Registers TreeView	9
3.4	Supported Module - TreeView	10
3.4.1	Usage	10
3.4.2	Conflict.....	11
3.4.3	Adjustment of Conflicts	12
3.4.4	Multiple Selections.....	15
3.4.5	Search	16
3.5	Chip View	17
4	Toolbar	21
4.1	Switch Select Field and MFP-Registers TreeView	21
4.2	Load Configuration	21
4.3	Save Configuration	21
4.4	Generate Code.....	21
4.5	Connect to Target Chip.....	21
4.6	Print Report	21
4.7	Generate Report of Pin Description	22
4.8	Run NuCAD.....	22
4.9	Switch Pin Description	23
4.10	Zoom In	24
4.11	Best Fit	24
4.12	Zoom Out	24
4.13	Disable All Checked Modules	24
4.14	Settings	25
4.15	Read User Manual.....	25
5	Revision History	26

List of Figures

Figure 2-1 NuTool - PinConfigure.exe and Related Folders	6
Figure 3-1 PinConfigure Window.....	7
Figure 3-2 Selecting Part Number	8
Figure 3-3 Editing a MFP Register.....	9
Figure 3-4 Results of Configuring ACMP0 by the TreeView	10
Figure 3-5 "Conflict Occurred" Dialog Box.....	11
Figure 3-6 Recursive Adjustment	12
Figure 3-7 "Adjustment of the Conflict" Dialog Box.....	13
Figure 3-8 Adjustment Based on Removal	14
Figure 3-9 Multiple Selections of BRAKE00.....	15
Figure 3-10 Matched Search Results	16
Figure 3-11 List of All the Related GPIO Multi-functions.....	18
Figure 3-12 Results of Configuring ADC0_7 by the Individual Pin	19
Figure 3-13 Disabling the Configured Pin.....	20
Figure 4-1 Generated Schematic Unit by NuCAD	22
Figure 4-2 Pin Description Expanded around the Chip.....	23
Figure 4-3 "Settings" Dialog Box	25

1 Introduction

The **NuTool - PinConfigure** is used to configure GPIO multi-functions of Nuvoton NuMicro® Family. Its features are listed below:

- **Configuring by the TreeView:** All the supported modules are collected and listed in the TreeView. The user can manipulate the tree to configure GPIO multi-functions easily.
- **Configuring by individual pins:** Configuring GPIO multi-functions by individual pins is allowed. The user can complete their operation more intuitively and efficiently.
- **Configuring by editing the register value directly:** The user can utilize this feature to inspect the accuracy of the value.
- **Generation of code or report:** After configuring GPIO multi-functions, the user can generate code or print a report. The generated code can be included into the developing projects. The report comprises all the configuration information.

Through the application, the user can configure GPIO multi-functions of the NuMicro® Family correctly and handily.

2 Starting to Use the NuTool - PinConfigure

2.1 System Requirements

The following table lists system requirements for the user to run **NuTool - PinConfigure**.

	Minimum Requirements	Recommended Specifications
Operating System	Windows®XP with latest service pack	Windows®7 with latest service pack
Internet Explorer	Internet Explorer 8	Internet Explorer 10
Input	Keyboard and mouse required	


Note: To have a fully usable and pleasant experience with the application, it is strongly recommended that the version of the installed Internet Explorer (IE) be higher than 8.

2.2 Supported Chips

To see the list of supported chips, please refer to **Supported_chips.htm** in the folder of user manual. The alternative way is to click the **Read User Manual** button on the toolbar.

2.3 Running the NuTool - PinConfigure

To run **NuTool - PinConfigure**, double-click the **NuTool - PinConfigure.exe**. Note that the .exe file and the related folders, such as the Content folder, should stay in the same directory; otherwise, the application will not work properly.

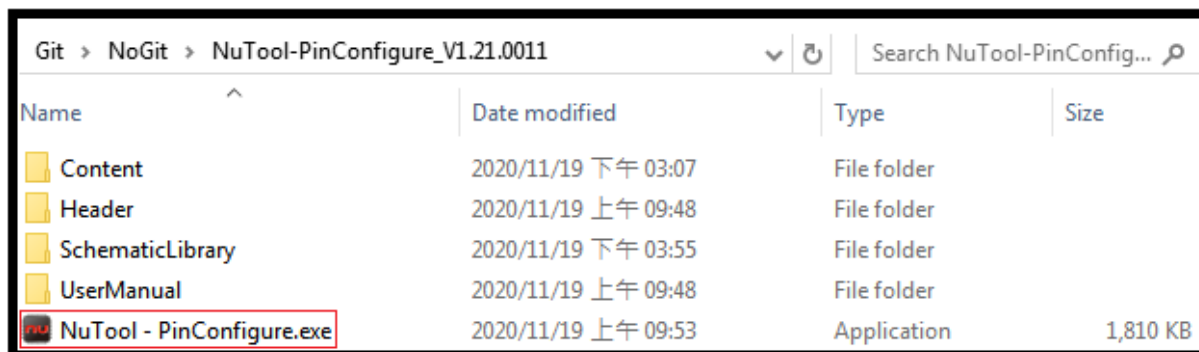

Name	Date modified	Type	Size
Content	2020/11/19 下午 03:07	File folder	
Header	2020/11/19 上午 09:48	File folder	
SchematicLibrary	2020/11/19 下午 03:55	File folder	
UserManual	2020/11/19 上午 09:48	File folder	
NuTool - PinConfigure.exe	2020/11/19 上午 09:53	Application	1,810 KB

Figure 2-1 NuTool - PinConfigure.exe and Related Folders

3 User Interface Guide

3.1 GUI Overview

The PinConfigure Window includes a variety of components. The name of each component is described in Figure 3-1.

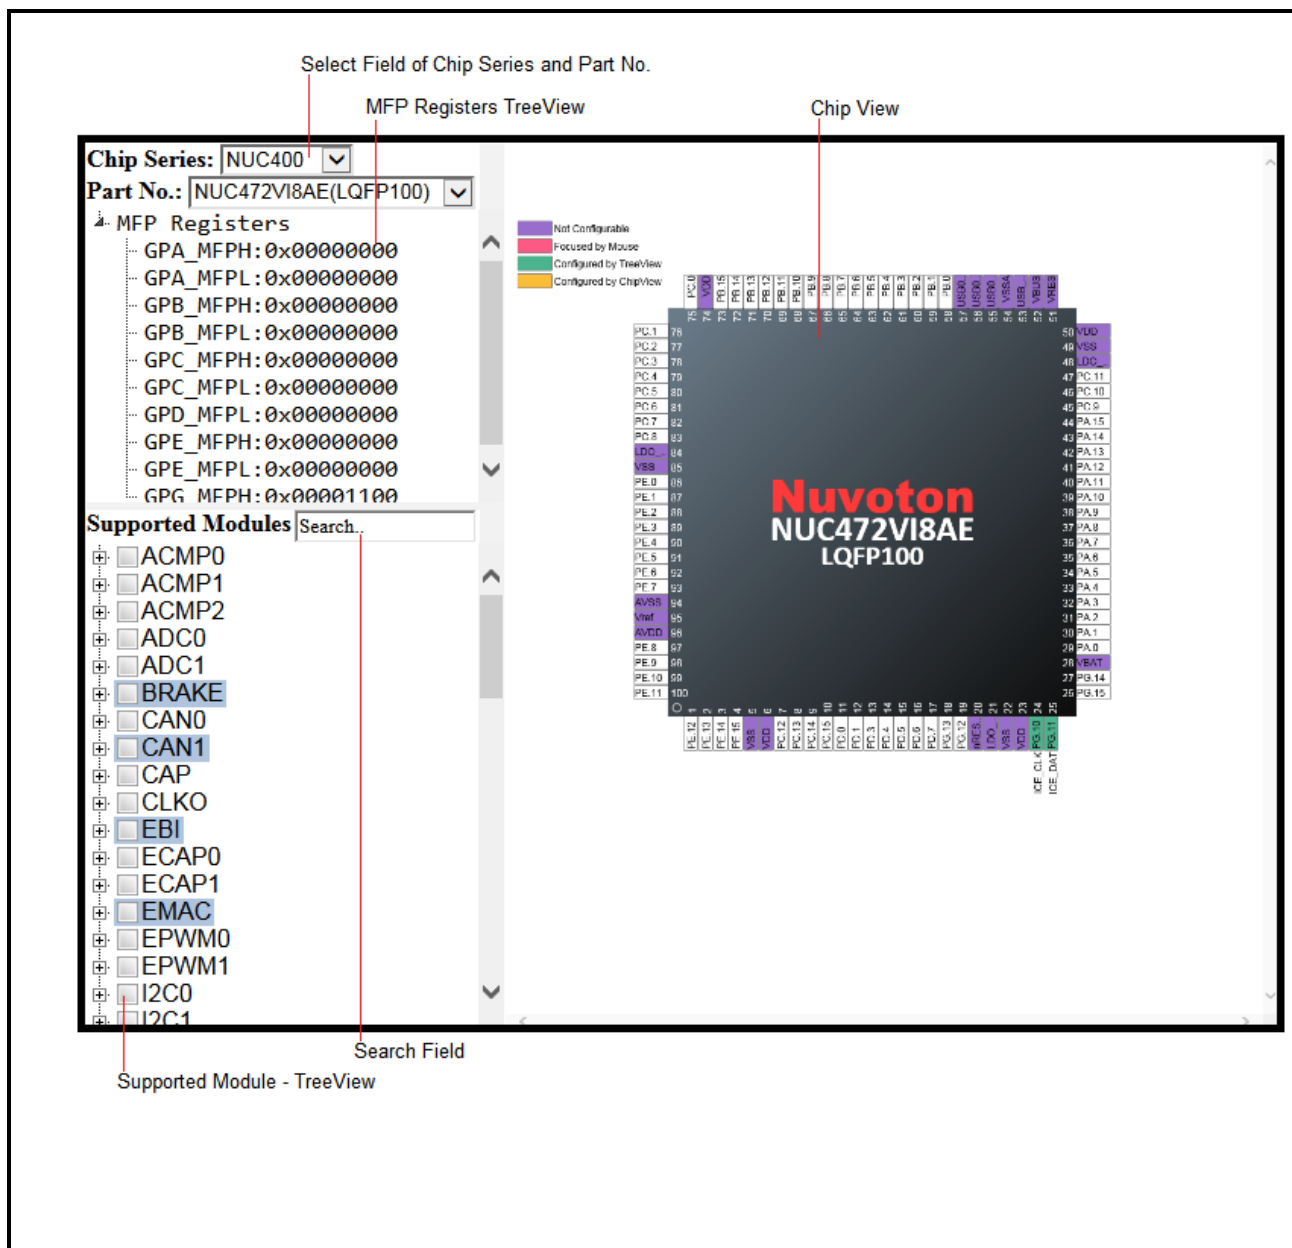


Figure 3-1 PinConfigure Window

3.2 Select Field of Chip Series and Part No.

The user can select the expected chip series and part No. from the upper-left select field (referring to Figure 3-2). If the select field and the MFP Registers TreeView are hidden, please click the **Switch Select Field and MFP-Registers TreeView** to show them.

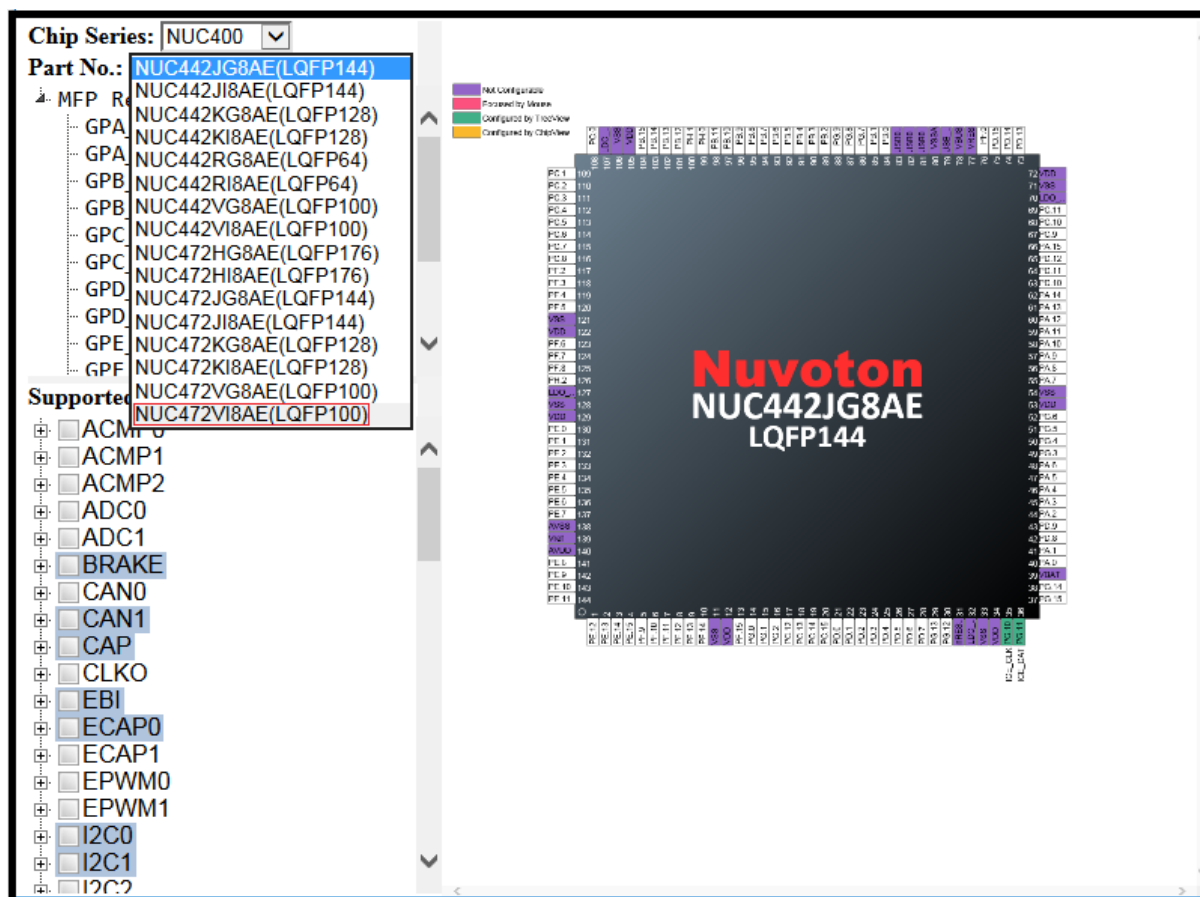


Figure 3-2 Selecting Part Number

3.3 MFP Registers TreeView

The current values of MFP registers are displayed in this TreeView. Moreover, the user can edit them directly by double-clicking on the expected one and enter a new value (referring to Figure 3-3). After editing, the corresponding check boxes of the supported modules - TreeView and the chip view will be updated immediately. Some chips require two different MFP registers to configure GPIO multi-functions, and thus the user cannot edit the values of MFP registers by double-clicking these chips.

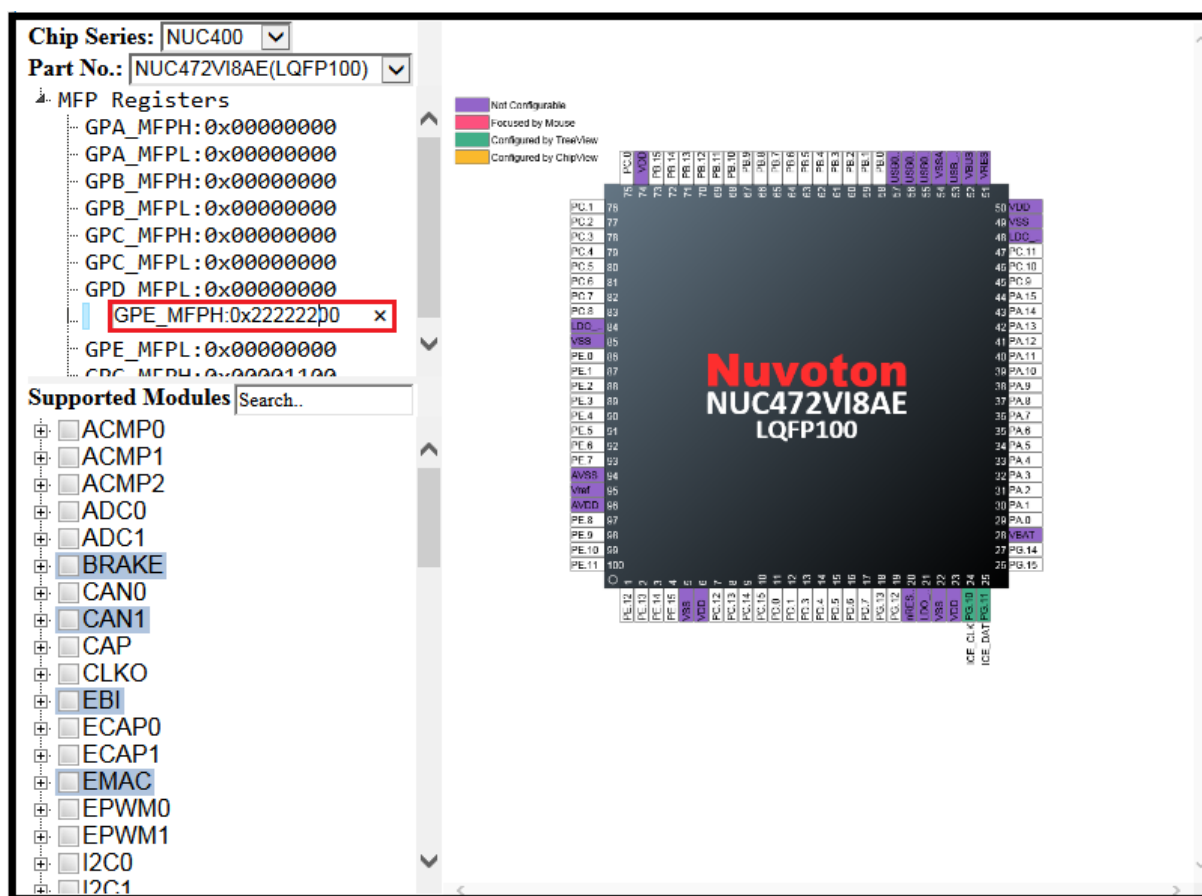


Figure 3-3 Editing a MFP Register

3.4 Supported Module - TreeView

3.4.1 Usage

With the supported module - TreeView, the user can configure the peripheral pin(s). Each time a module or its individual GPIO multi-function is checked in the check boxes, the chip view shown in the right window will display the new state of the pin(s). Besides, the corresponding value of MFP register will be updated at the same time. For example, the user configures ACMP0 and the results are shown as Figure 3-4.

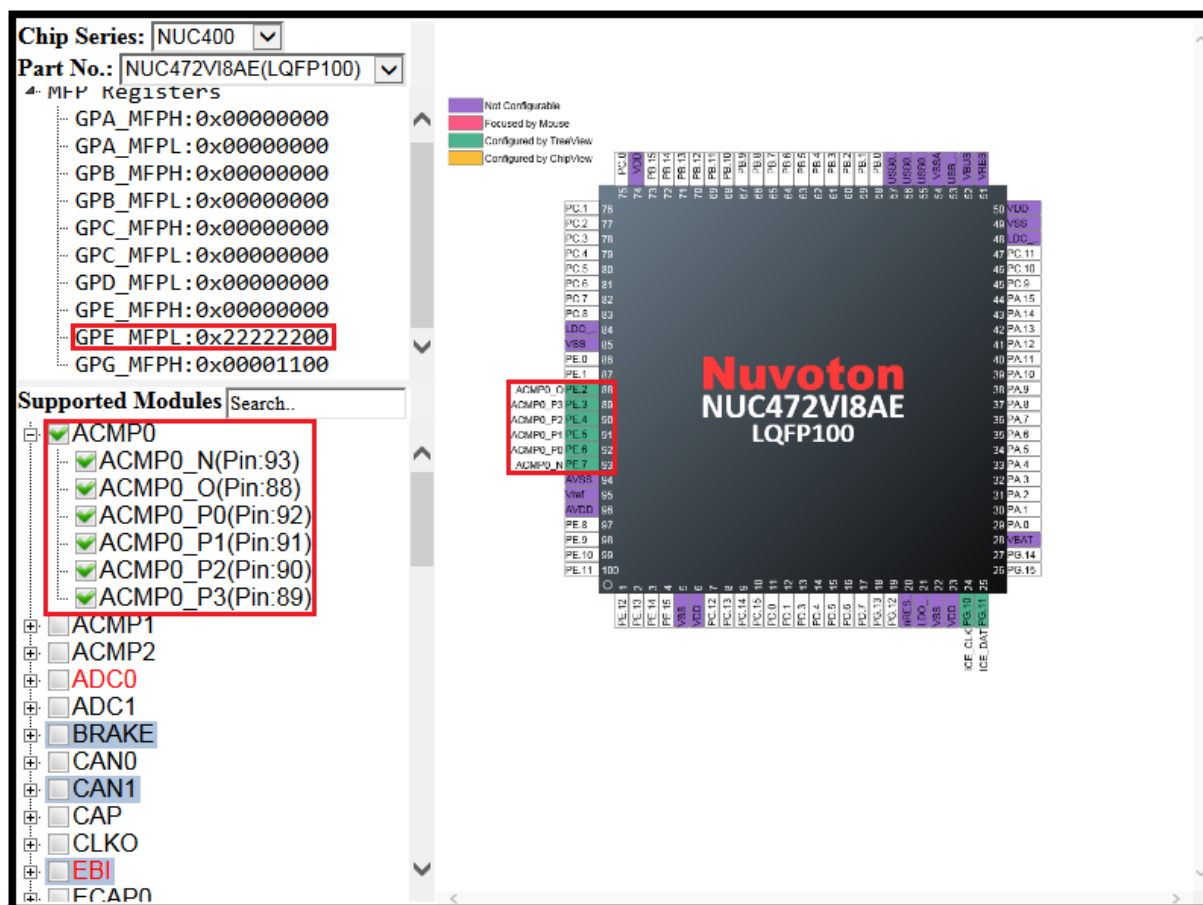


Figure 3-4 Results of Configuring ACMP0 by the TreeView

3.4.2 Conflict

When the pins have been configured to a module, the related texts in the check boxes will be marked in red. If the user obviously wants to configure the pins again through the TreeView, this case is called as a conflict. A dialog box which lists the relevant pins and their configured modules will be invoked (referring to Figure 3-5). It offers two options to decide the next step. Clicking the Yes button, the tool will make the **adjustment of conflicts**. Clicking the No button, the tool will only configure the remaining pins.

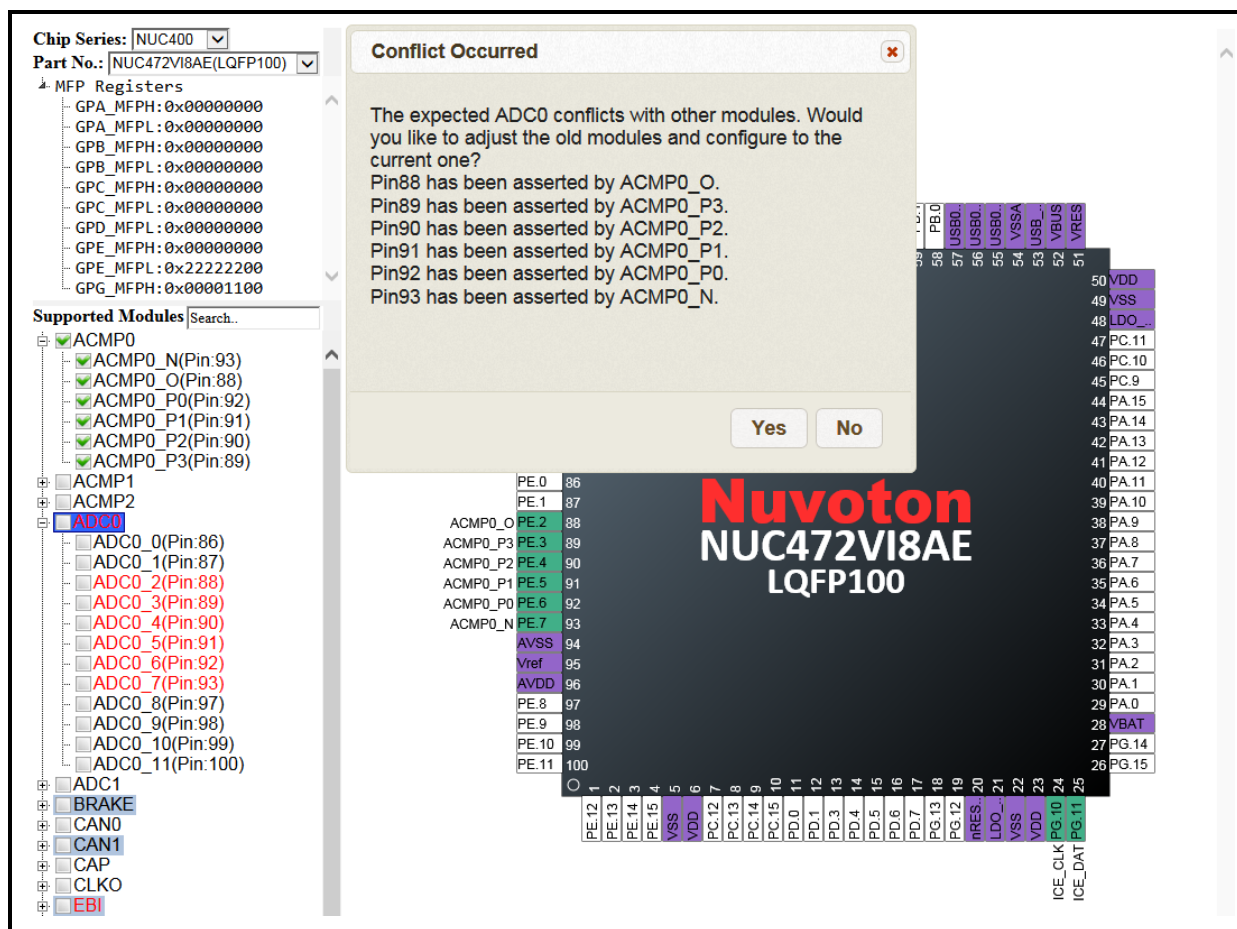


Figure 3-5 “Conflict Occurred” Dialog Box

3.4.3 Adjustment of Conflicts

To resolve conflicts, the tool recursively adjusts configured modules if possible. For instance, if the user wants to configure EPWM1_0, the tool will try to adjust BRAKE01 to another pin (Pin 72). However, Pin 72 is occupied by EMAC_MII_MDC. Fortunately, EMAC_MII_MDC has a configurable pin (Pin 70) to configure.

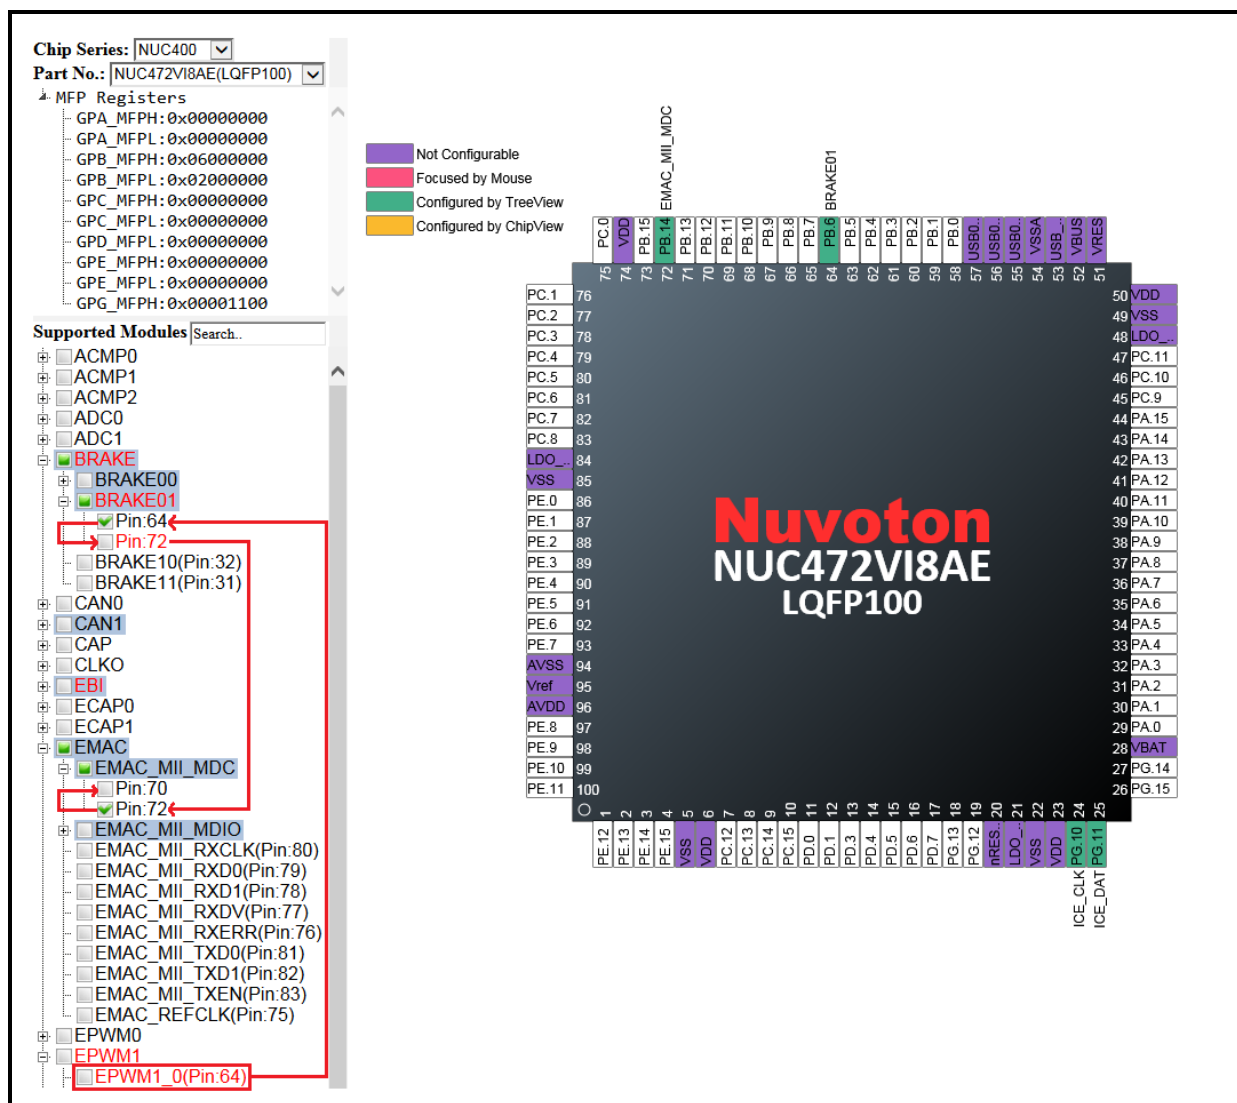


Figure 3-6 Recursive Adjustment

As a result, the tool finds the way to adjust the conflict. EPWM1_0 is configured. At the same time, BRAKE01 and EMAC_MII_MDC are kept. A dialog shows up to tell the adjustment details. If the user wants to undo the adjustment of the conflicts, please click the Undo button.

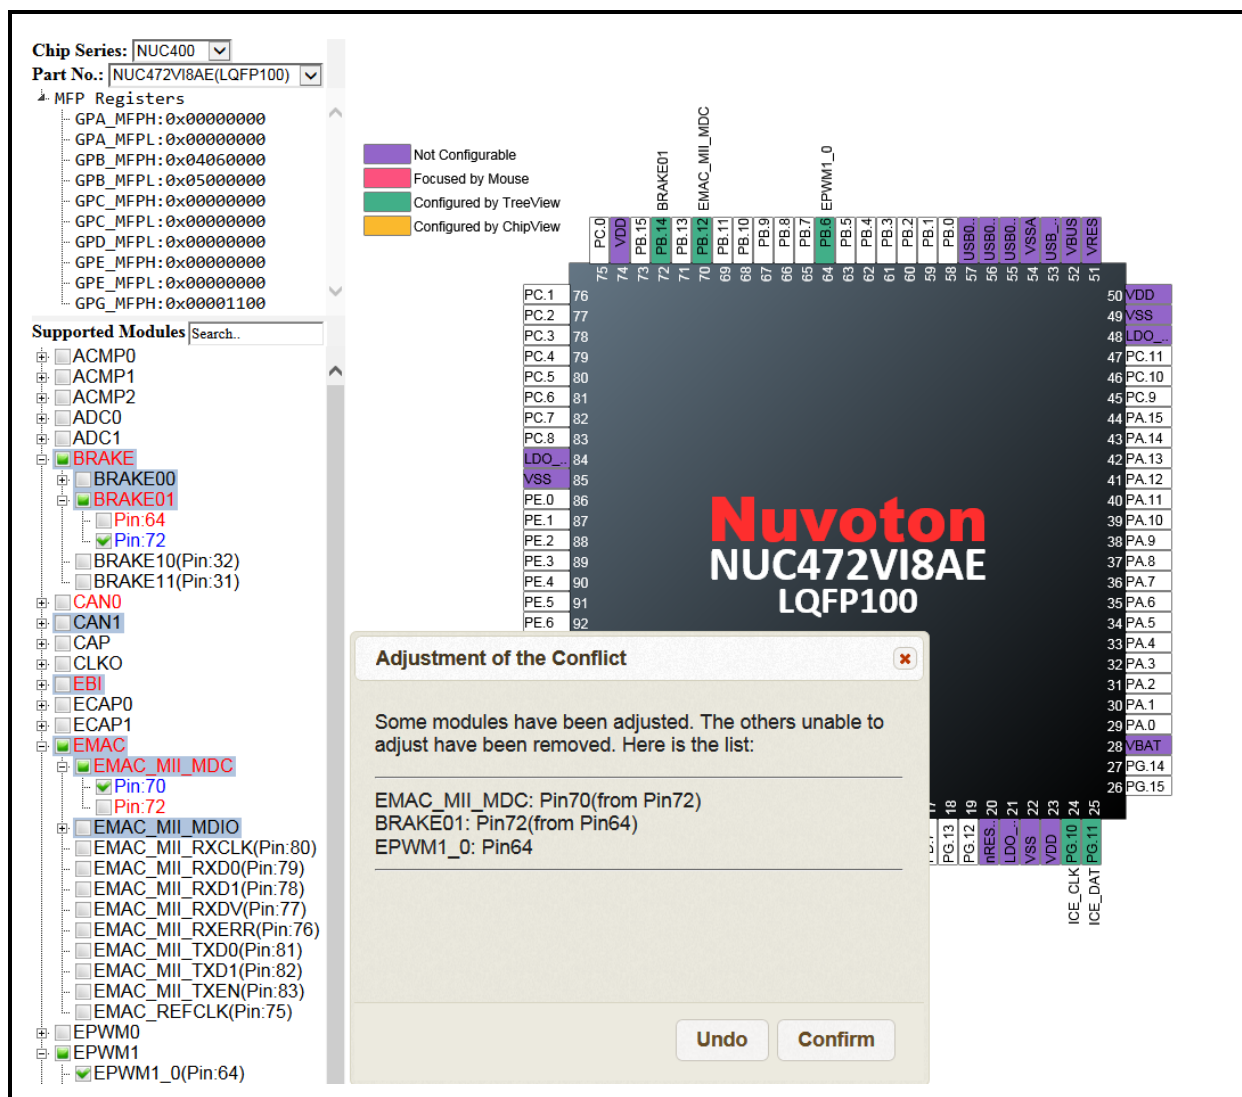


Figure 3-7 "Adjustment of the Conflict" Dialog Box

Sometimes, the tool could find several modules unable to adjust. For instance, Pin 93 is occupied by ACMP0_N. ACMP0_N has only one option (Pin 93). Thus, if the user wants to configure ADC0_7, the tool is unable to adjust ACMP0_N. That is why when configuring ADC0_7, ACMP0_N has to be removed.

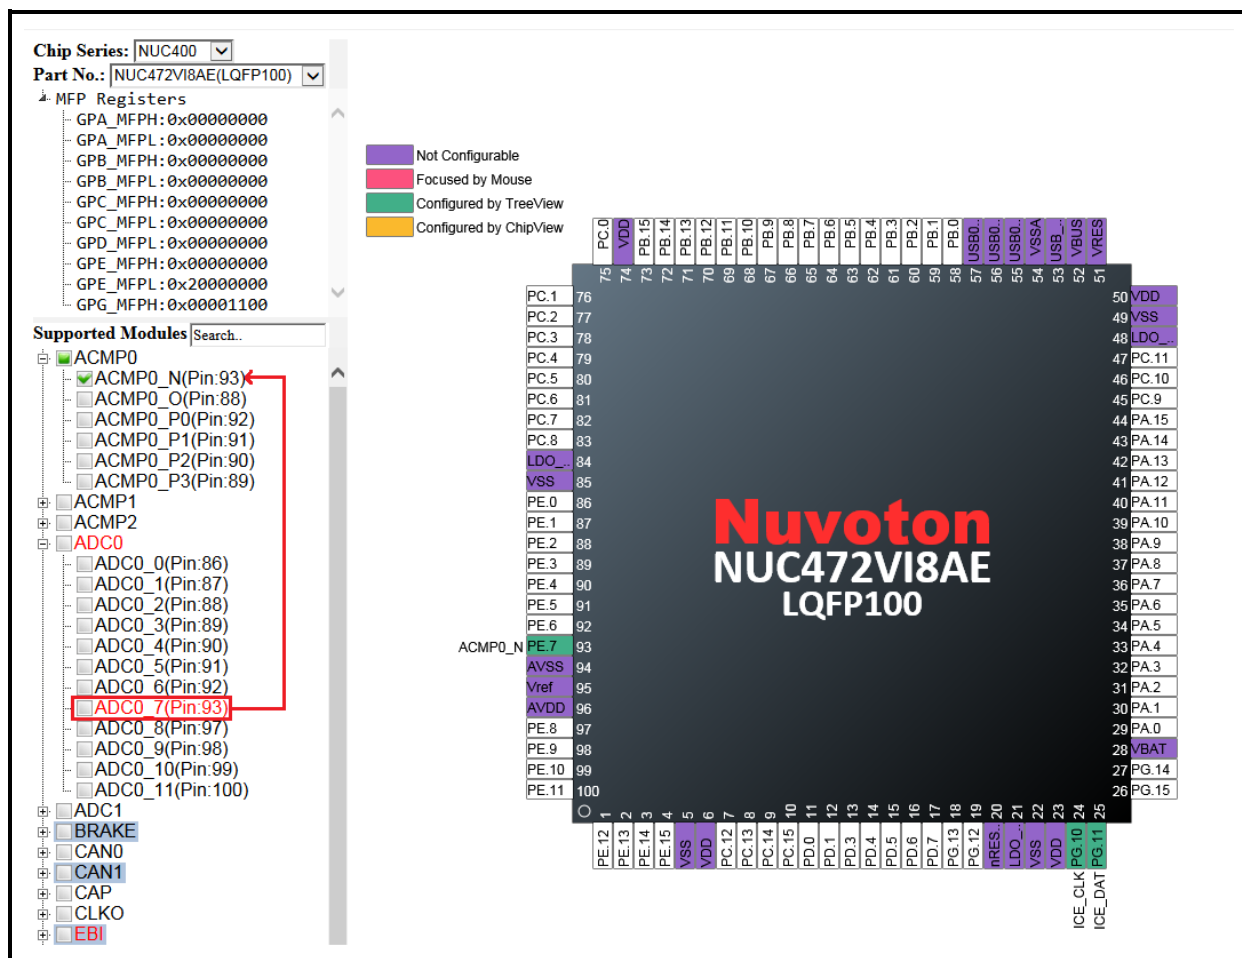


Figure 3-8 Adjustment Based on Removal

3.4.4 Multiple Selections

There are some modules whose GPIO functions have multiple selections of pins to the same function. In this case, the related check boxes are highlighted with the steel blue color. The user is only permitted to select one of pins. For example, in the BRAKE module, its GPIO function of BRAKE00 has two options, pin 65 and 73, but only one of them can be occupied by BRAKE00 (referring to Figure 3-9).

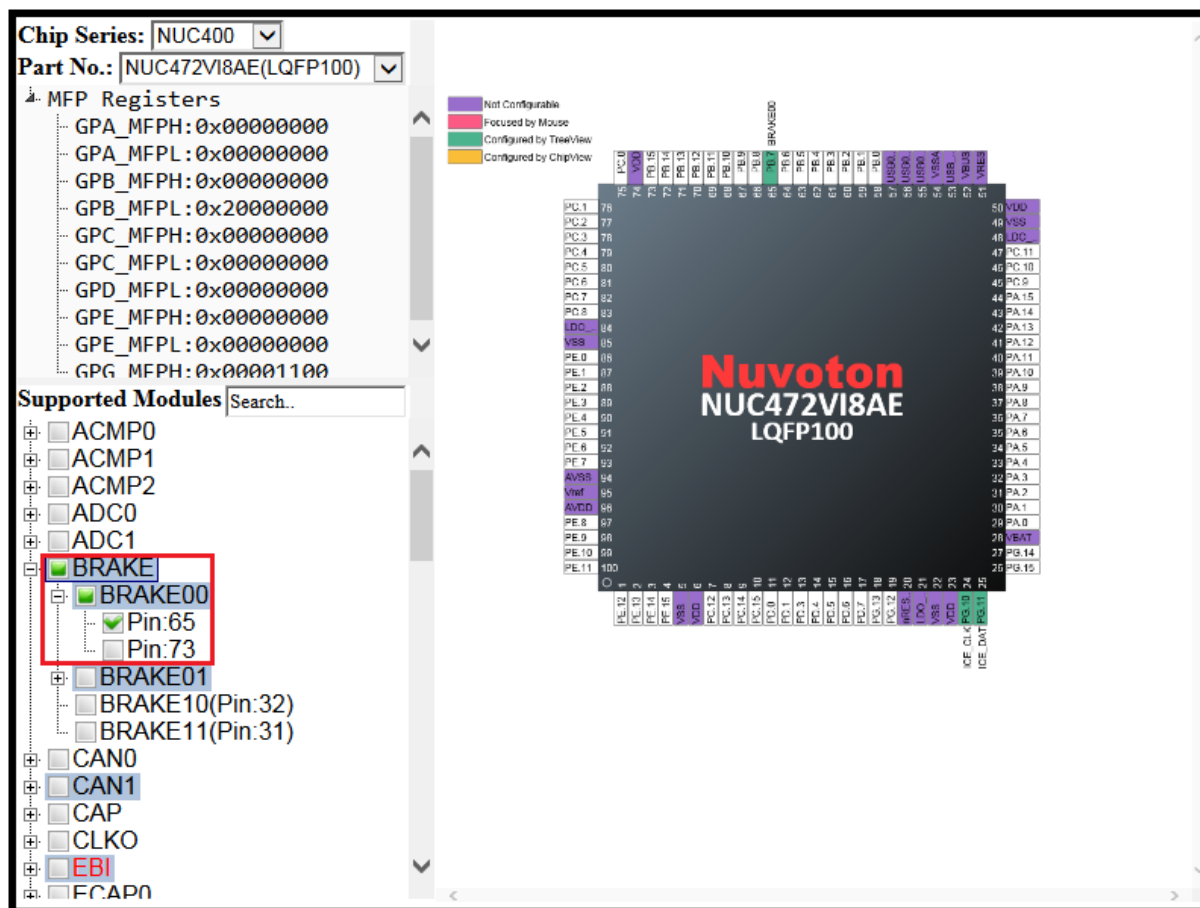


Figure 3-9 Multiple Selections of BRAKE00

3.4.5 Search

To find a specific module in the supported modules - TreeView, the user can input the expected module name in the search field. After input, the matched texts in the check boxes will be marked in bold and italics. Note that the search adopts the partial match, not exact match (referring to Figure 3-10). The minimum number of input characters is two.

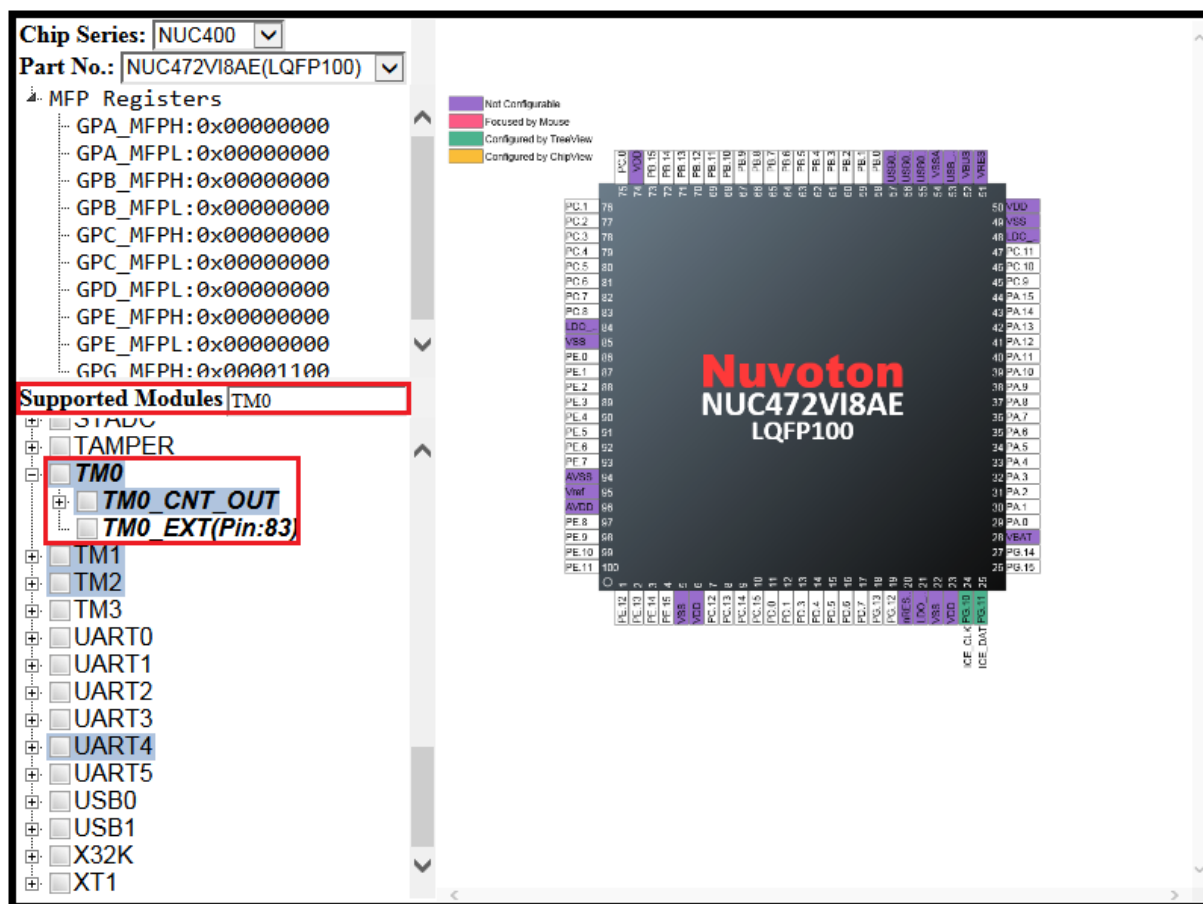


Figure 3-10 Matched Search Results

3.5 Chip View

The chip view, which is in the right pane of the window, depicts a graphical chip involving its pins. Each pin possesses its own information of the current pin assignment. The pins which are highlighted with the purple color denote that they do not belong to the configurable pins. If a pin is being configured to a GPIO multi-function, the corresponding function name will emerge in the vicinity of the pin. Meantime, the pin will be highlighted with the green color if it is configured by the TreeView, or with the orange color if it is configured by the individual pin.

To configure by the individual pin, follow the steps below:

1. Move the mouse cursor to the expected pin and click on the left button of the mouse. Then the list of all the related GPIO multi-functions will emerge in the vicinity of the pin (referring to Figure 3-11).
2. Move the mouse cursor into the list and select the expected GPIO function and click on it. Configuring by the individual pin is accomplished. At the same time, the TreeView and the value of the MFP register will be updated correspondingly (referring to Figure 3-12).

The difference between configuring by individual pins and TreeView is that the user can arbitrarily configure any pin by the individual pins without considering the occurrence of a conflict. To disable the configured pins by individual pins, move the mouse cursor to the expected pins and left-click. Select the last row of the list which is named as Reset (referring to Figure 3-13). Then the disable operation is completed.

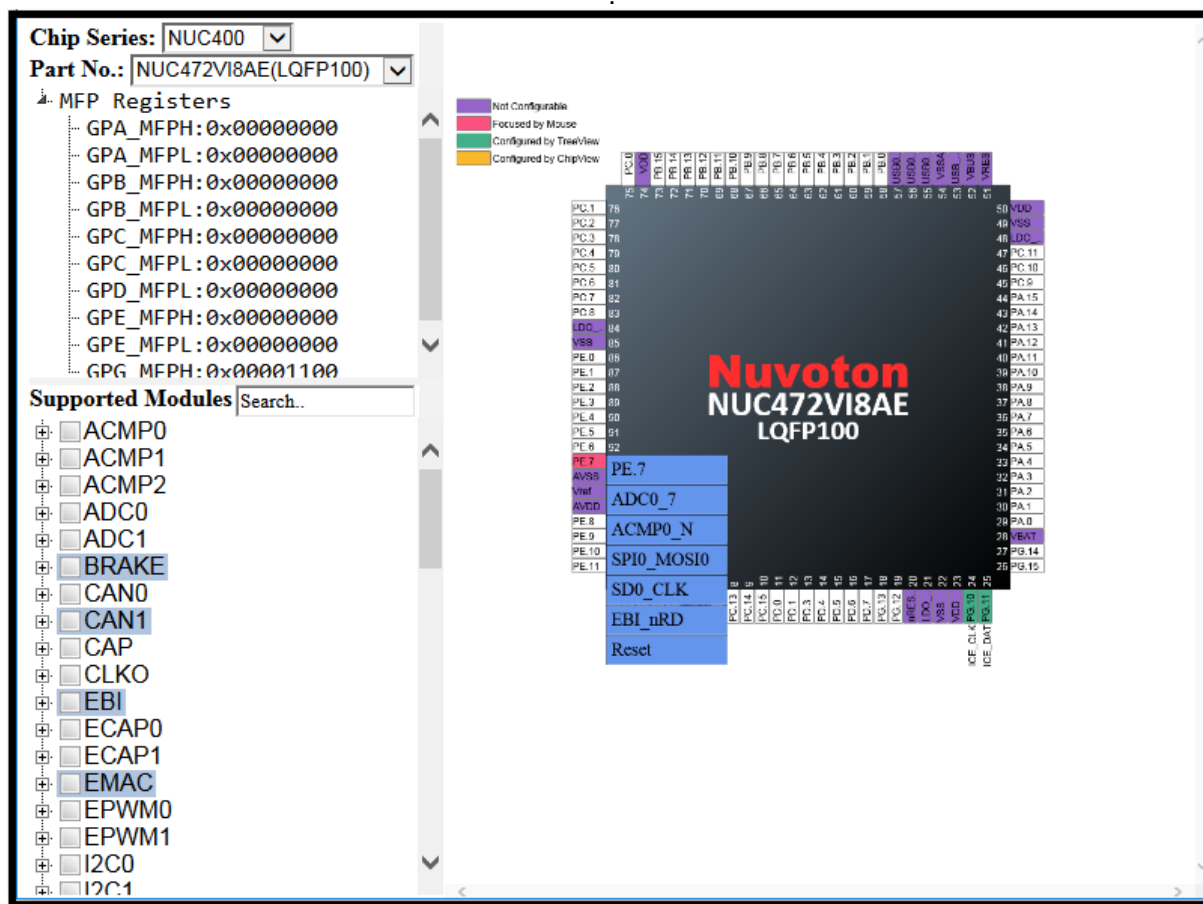


Figure 3-11 List of All the Related GPIO Multi-functions

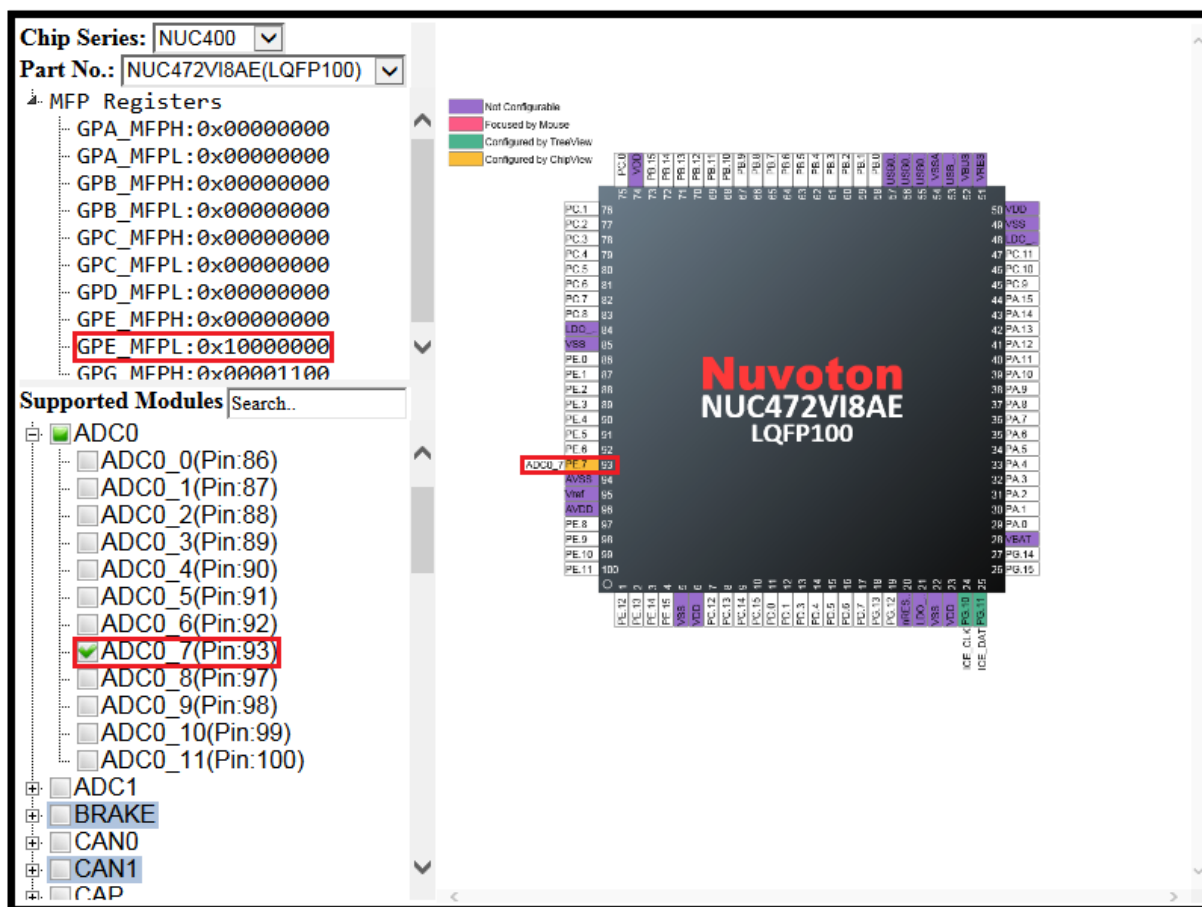


Figure 3-12 Results of Configuring ADC0_7 by the Individual Pin

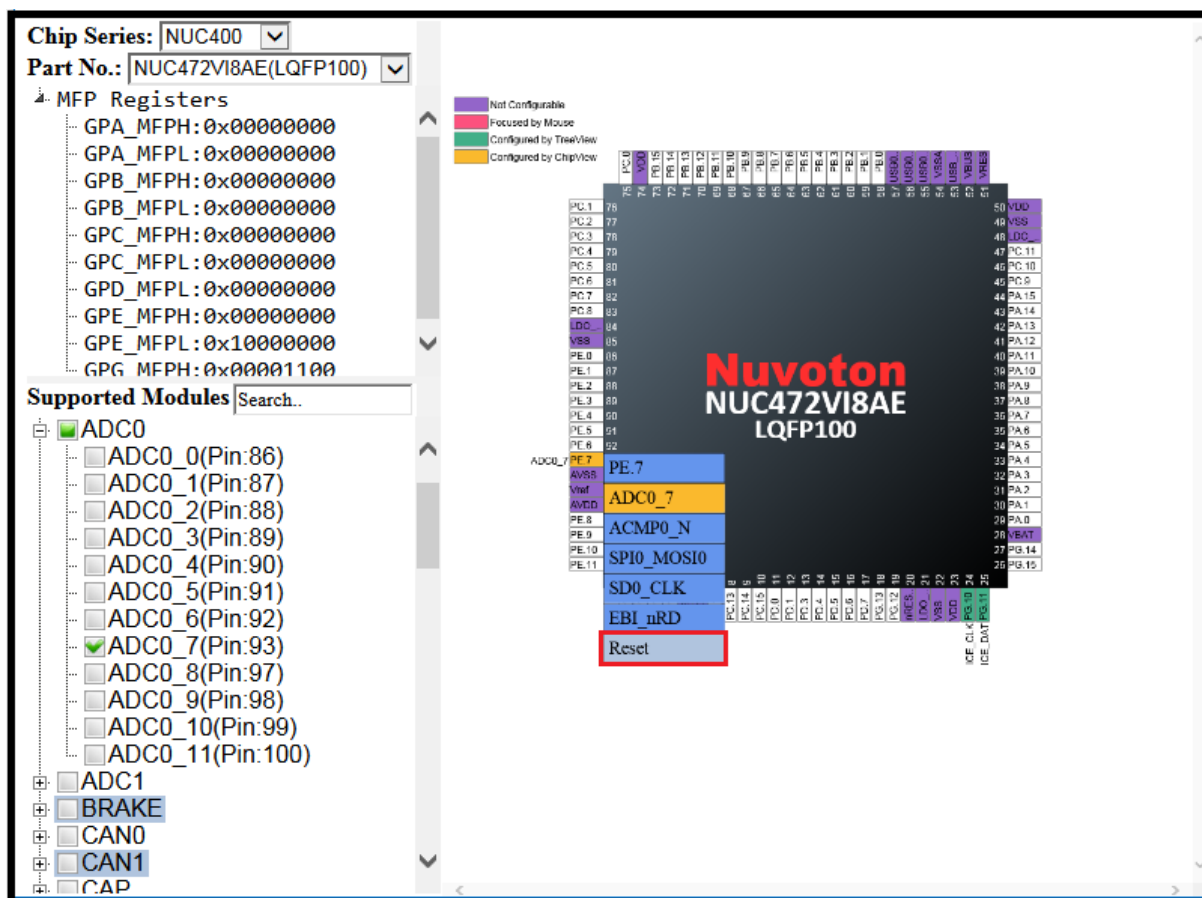


Figure 3-13 Disabling the Configured Pin

4 Toolbar


4.1 Switch Select Field and MFP-Registers TreeView

To show the select field and the MFP Registers TreeView, click the **Switch Select Field and**

MFP-Registers TreeView  button on the toolbar.


4.2 Load Configuration

The user can browse the previously saved configuration files (*.cfg) and select one of them to restore the configured MCU chip.


To load the configuration, click the **Load Configuration**  button on the toolbar, select the directory preserving the expected configuration file and click the Open button.

4.3 Save Configuration

To save the current configuration, take the following steps:


1. Click the **Save Configuration**  button on the toolbar.
2. Browse a user-defined location and give a proper name to the configuration file (*.cfg).
3. Click the Save button. The current configuration will be saved as a .cfg file with a given name. The configuration file can be used to restore the configured MCU chip in the future.

4.4 Generate Code

To generate code to be included into the developing projects, click the **Generate Code**  button on the toolbar.

4.5 Connect to Target Chip


When debugging within NuEclipse, which is a GUI IDE and designed for cross-platform embedded ARM development, the user can connect to the target chip by clicking the **Connect to**

Target Chip  button on the toolbar. The connection is successfully made only when the target chip enters the debugging mode and halts. When connecting, the PinConfigure tool reflects the real-time GPIO multi-function configuration. To download NuEclipse, please refer to the Nuvoton website.

4.6 Print Report

To print a report, click the **Print Report**  button on the toolbar. After inputting the project name and selecting the expected criteria, click on the Confirm button to print the report.

4.9 Switch Pin Description

To show pin description, click the **Switch Pin Description**  button on the toolbar. The whole description will be expanded around the chip (referring to Figure 4-2).

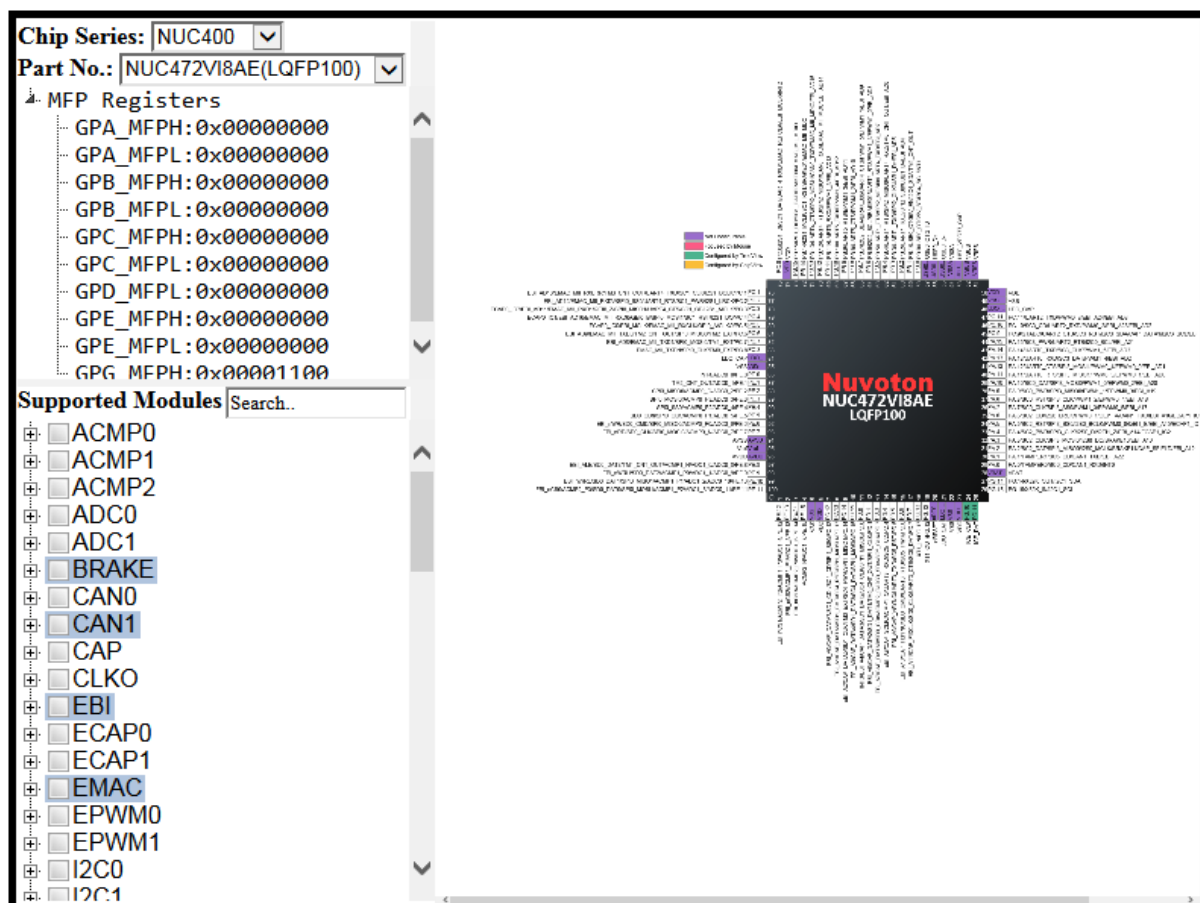




Figure 4-2 Pin Description Expanded around the Chip


4.10 Zoom In

To adjust the chip view to a larger one, click the **Zoom In**  button on the toolbar. Besides, the user can do the operation by scrolling the mouse wheel up and holding the Ctrl key on the keyboard simultaneously. To horizontally scroll the chip view, please scroll the mouse wheel and hold the Shift key on the keyboard simultaneously.

4.11 Best Fit

To adjust the chip view to fit the window, click the **Best Fit**  button on the toolbar.

4.12 Zoom Out

To adjust the chip view to smaller one, click the **Zoom Out**  button on the toolbar. Besides, the user can do the operation by scrolling the mouse wheel down and holding the Ctrl key on the keyboard simultaneously.

4.13 Disable All Checked Modules

To disable all checked modules, click the **Disable All Checked Modules**  button on the toolbar.

4.14 Settings

To select UI language, click the **Settings**  button on the toolbar. There are three languages supported in the application, including English, Simplified Chinese, and Traditional Chinese. Besides, if the user wants to display a tooltip, please choose "Yes". When generating code, the user can determine the criteria by which the configured information is being classified.

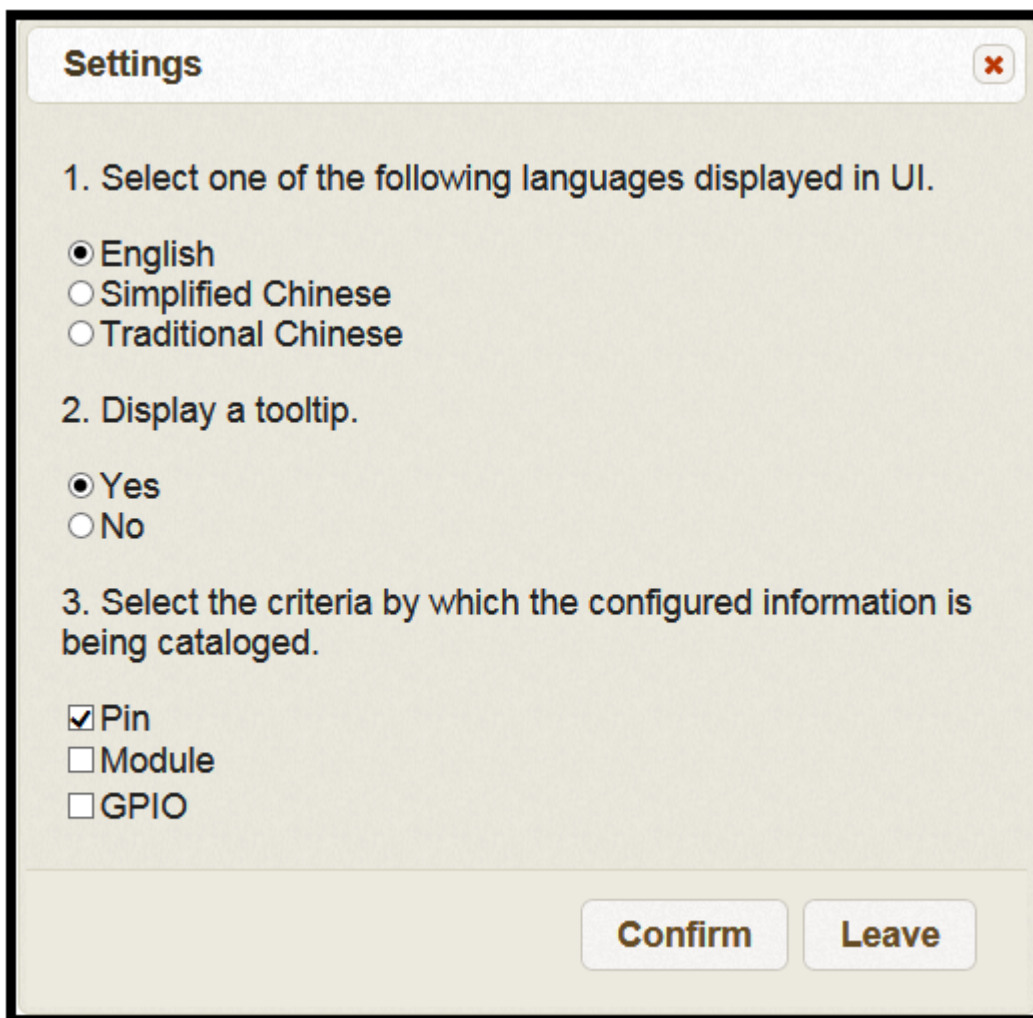


Figure 4-3 "Settings" Dialog Box

4.15 Read User Manual

To read this user manual, click the **Read User Manual**  button on the toolbar.

5 Revision History

Date	Revision	Description
2013.10.18	1.00	Initially released.
2013.11.08	1.01	<ol style="list-style-type: none"> 1. Supported IE9. 2. Supported Simplified Chinese and Traditional Chinese.
2014.01.03	1.02	<ol style="list-style-type: none"> 1. Supported IE10. 2. Improved performance and GUI. 3. Added the Search feature. 4. Added the Print Report feature.
2014.01.24	1.03	<ol style="list-style-type: none"> 1. Supported M451 series. 2. Enhanced stability.
2014.11.28	1.04	<ol style="list-style-type: none"> 1. Supported IE11. 2. Supported NUC100, NUC200, NUC505, NUC029, M051, M0518, Mini51, Nano100, NM1500, ISD9100 and ISD9300.
2015.07.01	1.05	<ol style="list-style-type: none"> 1. Supported Mini58 and M0519. 2. Added the Tooltip feature.
2015.11.01	1.06	<ol style="list-style-type: none"> 1. Added the NuCAD feature.
2015.12.01	1.07	<ol style="list-style-type: none"> 1. Added back the Generate Report of Pin Description feature.
2016.02.29	1.08	<ol style="list-style-type: none"> 1. Supported NANO103.
2016.07.22	1.09	<ol style="list-style-type: none"> 1. Added new part numbers. 2. NuCAD supported Protel.
2017.08.01	1.10	<ol style="list-style-type: none"> 1. Supported NUC121, NUC125, NUC126, M0564, and M480.
2017.10.20	1.11	<ol style="list-style-type: none"> 1. Supported the adjustment of conflicts.
2018.06.29	1.12	<ol style="list-style-type: none"> 1. Updated the content of M2351 and M480.
2018.07.29	1.13	<ol style="list-style-type: none"> 1. Supported Mini57, NDA102 and NM1120.
2018.12.28	1.14	<ol style="list-style-type: none"> 1. Supported NUC2201, M251, and ML51. 2. Updated NANO103.

2019.04.29	1.15	1. Supported NUC1261, M05641, M4521, NUC029xDE, NUC029xEE, NUC029xGE, MS51, M031 and M261.
2019.09.06	1.16	1. Supported MS51(8K/32K), M031(G/I/Keyboard/Mouse), M2353SIAAE and NUC1311. 2. Updated M480LD and NANO100BN.
2019.11.01	1.17	1. Supported NUC029ZAN. 2. Updated M031, M480 and MS51.
2020.01.31	1.18	1. Supported M031BT and M479.
2020.03.06	1.19	1. Supported ML56, M487KMCAN and NUC029MDE.
2020.04.30	1.20	1. Supported M0A21 and M030G. 2. Supported a new way of generating code..
2020.11.20	1.21	1. Supported M071, M253, M258, M471 and M2354.
2021.03.19	1.22	1. Supported NUC1262 and M030G.
2021.06.30	1.23	1. Supported M256D, M258G and KM1M7AF.

Notice: Using this software indicates your acceptance of the disclaimer hereunder:

THIS SOFTWARE IS FOR YOUR REFERENCE ONLY AND PROVIDED "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. YOUR USING THIS SOFTWARE/FIRMWARE IS BASED ON YOUR OWN DISCRETION, IN NO EVENT SHALL THE COPYRIGHT OWNER OR PROVIDER BE LIABLE TO ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.