

NuMicro® Family**Arm® Cortex® -M0**

NuMaker-emWin-M032

User Manual

Evaluation Board for NuMicro® M031 Series

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

TABLE OF CONTENTS

1	Overview.....	7
1.1	Features	9
1.1.1	NuMaker-M032KI Main Board Features	9
1.1.2	NuTFT Extension Board Features	9
1.2	Supporting Resources	9
2	NuMaker-M032KI Hardware Configuration	10
2.1	Front View.....	10
2.2	Rear View	11
2.3	Extension Connectors.....	12
2.3.1	Arduino UNO Compatible Extension Connectors	12
2.3.2	Pin Assignment for Extension Connectors.....	14
2.4	Power Supply Configuration	19
2.4.1	VIN Power Source	19
2.4.2	5 V Power Sources	19
2.4.3	3.3 V Power Sources.....	20
2.4.4	1.8V Power Sources	20
2.4.5	Power Connectors	20
2.4.6	USB Connectors	20
2.4.7	Power Switches	21
2.4.8	Power Supply Models	21
2.5	External Reference Voltage Connector	25
2.6	Ammeter Connector	25
2.7	Push Buttons	25
2.8	LEDs	26
2.9	Nu-Link2-Me	26
2.9.1	VCOM Switches.....	26
2.9.2	Status LEDs	26
3	NuTFT Hardware Configuration	28
3.1	Front View.....	28
3.2	Rear View	29
3.3	Extension Connectors.....	30
3.4	Component Description	32
3.4.1	Arduino UNO Compatible Interface Connectors	32

3.4.2	Push Buttons	32
3.4.3	Five-Direction Joystick	32
3.4.4	TFT LCD Touch Panel	32
3.4.5	SPI Flash.....	32
4	NuMaker-emWin-M032 Quick Start	33
4.1	Toolchains Supporting	33
4.2	Nuvoton Nu-Link Driver Installation	33
4.3	BSP Firmware Download.....	35
4.4	Hardware Setup	35
4.5	Find the Example Project.....	37
4.6	Execute the Project under Toolchains.....	37
4.6.1	Keil MDK	37
4.6.2	IAR EWARM.....	41
4.6.3	NuEclipse	43
5	NuMaker-M032KI Schematics	49
5.1	Nu-Link2-Me	49
5.2	M032 platform	50
5.3	Extension Connector	51
5.4	PCB Placement	52
6	NuTFT Schematics	53
6.1	NuTFT	53
6.2	PCB Placement	54
7	REVISION HISTORY	55

List of Figures

Figure 1-1 NuMaker-emWin-M032 Evaluation Board	7
Figure 1-2 NuMaker-M032KI Main Board	8
Figure 1-3 NuTFT Extension Board	8
Figure 2-1 Front View of NuMaker-M032KI	10
Figure 2-2 Rear View of NuMaker-M032KI.....	11
Figure 2-3 Arduino UNO Compatible Extension Connectors.....	12
Figure 2-4 M032KIAAE Extension Connectors.....	14
Figure 2-5 External Power Supply Sources on Nu-Link2-Me	21
Figure 2-6 External Power Supply Sources on M032 platform.....	22
Figure 2-7 Separate the Nu-Link2-Me from NuMaker-M032KI.....	23
Figure 2-8 Wiring between Ammeter Connector and Ammeter.....	25
Figure 3-1 Front View of NuTFT	28
Figure 3-2 Rear View of NuTFT	29
Figure 3-3 NuTFT Extension Connectors	30
Figure 4-1 Nu-Link USB Driver Installation Setup.....	33
Figure 4-2 Nu-Link USB Driver Installation	34
Figure 4-3 Open VCOM Function	35
Figure 4-4 ICE USB Connector	35
Figure 4-5 Device Manger.....	36
Figure 4-6 PuTTY Session Setting.....	36
Figure 4-7 Template Project Folder Path	37
Figure 4-8 Warning Message of “Device not found”	37
Figure 4-9 Project File Migrate to Version 5 Format.....	38
Figure 4-10 Debugger Setting in Options Window.....	38
Figure 4-11 Programming Setting in Options Window.....	39
Figure 4-12 Compile and Download the Project	39
Figure 4-13 Keil MDK Debug Mode	40
Figure 4-14 emWin_SimpleDemo Display	40
Figure 4-15 IAR EWARM Window	41
Figure 4-16 Compile and Download the Project	41
Figure 4-17 IAR EWARM Debug Mode	42
Figure 4-18 emWin_SimpleDemo Display	42
Figure 4-19 Import the Project in NuEclipse	43
Figure 4-20 Import Projects Windows	43
Figure 4-21 Open Project Properties Window	44
Figure 4-22 Project Properties Settings	44

Figure 4-23 Build Project.....	45
Figure 4-24 Open Debug Configuration.....	45
Figure 4-25 Main Tab Configuration	46
Figure 4-26 Debugger Tab Configuration	46
Figure 4-27 Startup Tab Configuration	47
Figure 4-28 NuEclipse Debug Mode	48
Figure 4-29 emWin_SimpleDemo Display	48
Figure 5-1 Nu-Link2-Me Circuit	49
Figure 5-2 M032 platform Circuit.....	50
Figure 5-3 Extension Connectors Circuit	51
Figure 5-4 Front Placement	52
Figure 5-5 Rear Placement	52
Figure 6-1 NuTFT	53
Figure 6-2 Front Placement	54
Figure 6-3 Rear Placement	54

List of Tables

Table 2-1 Extension Connectors.....	12
Table 2-2 Arduino UNO Extension Connectors and M032KIAAE Mapping GPIO List.....	13
Table 2-3 M032KIAAE Full-pin Extension Connectors and GPIO Function List	18
Table 2-4 Vin Power Source	19
Table 2-5 5V Power Sources	19
Table 2-6 3.3 V Power Sources	20
Table 2-7 1.8V Power Sources	20
Table 2-8 Power Connectors	20
Table 2-9 USB Connectors	20
Table 2-10 Power Switches	21
Table 2-11 Supply External Power through Nu-Link2-Me	22
Table 2-12 Supply External Power for M032 platform	24
Table 2-13 External Reference Voltage Connector	25
Table 2-14 Ammeter Connector.....	25
Table 2-15 Push Buttons.....	25
Table 2-16 LEDs	26
Table 2-17 VCOM Function of Nu-Link2-Me.....	26
Table 2-18 VCOM Function of Nu-Link2-Me.....	26
Table 2-19 Operation Status LED Patterns	27
Table 3-1 Arduino UNO Extension Connectors and NuTFT Mapping GPIO List	31
Table 3-2 Arduino UNO Compatible Interface Connectors.....	32
Table 3-3 Push Buttons.....	32
Table 3-4 Five-Direction Joystick	32
Table 3-5 TFT LCD Touch Panel.....	32
Table 3-6 SPI Flash	32

1 OVERVIEW

The NuMaker-emWin-M032 is an evaluation board for GUI application development on emWin library. The NuMaker-emWin-M032 consists of two parts: a NuMaker-M032KI main board and a NuTFT extension board. The NuMaker-emWin-M032 is designed for project evaluation, prototype development and validation with power consumption monitoring function.

The NuMaker-M032KI consists of two parts: an M032KI target board and an on-board Nu-Link2-Me debugger and programmer. The M032KI target board is based on NuMicro M032KIAAE. For the development flexibility, the M032KI target board provides the extension connectors of M032KIAAE, the Arduino UNO compatible headers and the capability of adopting multiple power supplies. Furthermore, the Nuvoton-designed ammeter connector can measure the power consumption instantly, which is essential for the prototype evaluation.

In addition, there is an attached on-board debugger and programmer “Nu-Link2-Me”. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming via SWD interface. The Nu-Link2-Me supports virtual COM (VCOM) port for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the evaluation board and become a stand-alone mass production programmer.

The NuTFT can be plugged into the main board via the Arduino UNO extension connector. The NuTFT is equipped with one SPI Flash, one ILI9341 2.4” SPI TFT LCD touch panel, one five-direction joystick and two push buttons.

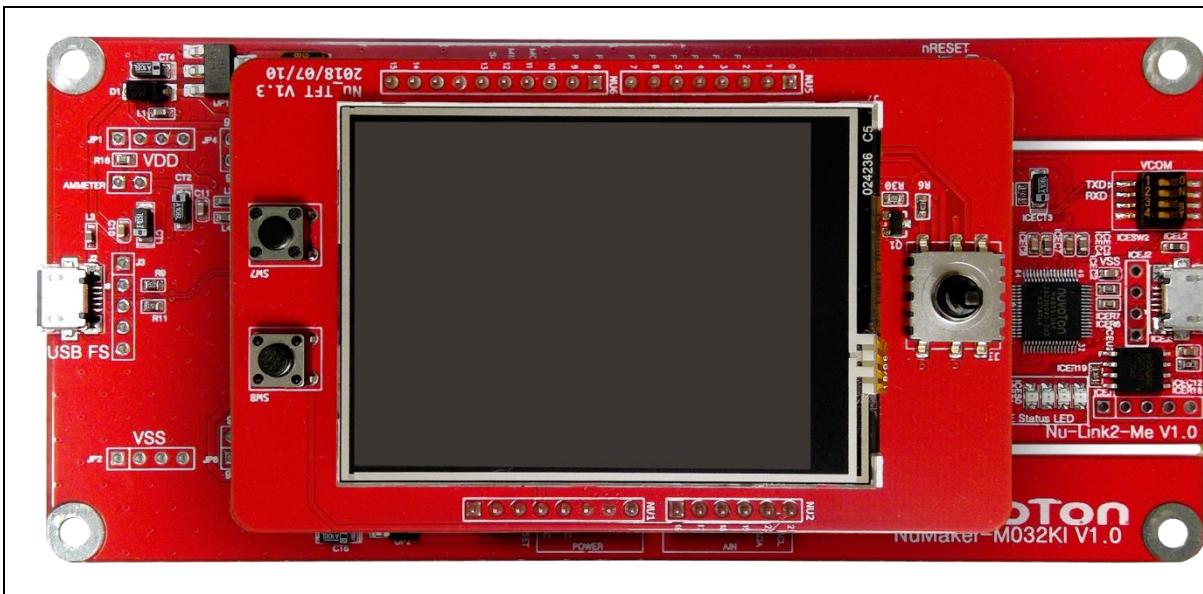


Figure 1-1 NuMaker-emWin-M032 Evaluation Board

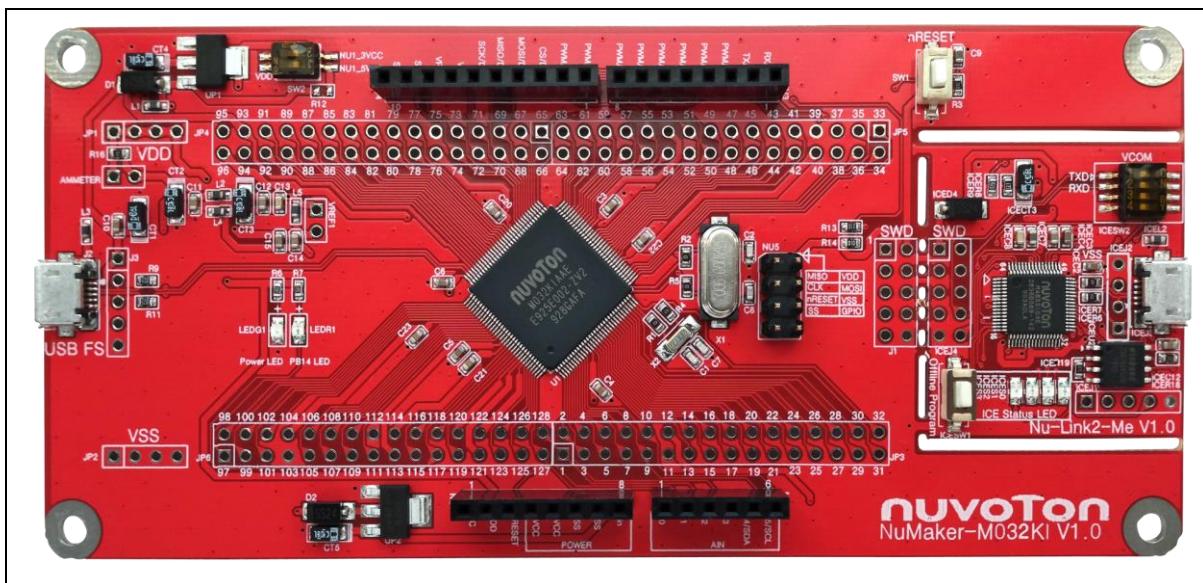


Figure 1-2 NuMaker-M032KI Main Board

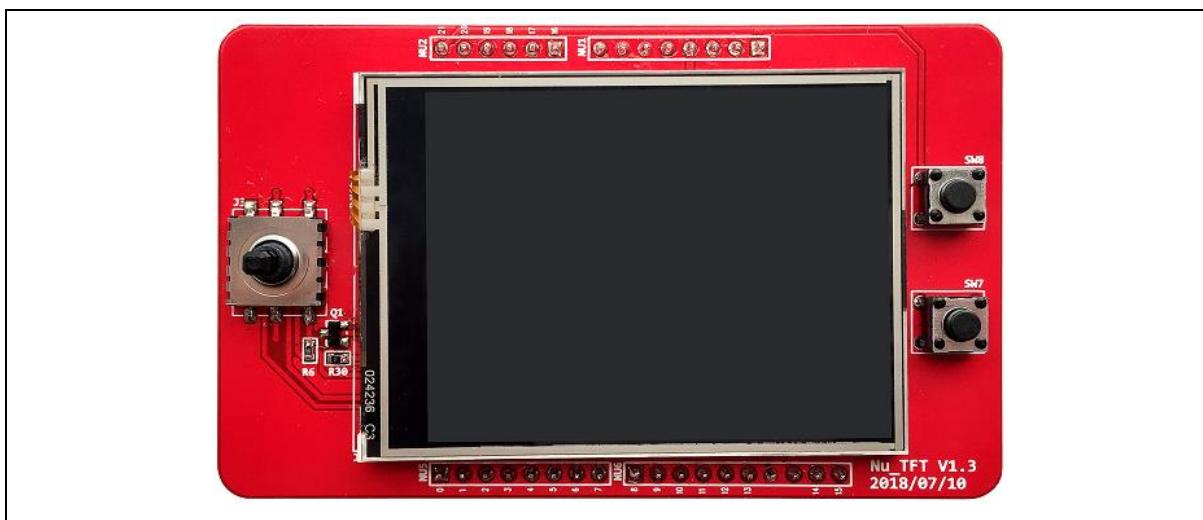


Figure 1-3 NuTFT Extension Board

1.1 Features

1.1.1 NuMaker-M032KI Main Board Features

- NuMicro M032KIAAE with function downward compatible with:
 - ◆ M032KIAAE
 - ◆ M032SIAAE
- M032KIAAE full pins extension connectors
- Arduino UNO compatible extension connectors
- Ammeter connector for measuring the microcontroller's power consumption
- Fixable board power supply:
 - ◆ External V_{DD} power connector
 - ◆ Arduino UNO compatible extension connector Vin
 - ◆ USB FS connector on M032KI target board
 - ◆ ICE USB connector on Nu-Link2-Me
- On-board Nu-Link2-Me debugger and programmer:
 - ◆ Debug through SWD interface
 - ◆ On-line/off-line programming
 - ◆ Virtual COM port function

1.1.2 NuTFT Extension Board Features

- 16 Mbits (2 MB) SPI Flash (W25Q16CV)
- ILI9341 2.4" (320x240) SPI TFT LCD Panel with 4-Wire ADC Touch Function
- Five-direction Joystick
- Two Push Buttons
- Arduino UNO Compatible Extension Connectors

1.2 Supporting Resources

For sample codes and introduction about emWin library, please refer to M031 BSP:
https://www.nuvoton.com/resource-download.jsp?tp_GUID=SW1820200914190828

Visit NuForum for further discussion about the NuMaker-emWin-M032:
<http://forum.nuvoton.com/viewforum.php?f=31>

Segger provides an emWin supporting forum. Questions regarding emWin usage are discussed at:
<https://forum.segger.com/index.php/Board/12-emWin-related/>

2 NUMAKER-M032KI HARDWARE CONFIGURATION

2.1 Front View

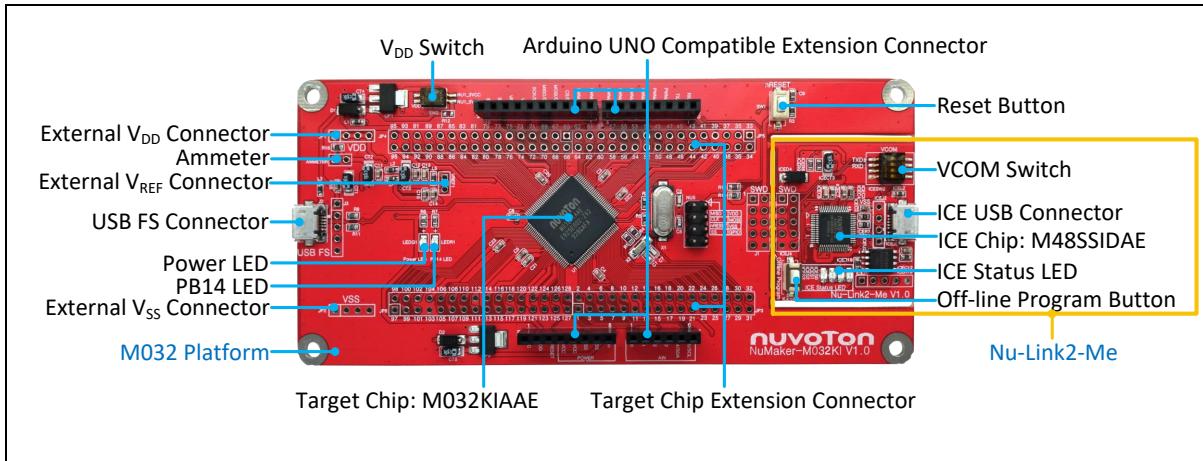


Figure 2-1 Front View of NuMaker-M032KI

Figure 2-1 shows the main components and connectors from the front side of NuMaker-M032KI. The following lists components and connectors from the front view:

- Target Chip: M032KIAAE(U1)
- USB FS Connector(J2)
- Arduino UNO Compatible Extension Connectors (NU1, NU2, NU3, NU4)
- M032 Extension Connectors (JP3, JP4, JP5 and JP6)
- External V_{DD} Power Connector(JP1)
- External V_{ss} Power Connector(JP2)
- External V_{REF} Connector(VREF1)
- VDD Switch(SW2)
- Ammeter Connector(AMMETER)
- Reset Button(SW1)
- Power LED and PB14 LED(LEDG1 and LEDR1)
- Nu-Link2-Me
 - ◆ VCOM Switch
 - ◆ ICE Chip: M48SSIDAE(ICEU2)
 - ◆ ICE USB Connector(ICEJ3)
 - ◆ ICE Status LED(ICES0,ICES1, ICES2, ICES3)
 - ◆ Off-line Program Button(ICESW1)

2.2 Rear View

Figure 2-2 shows the main components and connectors from the rear side of NuMaker-M032KI.

The following lists components and connectors from the rear view:

- Nu-Link2-Me
 - ◆ MCUVCC Power Switch (ICEJPR1)
 - ◆ ICEVCC Power Switch (ICEJPR2)

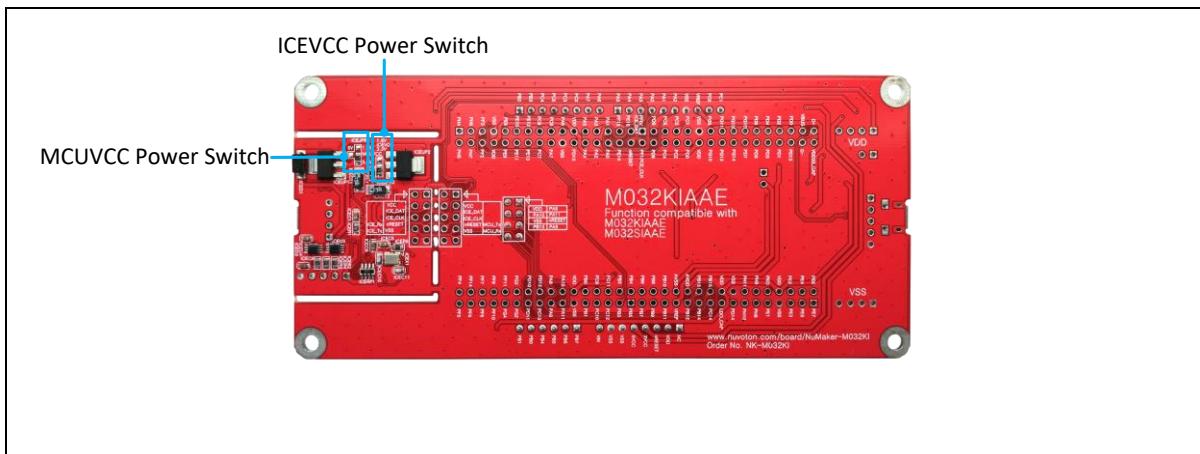


Figure 2-2 Rear View of NuMaker-M032KI

2.3 Extension Connectors

Table 2-1 presents the extension connectors.

Connector	Comment
JP3, JP4, JP5 and JP6	Full pins extension connectors on the NuMaker-M032KI.
NU1, NU2, NU3 and NU4	Arduino UNO compatible pins on the NuMaker-M032KI.

Table 2-1 Extension Connectors

2.3.1 Arduino UNO Compatible Extension Connectors

Figure 2-3 shows the Arduino UNO compatible extension connectors.

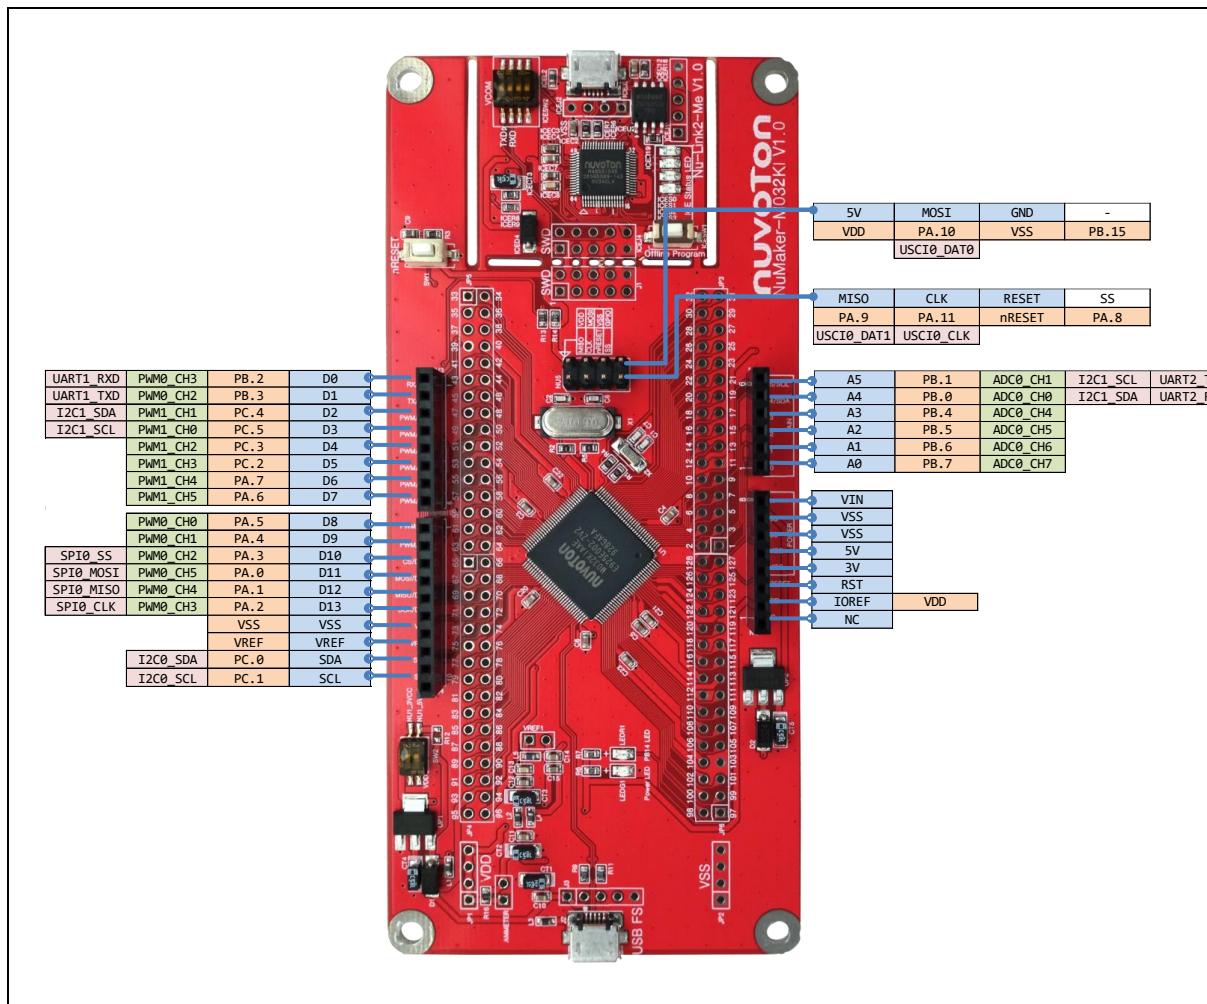


Figure 2-3 Arduino UNO Compatible Extension Connectors

Header		NuMaker-M032KI		Header		NuMaker-M032KI	
		Compatible to Arduino UNO	GPIO Pin of M032			Compatible to Arduino UNO	GPIO Pin of M032
N U 4	NU3.1	D0	PB.2	N U 2	NU2.6	A5	PB.1
	NU3.2	D1	PB.3		NU2.5	A4	PB.0
	NU3.3	D2	PC.4		NU2.4	A3	PB.4
	NU3.4	D3	PC.5		NU2.3	A2	PB.5
	NU3.5	D4	PC.3		NU2.2	A1	PB.6
	NU3.6	D5	PC.2		NU2.1	A0	PB.7
	NU3.7	D6	PA.7		NU1.8	VIN	-
	NU3.8	D7	PA.6		NU1.7	VSS	
	NU4.1	D8	PA.5		NU1.6	VSS	
N U 3	NU4.2	D9	PA.4		NU1.5	5V	
	NU4.3	D10	PA.3		NU1.4	3V	
	NU4.4	D11	PA.0		NU1.3	RST	nRESET
	NU4.5	D12	PA.1		NU1.2	IOREF	V _{REF}
	NU4.6	D13	PA.2		NU1.1	NC	-
	NU4.7	VSS	V _{SS}				
	NU4.8	VREF	V _{REF}				
	NU4.9	SDA	PC.0				
	NU4.10	SCL	PC.1				

Table 2-2 Arduino UNO Extension Connectors and M032KIAAE Mapping GPIO List

2.3.2 Pin Assignment for Extension Connectors

The NuMaker-M032KI provides the M032KIAAE target chip onboard and full pins extension connectors (JP3, JP4, JP5 and JP6). The Figure 2-4 shows the M032KIAAE extension connectors.

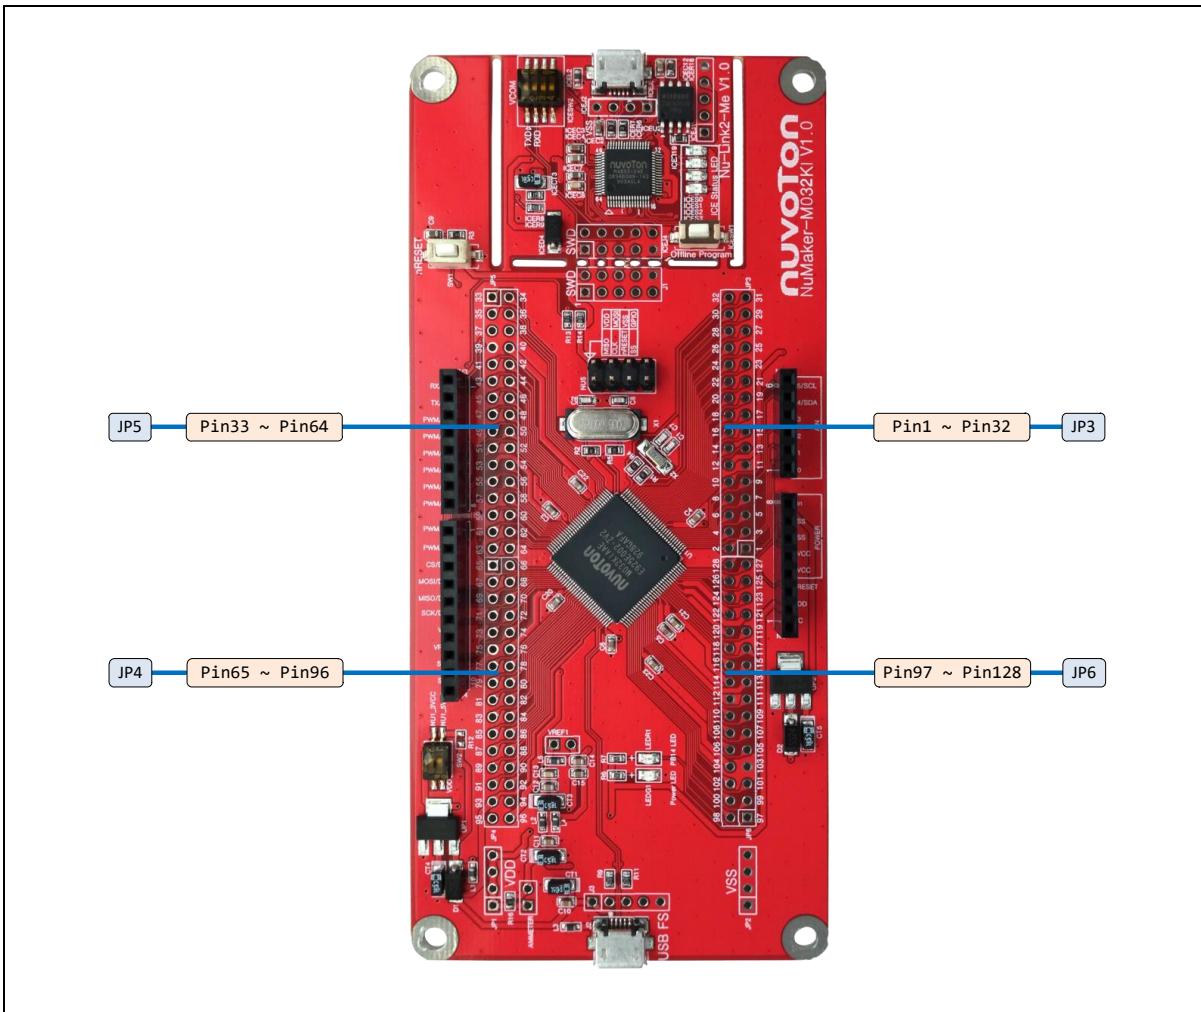


Figure 2-4 M032KIAAE Extension Connectors

Header	M032KIAAE	
	Pin No.	Function
JP3	JP3.1	1 PB.5/ADC0_CH5/ACMP1_N/EBI_ADR0/I2C0_SCL/UART5_TXD/USCI1_CTL0/PWM0_CH0/UART2_TXD/TM0/INT0
	JP3.2	2 PB.4/ADC0_CH4/ACMP1_P1/EBI_ADR1/I2C0_SDA/UART5_RXD/USCI1_CTL1/PWM0_CH1/UART2_RXD/TM1/INT1
	JP3.3	3 PB.3/ADC0_CH3/ACMP0_N/EBI_ADR2/I2C1_SCL/UART1_TXD/UART5_nRTS/USCI1_DAT1/PWM0_CH2/PWM0_BRAKE0/TM2/INT2
	JP3.4	4 PB.2/ADC0_CH2/ACMP0_P1/EBI_ADR3/I2C1_SDA/UART1_RXD/UART5_nCTS/USCI1_DAT0/PWM0_CH3/TM3/INT3
	JP3.5	5 PC.12/EBI_ADR4/UART0_TXD/I2C0_SCL/UART6_TXD/PWM1_CH0/ACMP0_O
	JP3.6	6 PC.11/EBI_ADR5/UART0_RXD/I2C0_SDA/UART6_RXD/PWM1_CH1/ACMP1_O
	JP3.7	7 PC.10/EBI_ADR6/UART6_nRTS/UART3_TXD/PWM1_CH2
	JP3.8	8 PC.9/EBI_ADR7/UART6_nCTS/UART3_RXD/PWM1_CH3
	JP3.9	9 PB.1/ADC0_CH1/EBI_ADR8/UART2_TXD/USCI1_CLK/I2C1_SCL/QSPI0_MISO1/PWM0_CH4/PWM1_CH4/PWM0_BRAKE0
	JP3.10	10 PB.0/ADC0_CH0/EBI_ADR9/UART2_RXD/SPI0_I2SMCLK/I2C1_SDA/QSPI0_MOSI1/PWM0_CH5/PWM1_CH5/PWM0_BRAKE1
	JP3.11	11 VSS
	JP3.12	12 VDD
	JP3.13	13 PA.11/ACMP0_P0/EBI_nRD/USCI0_CLK/UART6_TXD/BPWM0_CH0/TM0_EXT
	JP3.14	14 PA.10/ACMP1_P0/EBI_nWR/USCI0_DAT0/UART6_RXD/BPWM0_CH1/TM1_EXT
	JP3.15	15 PA.9/EBI_MCLK/USCI0_DAT1/UART1_TXD/UART7_TXD/BPWM0_CH2/TM2_EXT
	JP3.16	16 PA.8/EBI_ALE/USCI0_CTL1/UART1_RXD/UART7_RXD/BPWM0_CH3/TM3_EXT/INT4
	JP3.17	17 PC.13/EBI_ADR10/USCI0_CTL0/UART2_TXD/BPWM0_CH4/CLKO/ADC0_ST
	JP3.18	18 PD.12/EBI_nCS0/UART2_RXD/BPWM0_CH5/CLKO/ADC0_ST/INT5
	JP3.19	19 PD.11/EBI_nCS1/UART1_TXD
	JP3.20	20 PD.10/UART1_RXD
	JP3.21	21 PG.2/EBI_ADR11/I2C0_SMBAL/I2C1_SCL/TM0
	JP3.22	22 PG.3/EBI_ADR12/I2C0_SMSBUS/I2C1_SDA/TM1
	JP3.23	23 PG.4/EBI_ADR13/TM2
	JP3.24	24 PF.11/EBI_ADR14/UART5_TXD/TM3
	JP3.25	25 PF.10/EBI_ADR15/SPI0_I2SMCLK/UART5_RXD
	JP3.26	26 PF.9/EBI_ADR16/SPI0_SS/UART5_nRTS
	JP3.27	27 PF.8/EBI_ADR17/SPI0_CLK/UART5_nCTS
	JP3.28	28 PF.7/EBI_ADR18/SPI0_MISO/UART4_TXD
	JP3.29	29 PF.6/EBI_ADR19/SPI0_MOSI/UART4_RXD/EBI_nCS0
	JP3.30	30 PF.14/PWM1_BRAKE0/PWM0_BRAKE0/PWM0_CH4/CLKO/TM3/INT5
	JP3.31	31 PF.5/UART2_RXD/UART2_nCTS/PWM0_CH0/BPWM0_CH4/X32_IN/ADC0_ST
	JP3.32	32 PF.4/UART2_TXD/UART2_nRTS/PWM0_CH1/BPWM0_CH5/X32_OUT
JP5	JP5.1	33 PH.4/EBI_ADR3/UART7_nRTS/UART6_TXD

Header	M032KIAAE	
	Pin No.	Function
JP5.2	34	PH.5/EBI_ADR2/UART7_nCTS/UART6_RXD
	35	PH.6/EBI_ADR1/UART7_TXD
	36	PH.7/EBI_ADR0/UART7_RXD
	37	PF.3/EBI_nCS0/UART0_TXD/I2C0_SCL/XT1_IN/BPWM1_CH0
	38	PF.2/EBI_nCS1/UART0_RXD/I2C0_SDA/QSPI0_CLK/XT1_OUT/BPWM1_CH1
	39	VSS
	40	VDD
	41	PE.8/EBI_ADR10/USCI1_CTL1/UART2_TXD/PWM0_CH0/PWM0_BRAKE0
	42	PE.9/EBI_ADR11/USCI1_CTL0/UART2_RXD/PWM0_CH1/PWM0_BRAKE1
	43	PE.10/EBI_ADR12/USCI1_DAT0/UART3_TXD/PWM0_CH2/PWM1_BRAKE0
	44	PE.11/EBI_ADR13/USCI1_DAT1/UART3_RXD/UART1_nCTS/PWM0_CH3/PWM1_BRAKE1
	45	PE.12/EBI_ADR14/USCI1_CLK/UART1_nRTS/PWM0_CH4
	46	PE.13/EBI_ADR15/I2C0_SCL/UART4_nRTS/UART1_TXD/PWM0_CH5/PWM1_CH0/BPWM1_CH5
	47	PC.8/EBI_ADR16/I2C0_SDA/UART4_nCTS/UART1_RXD/PWM1_CH1/BPWM1_CH4
	48	PC.7/EBI_AD9/UART4_TXD/UART0_nCTS/UART6_TXD/PWM1_CH2/BPWM1_CH0/TM0/INT3
	49	PC.6/EBI_AD8/UART4_RXD/UART0_nRTS/UART6_RXD/PWM1_CH3/BPWM1_CH1/TM1/INT2
	50	PA.7/EBI_AD7/UART0_RXD/I2C1_SCL/PWM1_CH4/BPWM1_CH2/ACMP0_WLAT/TM2/INT1
	51	PA.6/EBI_AD6/UART0_RXD/I2C1_SDA/PWM1_CH5/BPWM1_CH3/ACMP1_WLAT/TM3/INT0
	52	VSS
	53	VDD
	54	PD.15/PWM0_CH5/TM3/INT1
	55	PA.5/QSPI0_MISO1/UART0_nCTS/UART0_TXD/I2C0_SCL/UART5_TXD/BPWM0_CH5/PWM0_C_H0
	56	PA.4/QSPI0_MOSI1/SPI0_I2SMCLK/UART0_nRTS/UART0_RXD/I2C0_SDA/UART5_RXD/BPWM0_CH4/PWM0_CH1
	57	PA.3/QSPI0_SS/SPI0_SS/UART4_TXD/I2C0_SMBAL/UART1_TXD/I2C1_SCL/BPWM0_CH3/PWM0_CH2/CLK0/PWM1_BRAKE1
	58	PA.2/QSPI0_CLK/SPI0_CLK/UART4_RXD/I2C0_SMBSUS/UART1_RXD/I2C1_SDA/BPWM0_CH2/PWM0_CH3
	59	PA.1/QSPI0_MISO0/SPI0_MISO/UART0_RXD/UART1_nCTS/BPWM0_CH1/PWM0_CH4
	60	PA.0/QSPI0_MOSI0/SPI0_MOSI/UART0_RXD/UART1_nRTS/BPWM0_CH0/PWM0_CH5
	61	PF.15/PWM0_BRAKE0/PWM0_CH1/TM2/CLK0/INT4
	62	PE.14/EBI_AD8/UART2_TXD/UART6_RXD
	63	PE.15/EBI_AD9/UART2_RXD/UART6_RXD
	64	nRESET
JP4	65	PF.0/UART1_RXD/I2C1_SCL/UART0_RXD/BPWM1_CH0/ICE_DAT
	66	PF.1/UART1_RXD/I2C1_SDA/UART0_RXD/BPWM1_CH1/ICE_CLK
	67	PD.9/EBI_AD7/UART2_nCTS/UART7_RXD

Header	M032KIAAE	
	Pin No.	Function
JP4	JP4.4	68 PD.8/EBI_AD6/UART2_nRTS/UART7_RXD
	JP4.5	69 PC.5/EBI_AD5/QSPI0_MISO1/UART2_TXD/I2C1_SCL/UART4_TXD/PWM1_CH0
	JP4.6	70 PC.4/EBI_AD4/QSPI0_MOSI1/UART2_RXD/I2C1_SDA/UART4_RXD/PWM1_CH1
	JP4.7	71 PC.3/EBI_AD3/QSPI0_SS/UART2_nRTS/I2C0_SMBAL/UART3_TXD/PWM1_CH2
	JP4.8	72 PC.2/EBI_AD2/QSPI0_CLK/UART2_nCTS/I2C0_SMBSUS/UART3_RXD/PWM1_CH3
	JP4.9	73 PC.1/EBI_AD1/QSPI0_MISO0/UART2_TXD/I2C0_SCL/PWM1_CH4/ACMP0_O/ADC0_ST
	JP4.10	74 PC.0/EBI_AD0/QSPI0_MOSI0/UART2_RXD/I2C0_SDA/PWM1_CH5/ACMP1_O
	JP4.11	75 VSS
	JP4.12	76 VDD
	JP4.13	77 PG.9/EBI_AD0/BPWM0_CH5
	JP4.14	78 PG.10/EBI_AD1/BPWM0_CH4
	JP4.15	79 PG.11/EBI_AD2/UART7_TXD/BPWM0_CH3
	JP4.16	80 PG.12/EBI_AD3/UART7_RXD/BPWM0_CH2
	JP4.17	81 PG.13/EBI_AD4/UART6_TXD/BPWM0_CH1
	JP4.18	82 PG.14/EBI_AD5/UART6_RXD/BPWM0_CH0
	JP4.19	83 PG.15/CLK0/ADC0_ST
	JP4.20	84 PD.7/UART1_TXD/I2C0_SCL/USCI1_CLK
	JP4.21	85 PD.6/UART1_RXD/I2C0_SDA/USCI1_DAT1
	JP4.22	86 PD.5/I2C1_SCL/USCI1_DAT0
	JP4.23	87 PD.4/USCI0_CTL0/I2C1_SDA/USCI1_CTL1
	JP4.24	88 PD.3/EBI_AD10/USCI0_CTL1/SPI0_SS/UART3_nRTS/USCI1_CTL0/UART0_TXD
	JP4.25	89 PD.2/EBI_AD11/USCI0_DAT1/SPI0_CLK/UART3_nCTS/UART0_RXD
	JP4.26	90 PD.1/EBI_AD12/USCI0_DAT0/SPI0_MISO/UART3_RXD
	JP4.27	91 PD.0/EBI_AD13/USCI0_CLK/SPI0_MOSI/UART3_RXD/TM2
	JP4.28	92 PD.13/EBI_AD10/SPI0_I2SMCLK
	JP4.29	93 PA.12/UART4_TXD/I2C1_SCL/BPWM1_CH2
	JP4.30	94 PA.13/UART4_RXD/I2C1_SDA/BPWM1_CH3
	JP4.31	95 PA.14/UART0_TXD/BPWM1_CH4
	JP4.32	96 PA.15/UART0_RXD/BPWM1_CH5
JP6	JP6.1	97 PE.7/UART5_TXD/PWM0_CH0/BPWM0_CH5
	JP6.2	98 PE.6/USCI0_CTL0/UART5_RXD/PWM0_CH1/BPWM0_CH4
	JP6.3	99 PE.5/EBI_nRD/USCI0_CTL1/UART6_TXD/UART7_nRTS/PWM0_CH2/BPWM0_CH3
	JP6.4	100 PE.4/EBI_nWR/USCI0_DAT1/UART6_RXD/UART7_nCTS/PWM0_CH3/BPWM0_CH2
	JP6.5	101 PE.3/EBI_MCLK/USCI0_DAT0/UART6_nRTS/UART7_TXD/PWM0_CH4/BPWM0_CH1
	JP6.6	102 PE.2/EBI_ALE/USCI0_CLK/UART6_nCTS/UART7_RXD/PWM0_CH5/BPWM0_CH0

Header	M032KIAAE	
	Pin No.	Function
JP6.7	103	VSS
JP6.8	104	VDD
JP6.9	105	PE.1/EBI_AD10/QSPI0_MISO0/UART3_TXD/I2C1_SCL/UART4_nCTS
JP6.10	106	PE.0/EBI_AD11/QSPI0_MOSI0/UART3_RXD/I2C1_SDA/UART4_nRTS
JP6.11	107	PH.8/EBI_AD12/QSPI0_CLK/UART3_nRTS/UART1_TXD
JP6.12	108	PH.9/EBI_AD13/QSPI0_SS/UART3_nCTS/UART1_RXD
JP6.13	109	PH.10/EBI_AD14/QSPI0_MISO1/UART4_TXD/UART0_RXD
JP6.14	110	PH.11/EBI_AD15/QSPI0_MOSI1/UART4_RXD/UART0_RXD/PWM0_CH5
JP6.15	111	PD.14/EBI_nCS0/SPI0_I2SMCLK/USCI0_CTL0/PWM0_CH4
JP6.16	112	VSS
JP6.17	113	LDO_CAP
JP6.18	114	VDD
JP6.19	115	PC.14/EBI_AD11/SPI0_I2SMCLK/USCI0_CTL0/QSPI0_CLK/TM1
JP6.20	116	PB.15/ADC0_CH15/EBI_AD12/SPI0_SS/USCI0_CTL1/UART0_nCTS/UART3_TXD/PWM1_CH0/TM0_EXT/PWM0_BRAKE1
JP6.21	117	PB.14/ADC0_CH14/EBI_AD13/SPI0_CLK/USCI0_DAT1/UART0_nRTS/UART3_RXD/PWM1_CH1/TM1_EXT/CLKO
JP6.22	118	PB.13/ADC0_CH13/ACMP0_P3/ACMP1_P3/EBI_AD14/SPI0_MISO/USCI0_DAT0/UART0_TXD/UART3_nRTS/PWM1_CH2/TM2_EXT
JP6.23	119	PB.12/ADC0_CH12/ACMP0_P2/ACMP1_P2/EBI_AD15/SPI0_MOSI/USCI0_CLK/UART0_RXD/UART3_nCTS/PWM1_CH3/TM3_EXT
JP6.24	120	AVDD
JP6.25	121	VREF
JP6.26	122	AVSS
JP6.27	123	PB.11/ADC0_CH11/EBI_ADR16/UART0_nCTS/UART4_TXD/I2C1_SCL/SPI0_I2SMCLK/BPWM1_CH0
JP6.28	124	PB.10/ADC0_CH10/EBI_ADR17/USCI1_CTL0/UART0_nRTS/UART4_RXD/I2C1_SDA/BPWM1_CH1
JP6.29	125	PB.9/ADC0_CH9/EBI_ADR18/USCI1_CTL1/UART0_TXD/UART1_nCTS/UART7_TXD/BPWM1_CH2
JP6.30	126	PB.8/ADC0_CH8/EBI_ADR19/USCI1_CLK/UART0_RXD/UART1_nRTS/UART7_RXD/BPWM1_CH3
JP6.31	127	PB.7/ADC0_CH7/EBI_nWRL/USCI1_DAT0/UART1_TXD/EBI_nCS0/BPWM1_CH4/PWM1_BRAKE0/PWM1_CH4/INT5/ACMP0_O
JP6.32	128	PB.6/ADC0_CH6/EBI_nWRH/USCI1_DAT1/UART1_RXD/EBI_nCS1/BPWM1_CH5/PWM1_BRAKE1/PWM1_CH5/INT4/ACMP1_O

Table 2-3 M032KIAAE Full-pin Extension Connectors and GPIO Function List

2.4 Power Supply Configuration

The NuMaker-M032KI is able to adopt multiple power supplies. External power source includes NU1 Vin (7 V to 12 V), V_{DD} (depending on target chip operating voltage), and PC through USB connector. By using switches and voltage regulator, multiple power domains can be created on the NuMaker-M032KI.

2.4.1 VIN Power Source

Table 2-4 presents the Vin power source.

Connector	Net Name in Schematic	Comment
NU1 pin8	NU1_VIN	Board external power source, with voltage range from 7 V to 12 V. The voltage regulator UP2 converts the NU1 pin8 input voltage to 5 V and supplies it to NuMaker-M032KI.

Table 2-4 Vin Power Source

2.4.2 5 V Power Sources

Table 2-5 presents the 5 V power sources.

Connector	Net Name in Schematic	Comment
ICEJ3	USB_HS_VBUS	ICE USB connector supplies 5 V power from PC to M032 platform and Nu-Link2-Me.
J2	USB_VBUS	USB connector on NuMaker-M032KI supplies 5 V power from PC to M032 platform and Nu-Link2-Me.
NU1 pin5	NU1_5VCC	ICEJ3, J2 or NU1 pin8 supplies 5 V power to NU1 pin5. NU1 pin5 supplies 5 V power to target chip or Arduino adapter board. Note: M032 operating voltage range is from 1.8 V to 3.6 V. Do not switch SW2.1(NU1 5VCC) to ON.

Table 2-5 5V Power Sources

2.4.3 3.3 V Power Sources

Table 2-6 presents the 3.3 V power sources.

Voltage Regulator	5V Source	Comment
ICEUP1	USB_HS_VBUS	ICEUP1 converts USB_HS_VBUS to 3.3 V and supplies 3.3V to M032 platform or ICE chip.
UP1	USB_VBUS	UP1 converts USB_VBUS to 3.3 V and supplies 3.3 V to M032 platform. Note: SW2.2(NU1 3VCC) should be switched to ON.
UP1	NU1_5VCC	UP1 converts NU1_5VCC to 3.3 V and supplies 3.3 V to M032 platform. Note: SW2.2(NU1 3VCC) should be switched to ON.

Table 2-6 3.3 V Power Sources

2.4.4 1.8V Power Sources

Table 2-7 presents the 1.8 V power source.

Voltage Regular	5V Source	Comment
ICEUP2	USB_HS_VBUS	ICEUP2 converts USB_HS_VBUS to 1.8V and supplies 1.8V to M032 platform or ICE chip.

Table 2-7 1.8V Power Sources

2.4.5 Power Connectors

Table 2-8 presents the power connectors.

Connector	Comment
JP1	V _{DD} (1.8 V ~ 3.6 V) connector on the NuMaker-M032KI.
JP2	V _{SS} connector on the NuMaker-M032KI.

Table 2-8 Power Connectors

2.4.6 USB Connectors

Table 2-9 presents the USB connectors.

Connector	Comment
ICEJ3	ICE USB connector on Nu-Link2-Me for power supply, debugging and programming from PC.
J2	USB FS connector on NuMaker-M032KI for power supply.

Table 2-9 USB Connectors

2.4.7 Power Switches

Table 2-10 presents the power switches.

Switch	Comment
ICEJPR1	Configures the target chip operating voltage at 1.8 V / 3.3 V / 5 V.
ICEJPR2	Configures the ICE chip operating voltage at 1.8 V / 3.3 V.
SW2	Configures the target chip operating voltage at 3.3 V / 5 V.

Table 2-10 Power Switches

2.4.8 Power Supply Models

2.4.8.1 External Power Supply through Nu-Link2-Me to Target Chip

The external power supply source on Nu-Link2-Me is shown in Figure 2-5.

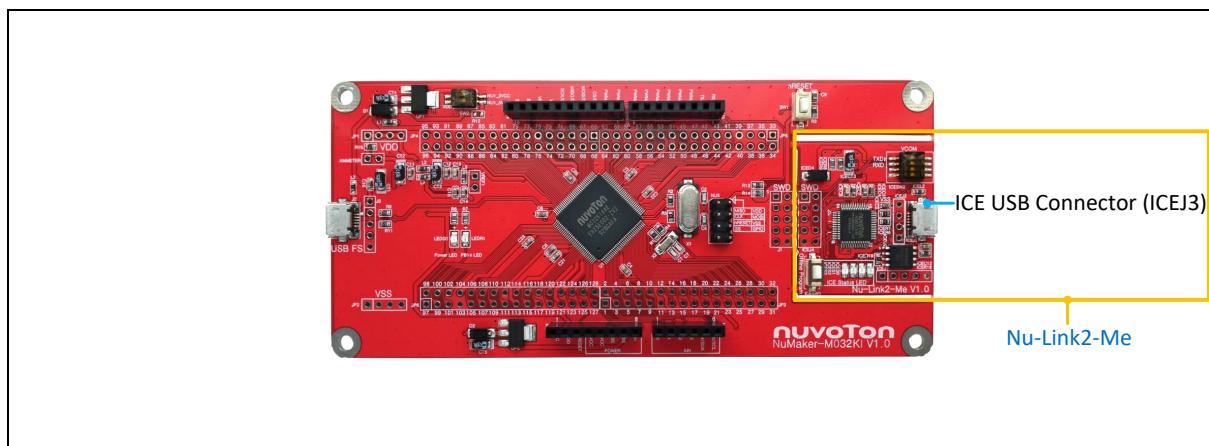


Figure 2-5 External Power Supply Sources on Nu-Link2-Me

To use ICEJ3 as external power supply source with Nu-Link2-Me, please follow the below steps:

1. Solder the resistor on ICEJPR1 (MCUVCC) depends on the target chip operating voltage.
2. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
3. Switch the SW2 to OFF.
4. Connect the external power supply to ICEJ3.

Table 2-11 presents all power models when supplies external power through Nu-Link2-Me. The Nu-Link2-Me external power sources are highlighted in yellow.

Model	Target Chip Voltage	ICEJ3	ICEJPR1 (MCUVCC) Selection ^[1]	ICEJPR2 (ICEVCC) Selection ^[2]	ICE Chip Voltage	SW2 Selection	J2	Vin	JP1
1	1.8 V	Connect to PC	1.8 V	1.8 V	1.8 V	Off	Ignore	Ignore	1.8 V output
2	3.3 V	Connect to PC	3.3 V (default)	3.3 V (default)	3.3 V	Off	Ignore	Ignore	3.3 V output
3	5 V	Connect to PC	5V	3.3 V (default)	3.3 V	Off	Ignore	Ignore	5 V output
X: Unused. Note: 1. 0 Ω should be soldered between ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V. 2. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.									

Table 2-11 Supply External Power through Nu-Link2-Me

2.4.8.2 External Power Supply through M032 platform to Target Chip

The external power supply sources on M032 platform are shown in Figure 2-6.

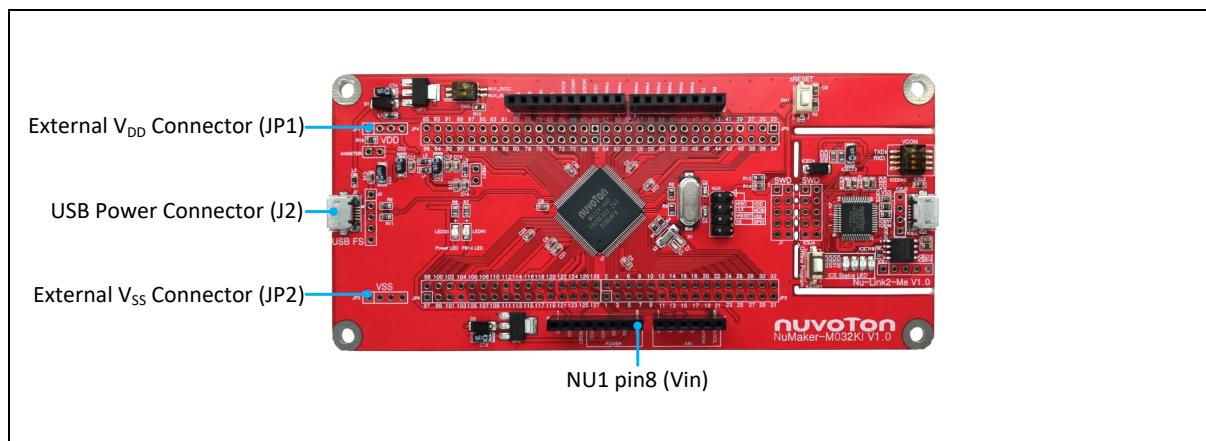


Figure 2-6 External Power Supply Sources on M032 platform

To use Vin or J2 as external power supply source, please follow the below steps:

1. Switch the SW2 depends on the target chip operating voltage.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
4. Connect the external power supply to Vin or J2.

To use JP1 as external power supply source, please follow the below steps:

1. Switch the SW2 to OFF.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
4. Connect ICEJ3 to PC.

5. Connect the external power supply to JP1.

To use Vin or J2 as external power supply source with Nu-Link2-Me separated from NuMaker-M032KI, please follow the below steps:

1. Switch the SW2 depends on the target chip operating voltage.
2. Separate the Nu-Link2-Me from NuMaker-M032KI.
3. Connect the external power supply to Vin or J2.

To use JP1 as external power supply source with Nu-Link2-Me separated from NuMaker-M032KI, please follow the below steps:

1. Switch the SW2 to OFF.
2. Separate the Nu-Link2-Me from NuMaker-M032KI.
3. Connect the external power supply to JP1.

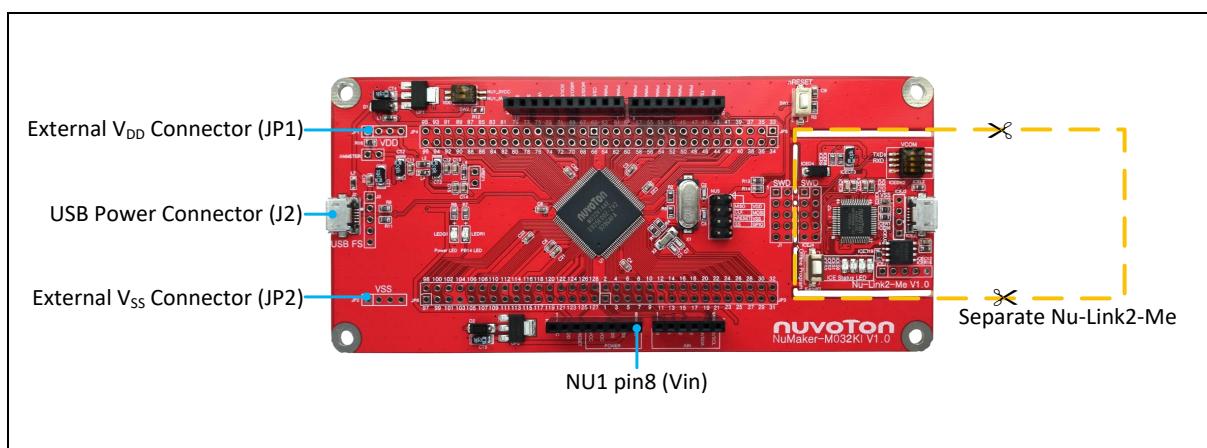


Figure 2-7 Separate the Nu-Link2-Me from NuMaker-M032KI

Table 2-12 presents all power models when supplies external power through M032 platform. The M032 platform external power sources are highlighted in yellow.

Model	Target Chip Voltage	Vin ^[1]	J2	ICEJ3	SW2 Selection	JP1	ICEJPR1 (MCUVCC) Selection ^[2]	ICEJPR2 (ICEVCC) Selection ^[3]	ICE Chip Voltage ^[4]
4	3.3 V	7 V ~ 12 V Input	X	Ignore	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
5	3.3 V	X	Connect to PC	Ignore	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
6	5 V	7 V ~ 12 V Input	X	Ignore	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
7	5 V	X	Connect to PC	Ignore	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
8	1.8 V ~ 3.6 V	Ignore ^[5]	Ignore ^[5]	Connect to PC	OFF	DC Input 1.8 V ~ 3.6 V	Remove resistor	1.8 V / 3.3 V	1.8 V / 3.3 V
9	1.8 V ~ 3.6 V	Ignore ^[5]	Ignore ^[5]	Nu-Link2-Me removed	OFF	DC Input 1.8 V ~ 3.6 V	X	X	X

X: Unused.

Note:

1. The Vin input voltage will be converted by voltage regulator UP2 to 5 V.
2. 0Ω should be removed from ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V.
3. 0Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.
4. The ICE chip voltage should be close to the target chip voltage.
5. JP1 external power input only provides voltage to target chip. Supply external power to Vin or J2 can provide 5V to NU1 pin5 (5V) and 3.3V to NU1 pin4 (3VCC).

Table 2-12 Supply External Power for M032 platform

2.5 External Reference Voltage Connector

Table 2-13 presents the external reference voltage connector.

Connector	Comment
VREF1	Connector for user to easily connect to the external reference voltage pin of the target chip. User needs to remove the L5 ferrite bead.

Table 2-13 External Reference Voltage Connector

2.6 Ammeter Connector

Table 2-14 presents the ammeter connector.

Connector	Comment
AMMETER	Connector for user to easily measure the target chip power consumption. User needs to remove the R16 resistor.

Table 2-14 Ammeter Connector

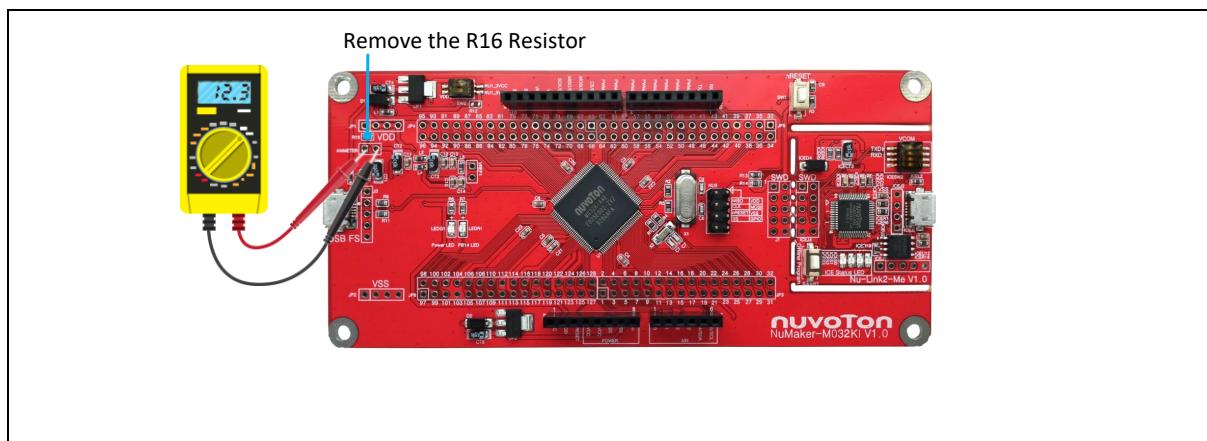


Figure 2-8 Wiring between Ammeter Connector and Ammeter

2.7 Push Buttons

Table 2-15 presents the push-buttons.

Component	Comment
ICESW1	Off-line program button to start off-line programming the target chip.
SW1	Reset button to reset the target chip.

Table 2-15 Push Buttons

2.8 LEDs

Table 2-16 presents the LEDs.

Component	Comment
Power LED	The power LED indicates that the NuMaker-M032KI is powered.
PB14 LED	The LED is connected to the target chip PB.14.
ICES0, ICES1, ICES2 and ICES3	Nu-Link2-Me status LED.

Table 2-16 LEDs

2.9 Nu-Link2-Me

The Nu-Link2-Me is a debugger and programmer that supports on-line programming and debugging through SWD interface. The on-board 16-Mbit SPI Flash allows it to off-line program the target microcontroller. Additionally, the Nu-Link2-Me provides virtual COM port (VCOM) function to print out messages on PC. Table 2-17 presents how to set the VCOM function by ICESW2.

ICESW2		
Pin	Function	Comment
1	TXD	On: Connect target chip PB.13 (UART0_TXD) to Nu-Link2-Me. Off: Disconnect target chip PB.13 (UART0_TXD) to Nu-Link2-Me.
2	RXD	On: Connect target chip PB.12 (UART0_RXD) to Nu-Link2-Me. Off: Disconnect target chip PB.12 (UART0_RXD) to Nu-Link2-Me.
Note: Pin 3 and 4 is unused.		

Table 2-17 VCOM Function of Nu-Link2-Me

2.9.1 VCOM Switches

Table 2-18 presents how to set the VCOM function by ICESW2.

ICESW2		
Pin	Function	Description
1	TXD	On: Connect target chip PB.13 (UART0_TXD) to Nu-Link2-Me. Off: Disconnect target chip PB.13 (UART0_TXD) to Nu-Link2-Me.
2	RXD	On: Connect target chip PB.12 (UART0_RXD) to Nu-Link2-Me. Off: Disconnect target chip PB.12 (UART0_RXD) to Nu-Link2-Me.
Note: Pin 3 and 4 is unused.		

Table 2-18 VCOM Function of Nu-Link2-Me

2.9.2 Status LEDs

Table 2-19 presents the status LEDs patterns for different operation on Nu-Link2-Me.

Operation Status	Status LED			
	ICES0	ICES1	ICES2	ICES3
Power on	Flash x 3	Flash x 3	Flash x 3	Flash x 3
Connected to IDE/NuTool	Flash x 3	Flash x 3	Flash x 3	On
ICE online (Not connected to a target chip)	On	-	Flash x 3	Flash x 3
ICE online (Connected to a target chip)	On	-	-	On
ICE online (Failed to connect to a target chip)	On	Any	Flash	On
During Offline Programming	-	On	-	Flash
Offline Programming Completed	On	-	-	-
Offline Programming Completed (Auto mode)	On	On	-	-
Offline Programming Failed	On	Flash	-	-

Table 2-19 Operation Status LED Patterns

3 NUTFT HARDWARE CONFIGURATION

3.1 Front View

Figure 3-1 shows the main components and connectors from the front side of NuTFT. The following lists components and connectors from the front view:

- Five-direction Joystick (J3)
- Push Button (SW7 and SW8)
- ILI9341 2.4" 320x240 SPI TFT LCD Panel with 4-Wire ADC Touch Function (J7)
- Arduino UNO Compatible Interface Connectors (NU1, NU2, NU5 and NU6)

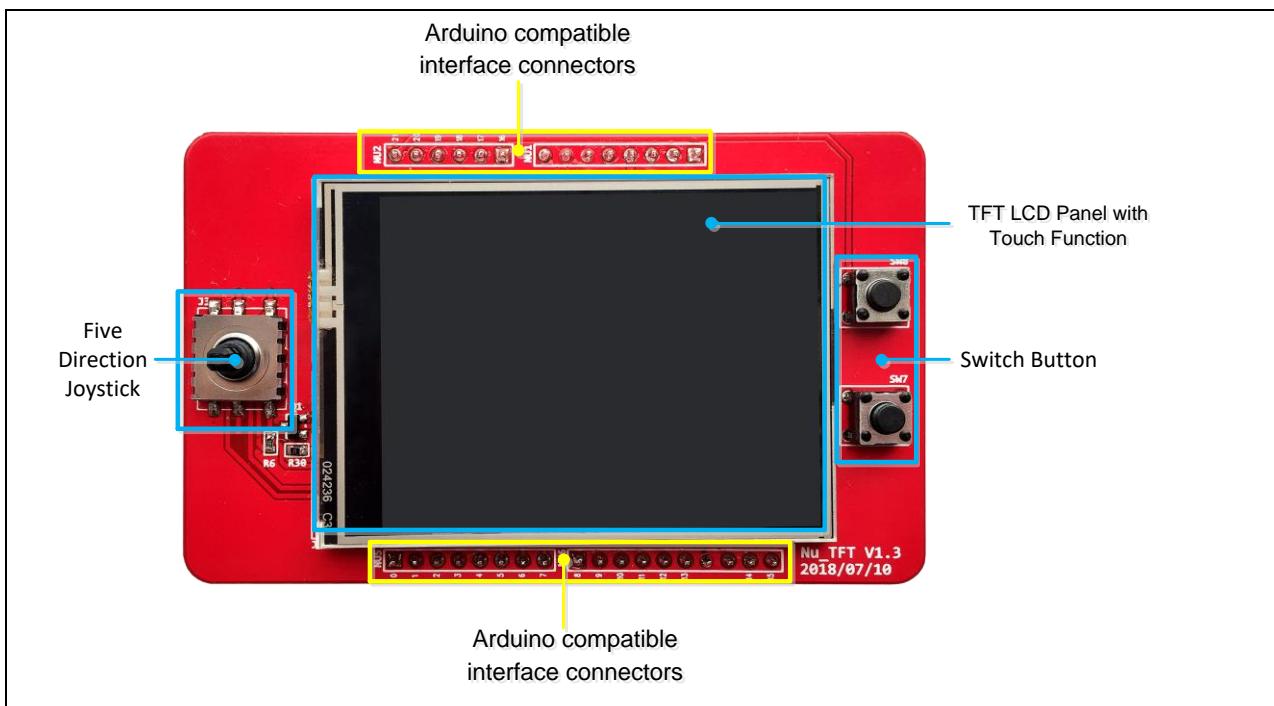


Figure 3-1 Front View of NuTFT

3.2 Rear View

Figure 3-2 shows the main components and connectors from the rear side of NuTFT.

The following lists components and connectors from the rear view:

- 16 Mbits (2 MB) SPI Flash * 1 (W25Q16CV) (U1)
- Arduino UNO Compatible Interface Connectors (NU1, NU2, NU5, NU6 and NU7)

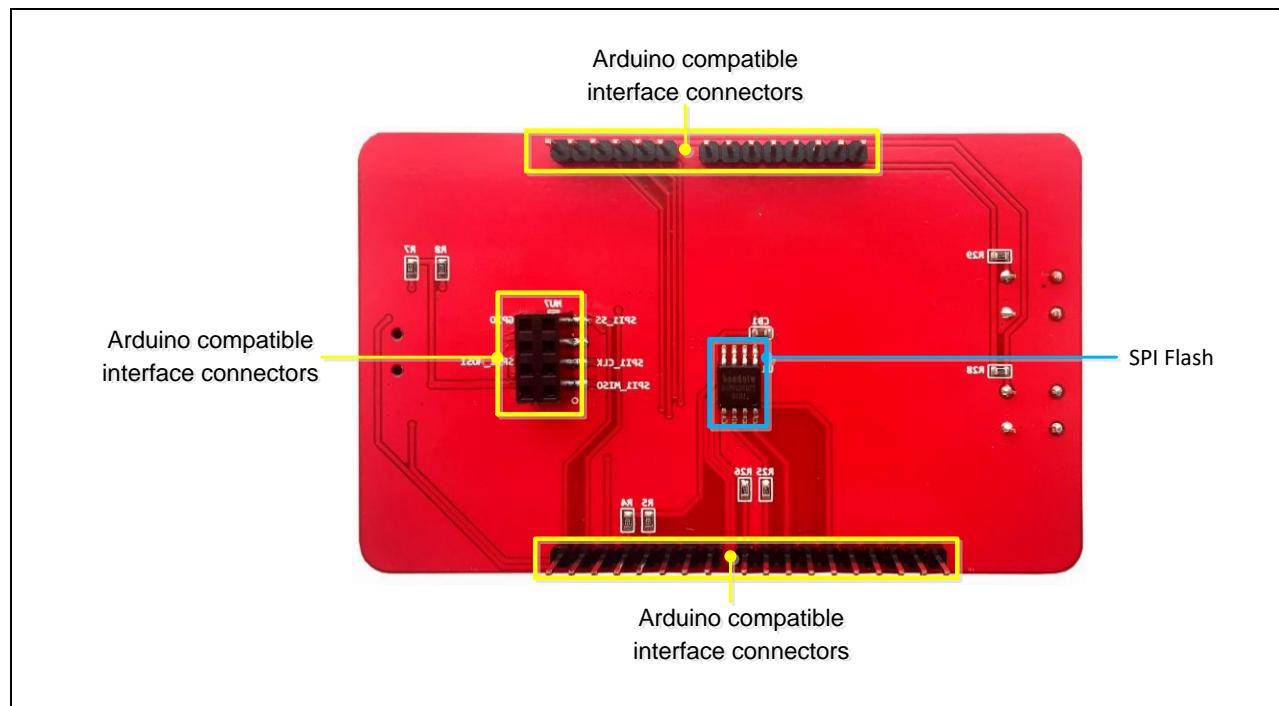


Figure 3-2 Rear View of NuTFT

3.3 Extension Connectors

The pin arrangement of NuTFT extension connectors is compatible with Arduino UNO.

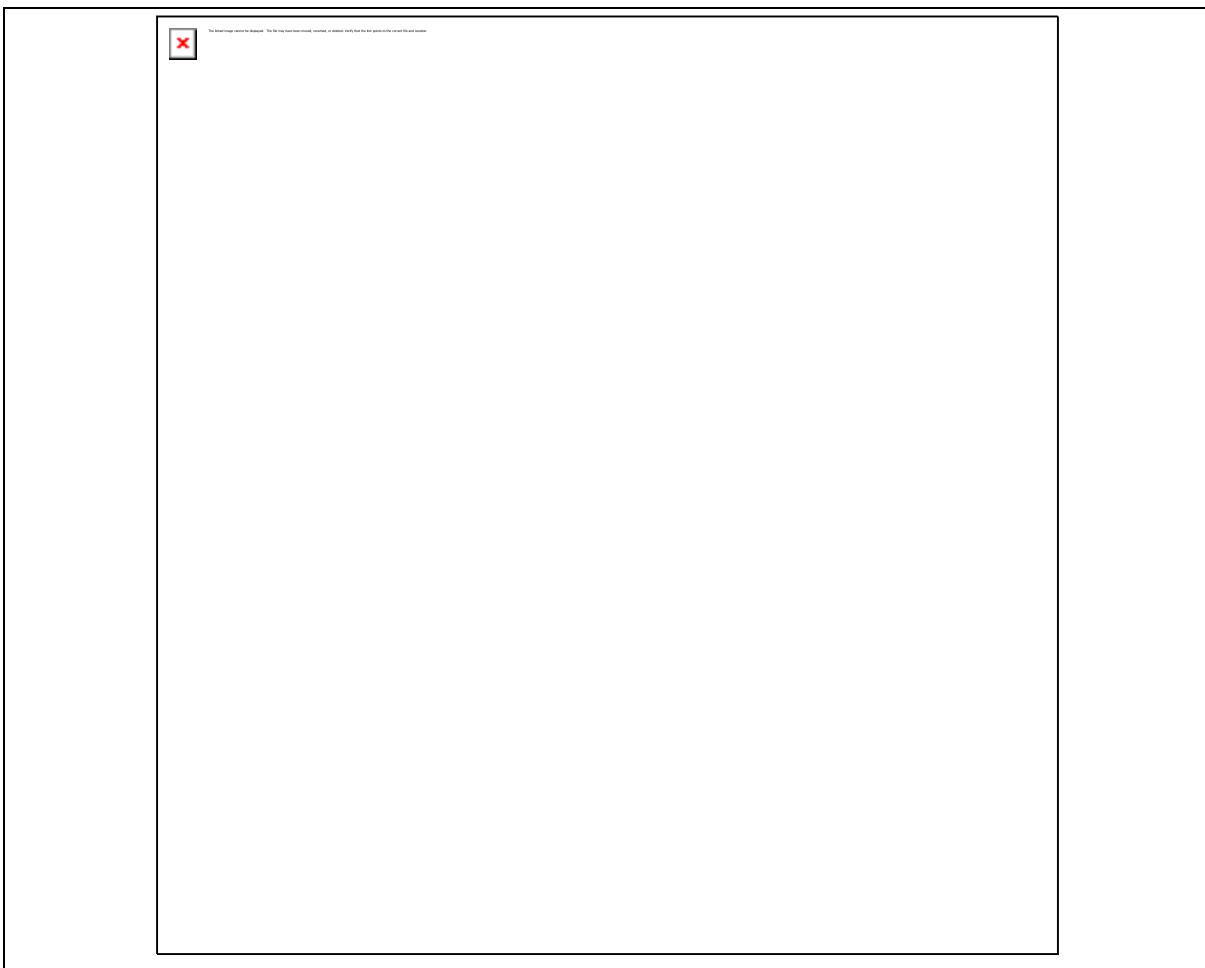


Figure 3-3 NuTFT Extension Connectors

Header		NuTFT		Header		NuTFT	
		Compatible to Arduino UNO	Pin of NuTFT			Compatible to Arduino UNO	Pin of NuTFT
N U 7	NU7.8	GPIO	-	N U 7	NU7.4	SPI0_SS	SPI_SS
	NU7.7	GND	-		NU7.3	RESET	RESET
	NU7.6	SPI0_MOSI	SPI_MOSI		NU7.2	SPI0_CLK	SPI_CLK
	NU7.5	VCC	VCC		NU7.1	SPI0_MISO	SPI_MISO
N U 5	NU3.1	D0	LCM_DC	N U 2	NU2.6	A5	SW8 Push Button
	NU3.2	D1	LCM_RESET		NU2.5	A4	SW7 Push Button
	NU3.3	D2	Five direction joystick – Middle		NU2.4	A3	4 wired ADC Touch Panel – XR
	NU3.4	D3	Five direction joystick – Down		NU2.3	A2	4 wired ADC Touch Panel – YD
	NU3.5	D4	Five direction joystick – Left		NU2.2	A1	4 wired ADC Touch Panel – XL
	NU3.6	D5	Five direction joystick – Up		NU2.1	A0	4 wired ADC Touch Panel – YU
	NU3.7	D6	Five direction joystick – Right		NU1.8	VIN	-
	NU3.8	D7	LCM_LED		NU1.7	GND	
N U 6	NU4.1	D8	SPI Flash – MISO1	N U 1	NU1.6	GND	
	NU4.2	D9	SPI Flash – MOSI1		NU1.5	5VCC	
	NU4.3	D10	SPI Flash – SS		NU1.4	3VCC	
	NU4.4	D11	SPI Flash – MOSI0		NU1.3	RESET	nRESET
	NU4.5	D12	SPI Flash – MISO0		NU1.2	IOREF	-
	NU4.6	D13	SPI Flash – CLK		NU1.1	NC	
	NU4.7	VSS	-				
	NU4.8	VREF	-				
	NU4.9	SDA	-				
	NU4.10	SCL	-				

Table 3-1 Arduino UNO Extension Connectors and NuTFT Mapping GPIO List

3.4 Component Description

3.4.1 Arduino UNO Compatible Interface Connectors

Connector	Comment
NU1, NU2, NU5, NU6 and NU7	Arduino UNO compatible connectors on the NuTFT.

Table 3-2 Arduino UNO Compatible Interface Connectors

3.4.2 Push Buttons

Component	Comment
SW7 and SW8	Push buttons for self-defined functions.

Table 3-3 Push Buttons

3.4.3 Five-Direction Joystick

Component	Comment
J3	Five-direction joystick with five dimensions: up, down, left, right and middle.

Table 3-4 Five-Direction Joystick

3.4.4 TFT LCD Touch Panel

Component	Comment
J7	TFT LCD touch panel for emWin demo display and evaluation. Driver IC: ILI9341 Panel Size: 2.4" Panel Resolution: 320x240 LCD Control Interface: SPI Touch Function Interface: ADC * 4

Table 3-5 TFT LCD Touch Panel

3.4.5 SPI Flash

Component	Comment
U1	PartNo.: W25Q16CV Control Interface: one set of SPI, or two sets of SPI for quad mode Flash Size: 16 Mbits (2 MB)

Table 3-6 SPI Flash

4 NUMAKER-EMWIN-M032 QUICK START

4.1 Toolchains Supporting

Install the preferred toolchain. Please make sure at least one of the toolchains has been installed.

- [KEIL MDK Nuvoton edition M0/M23](#)
- [IAR EWARM](#)
- [NuEclipse GCC \(for Windows\)](#)
- [NuEclipse GCC \(for Linux\)](#)

4.2 Nuvoton Nu-Link Driver Installation

Download and install the latest Nuvoton Nu-Link Driver.

- Download and install [Nu-Link Keil Driver](#) when using Keil MDK.
- Download and install [Nu-Link IAR Driver](#) when using IAR EWARM.
- Skip this step when using NuEclipse.

Please install the Nu-Link USB Driver as well at the end of the installation. The installation is presented in Figure 4-1 and Figure 4-2.

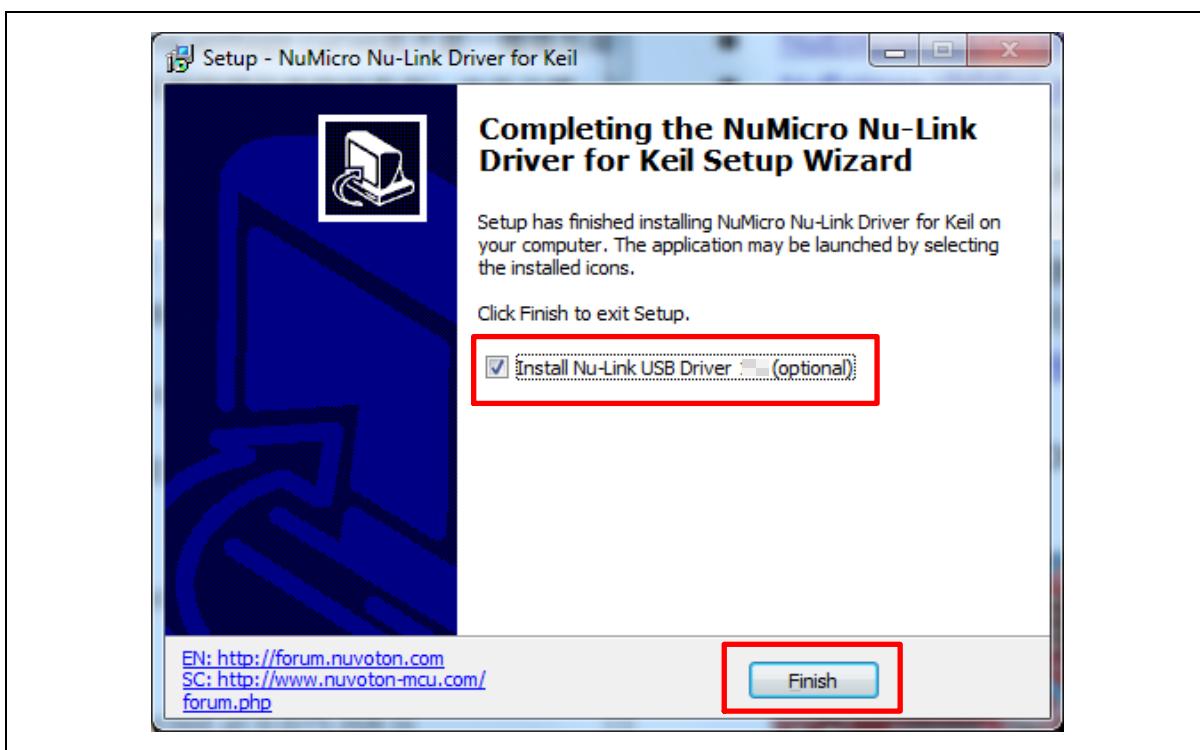


Figure 4-1 Nu-Link USB Driver Installation Setup

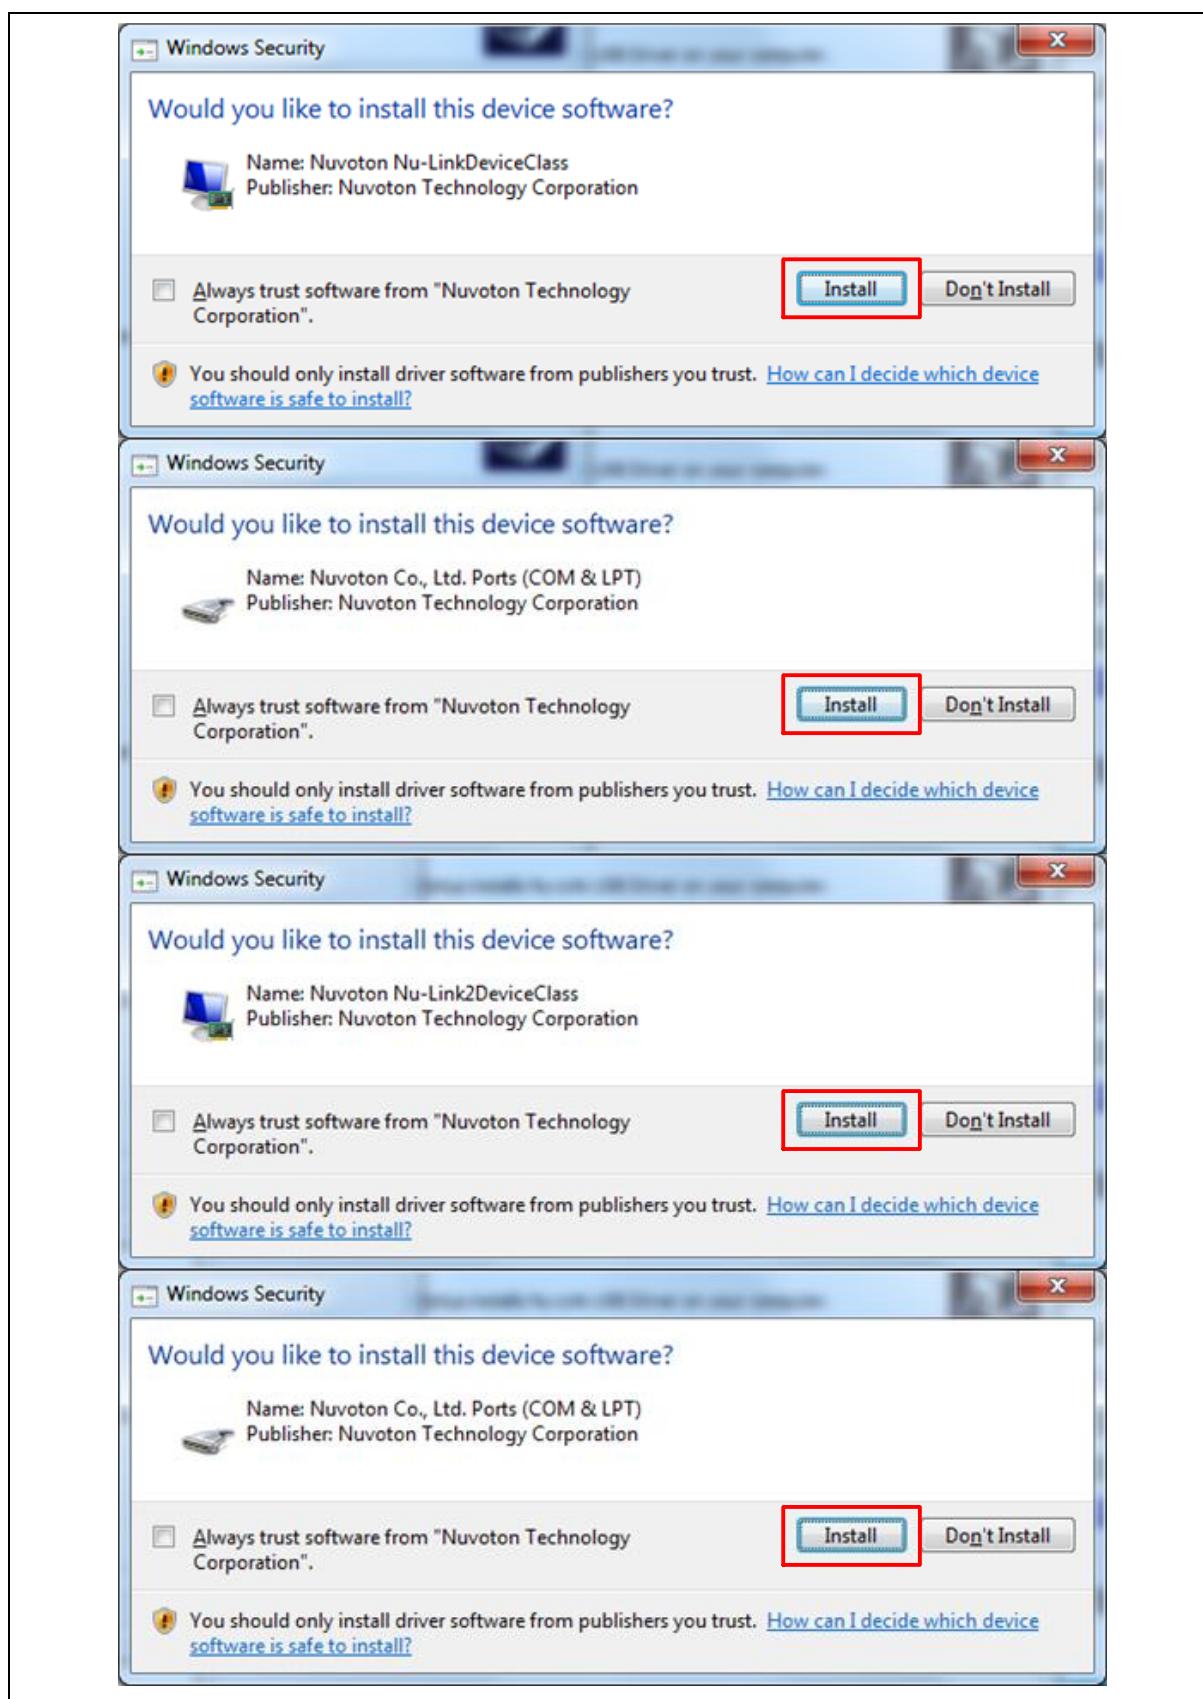


Figure 4-2 Nu-Link USB Driver Installation

4.3 BSP Firmware Download

Download and unzip the [Board Support Package \(BSP\)](#).

4.4 Hardware Setup

1. Open the virtual COM (VCOM) function by changing Nu-Link2-Me VCOM Switch No. 1 and 2 to ON.

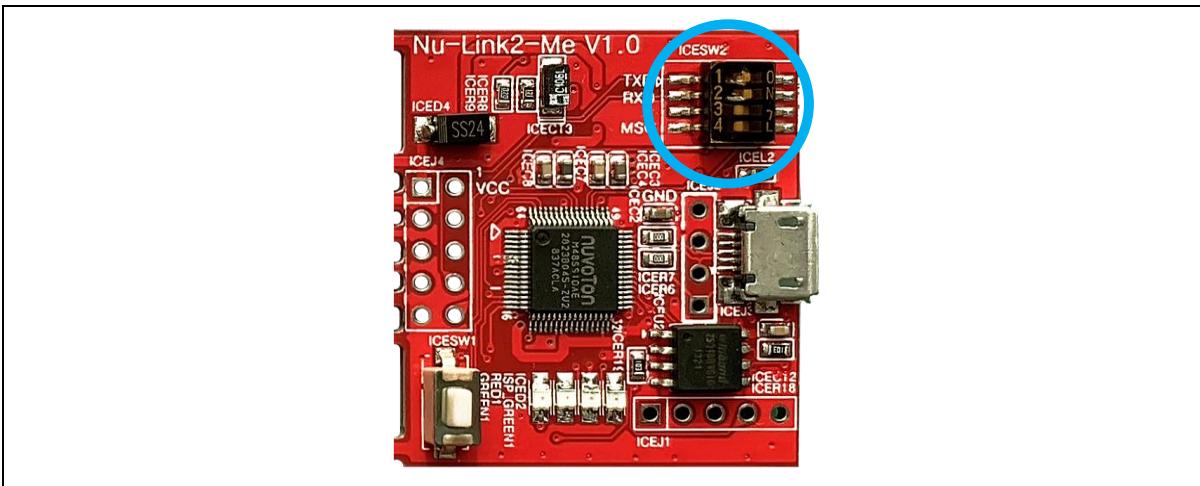


Figure 4-3 Open VCOM Function

2. Connect the ICE USB connector shown in Figure 4-4 to the PC USB port through USB cable.

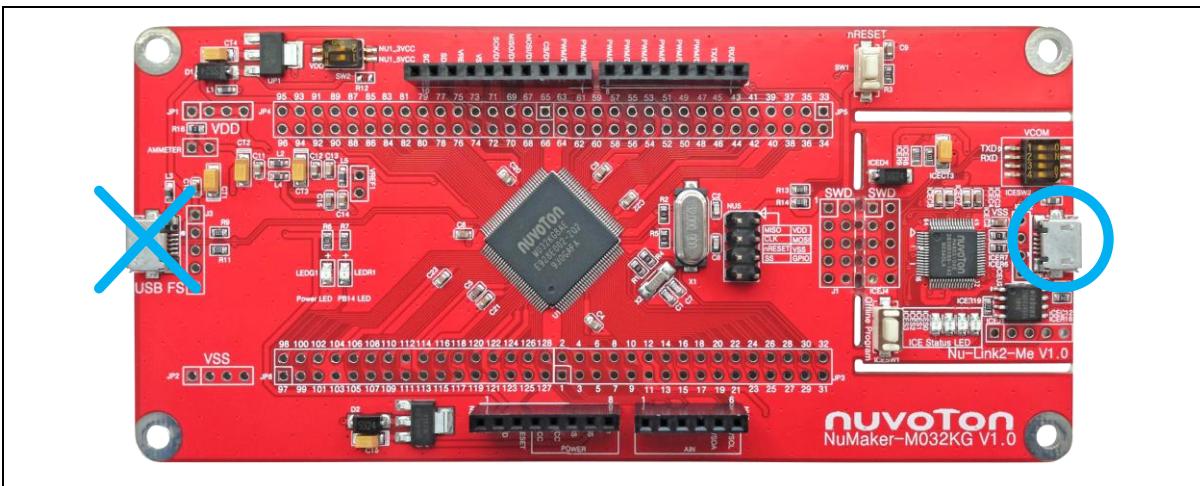


Figure 4-4 ICE USB Connector

3. Find the “Nuvoton Virtual COM Port” on the Device Manger as Figure 4-5.

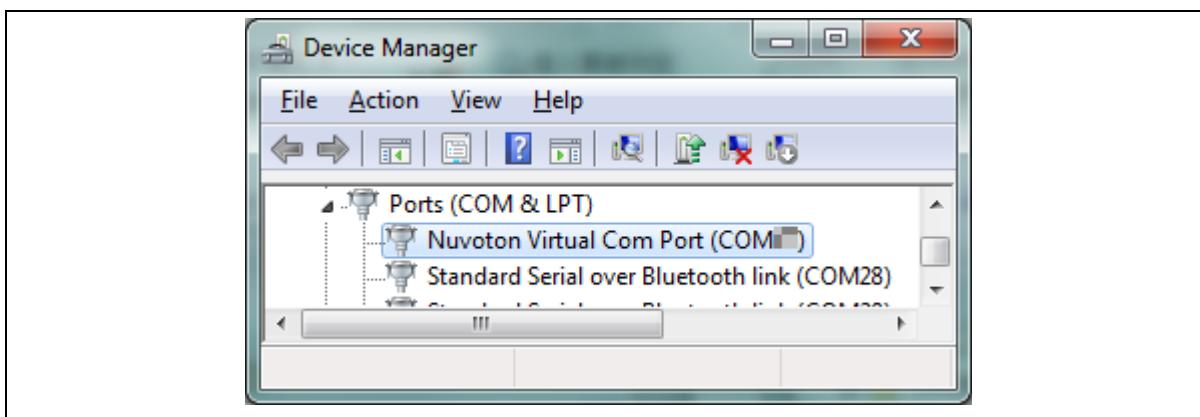


Figure 4-5 Device Manger

4. Open a serial port terminal, PuTTY for example, to print out debug message. Set the speed to 115200. Figure 4-6 presents the PuTTY session setting.

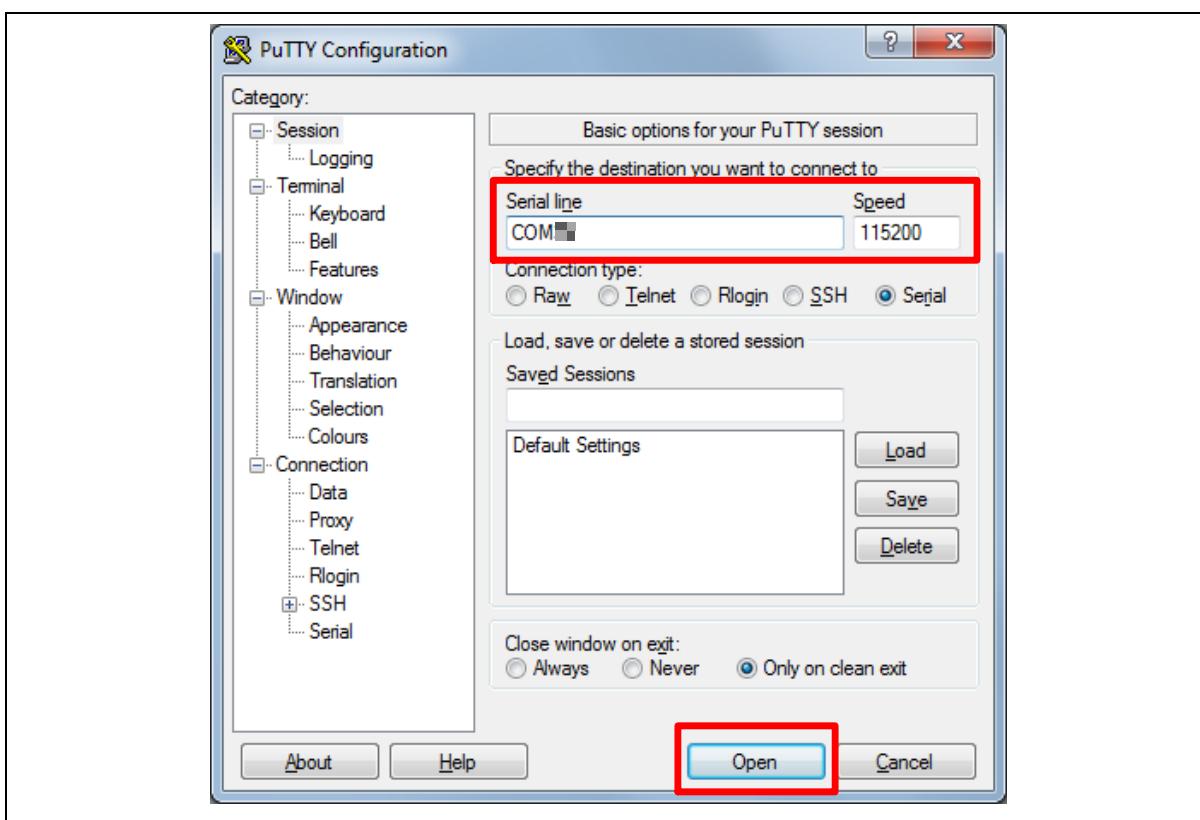


Figure 4-6 PuTTY Session Setting

4.5 Find the Example Project

Use the “emWin_SimpleDemo” project as an example. The project can be found under the BSP folder as shown in Figure 4-7.

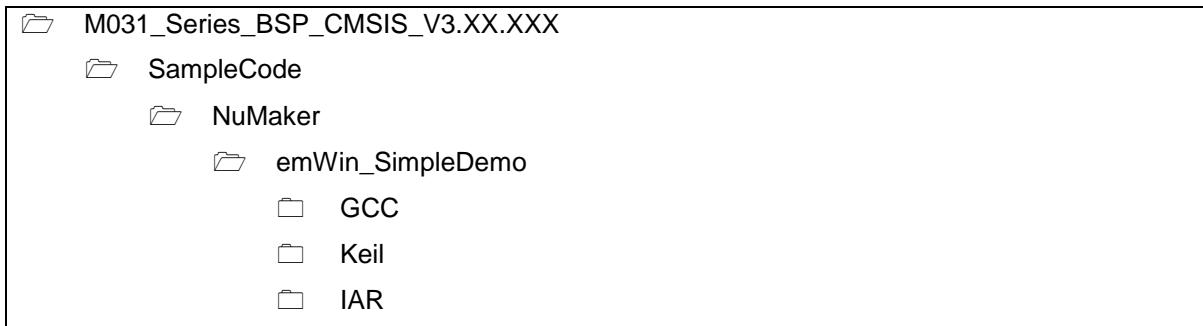


Figure 4-7 Template Project Folder Path

4.6 Execute the Project under Toolchains

Open and execute the project under the toolchain. The section 4.6.1, 4.6.2, and 4.6.3 describe the steps of executing project in Keil MDK, IAR EWARM and NuEclipse, respectively.

4.6.1 Keil MDK

This section provides steps to beginners on how to run a project by using Keil MDK.

1. Double click the “emWin_SimpleDemo.uvproj” to open the project.

Note: If Figure 4-8 warning message jumps out, please migrate to version 5 formats as shown in Figure 4-9. The “.uvproj” filename extension will change to “.uvprojx”.

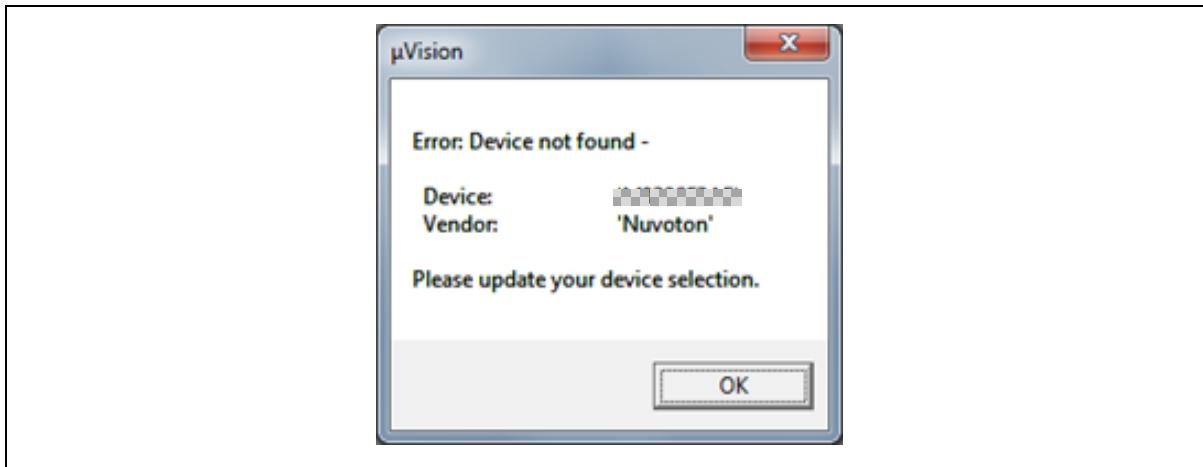


Figure 4-8 Warning Message of “Device not found”

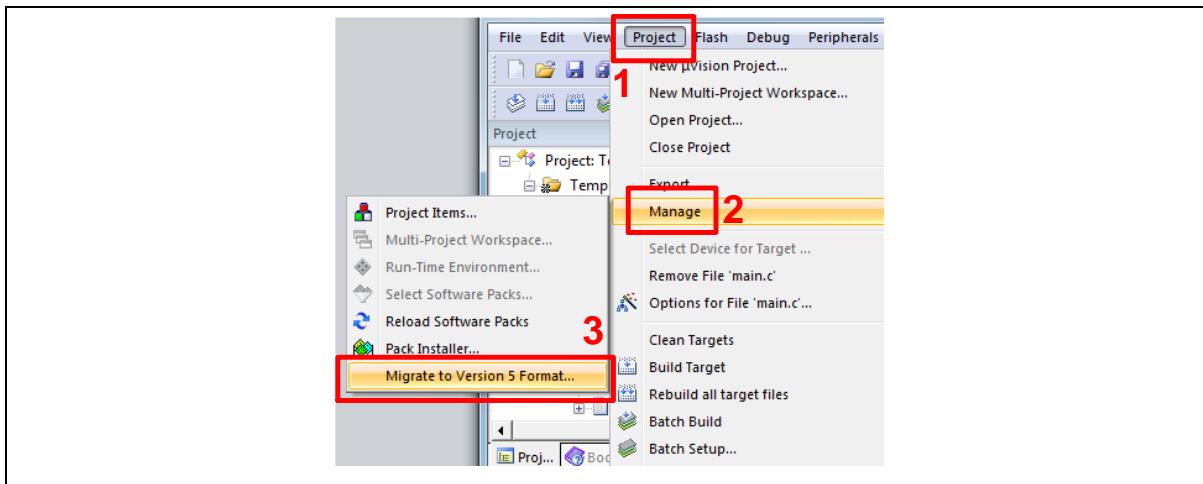


Figure 4-9 Project File Migrate to Version 5 Format

2. Make sure the debugger is “Nuvoton Nu-Link Debugger” as shown in Figure 4-10 and Figure 4-11.

Note: If the dropdown menu in Figure 4-10 does not contain “Nuvoton Nu-Link Debugger” item, please rework section 4.2.

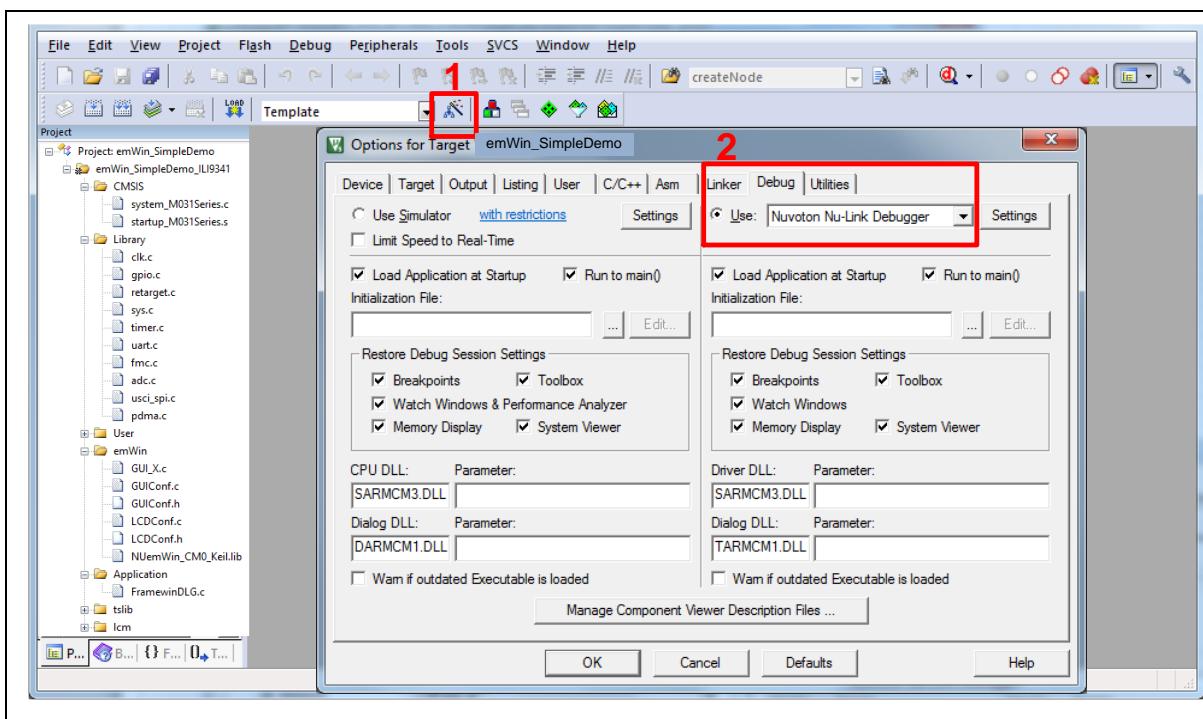


Figure 4-10 Debugger Setting in Options Window

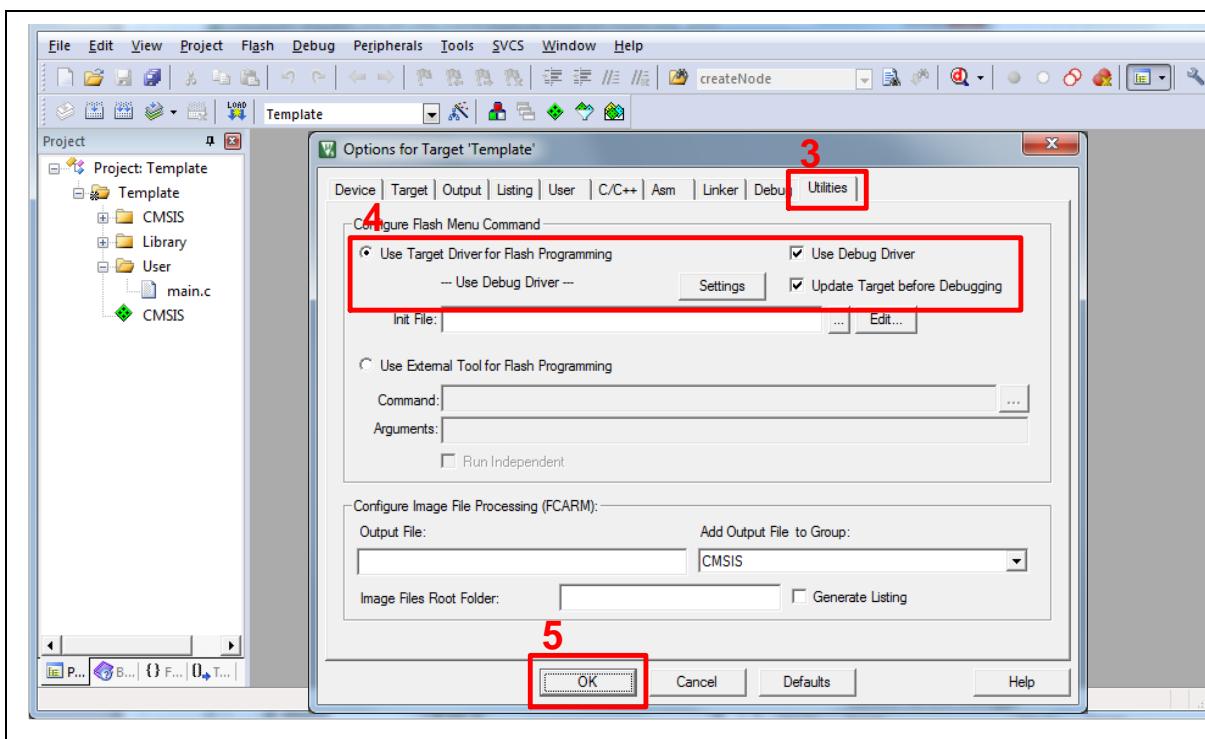


Figure 4-11 Programming Setting in Options Window

3. Rebuild all target files. After successfully compile the project, download code to the flash memory. Click “Start/Stop Debug Section” button can enter debug mode.

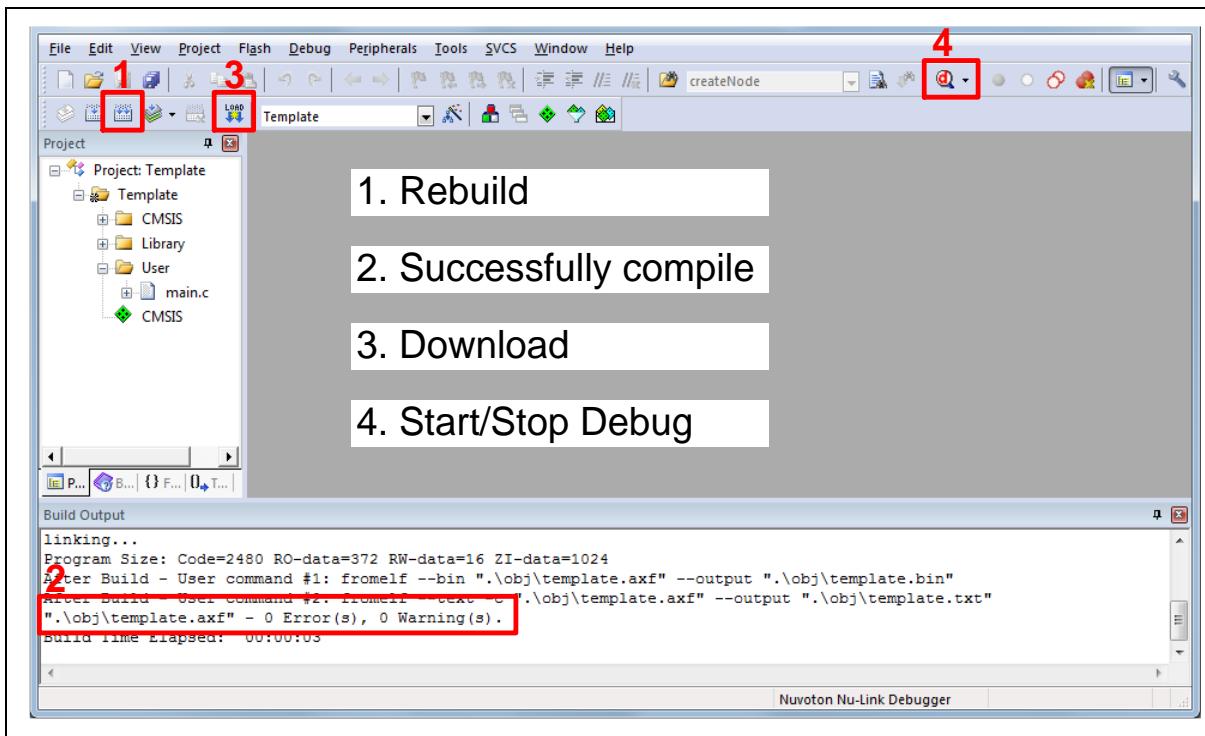


Figure 4-12 Compile and Download the Project

4. Figure 4-13 shows the debug mode under Keil MDK. Click “Run” and the debug message will be printed out as shown in Figure 4-14. User can debug the project under debug mode by checking source code, assembly language, peripherals' registers, and setting breakpoint, step run, value monitor, etc.

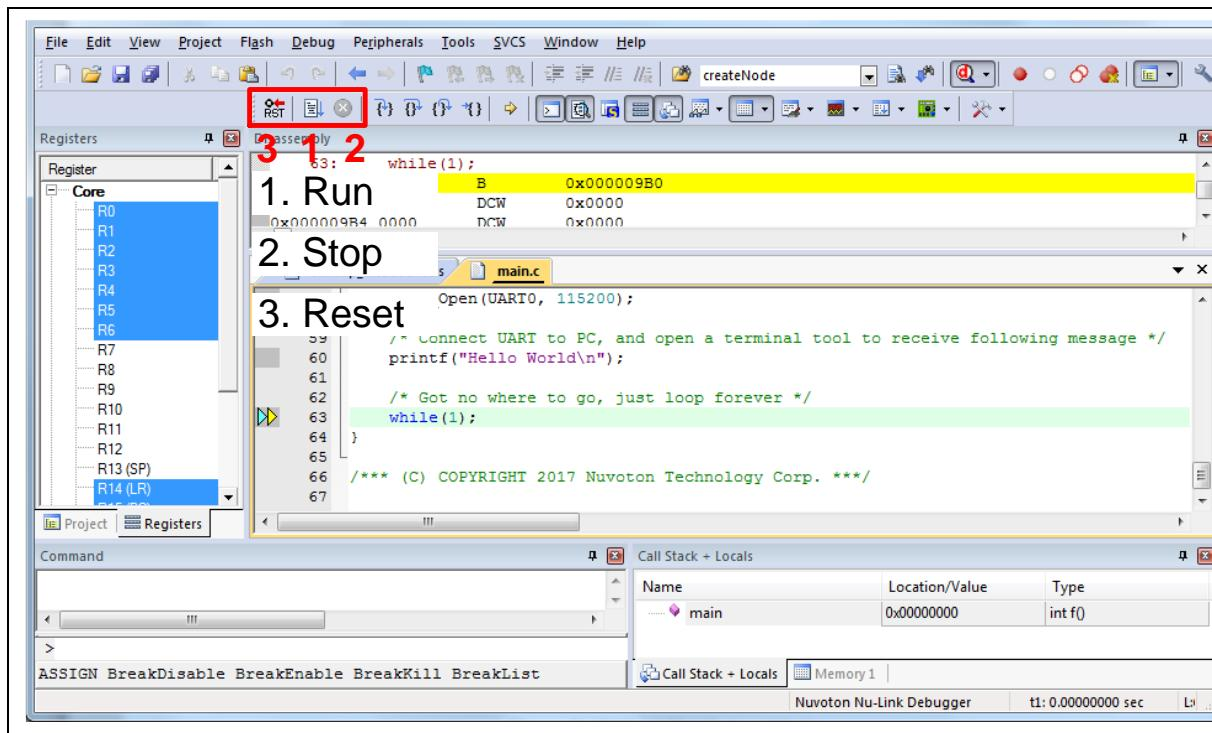


Figure 4-13 Keil MDK Debug Mode

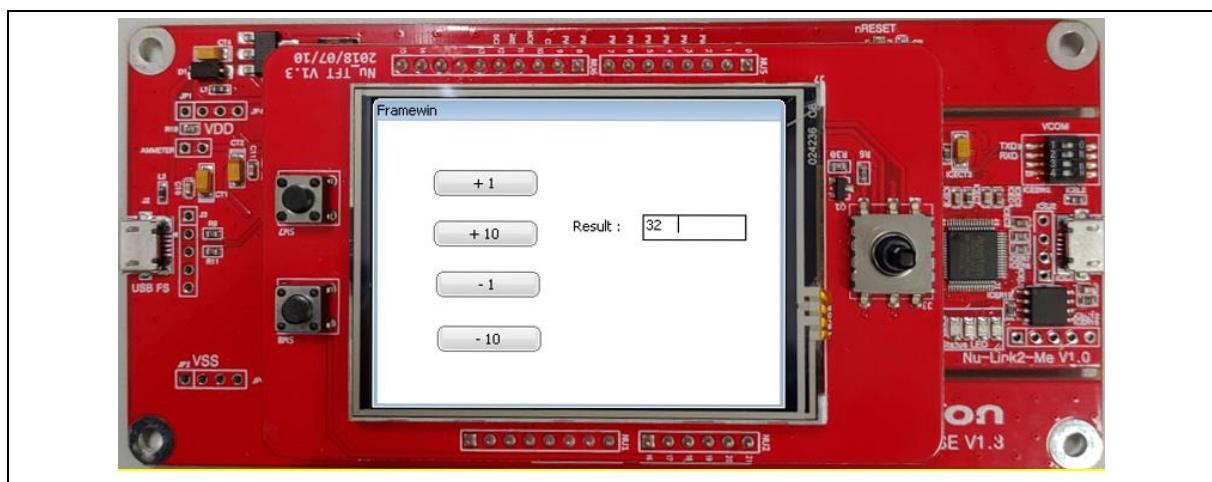


Figure 4-14 emWin_SimpleDemo Display

4.6.2 IAR EWARM

This section provides steps to beginners on how to run a project by using IAR EWARM.

1. Double click the “emWin_SimpleDemo.eww” to open the project.
2. Make sure the toolbar contain “Nu-Link” item as shown in Figure 4-15.

Note: If the toolbar does not contain “Nu-Link” item, please rework section 4.2.

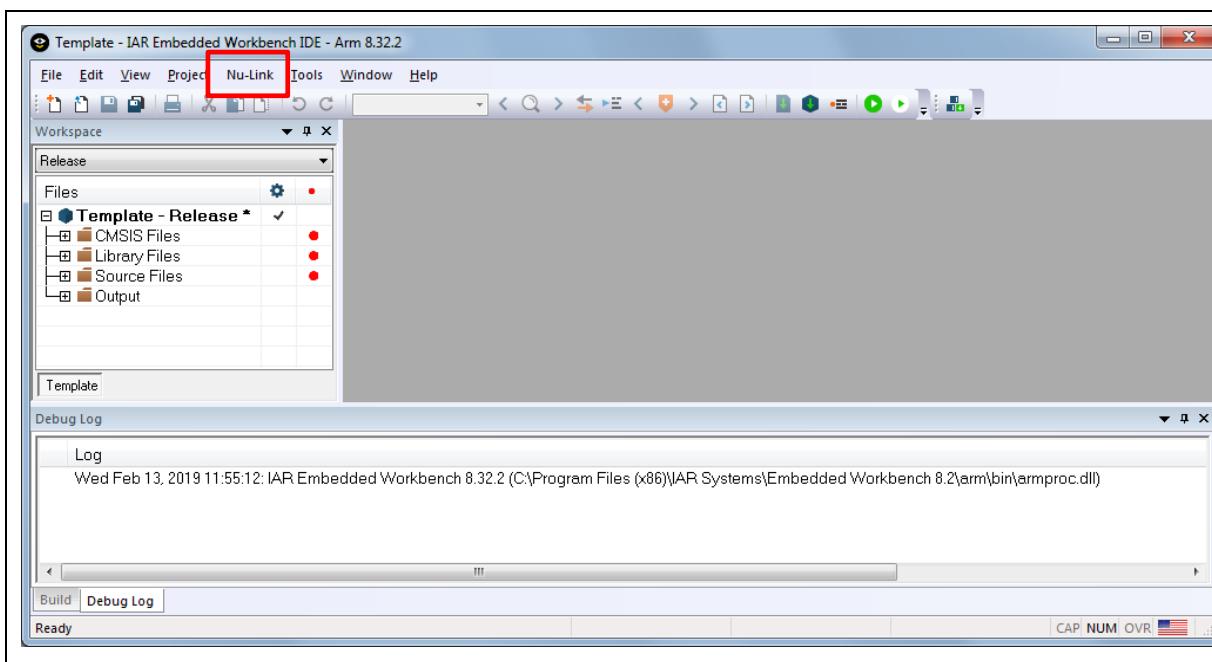


Figure 4-15 IAR EWARM Window

3. Make target file as presented in Figure 4-16. After successfully compile the project, download code to the flash memory and enter debug mode.

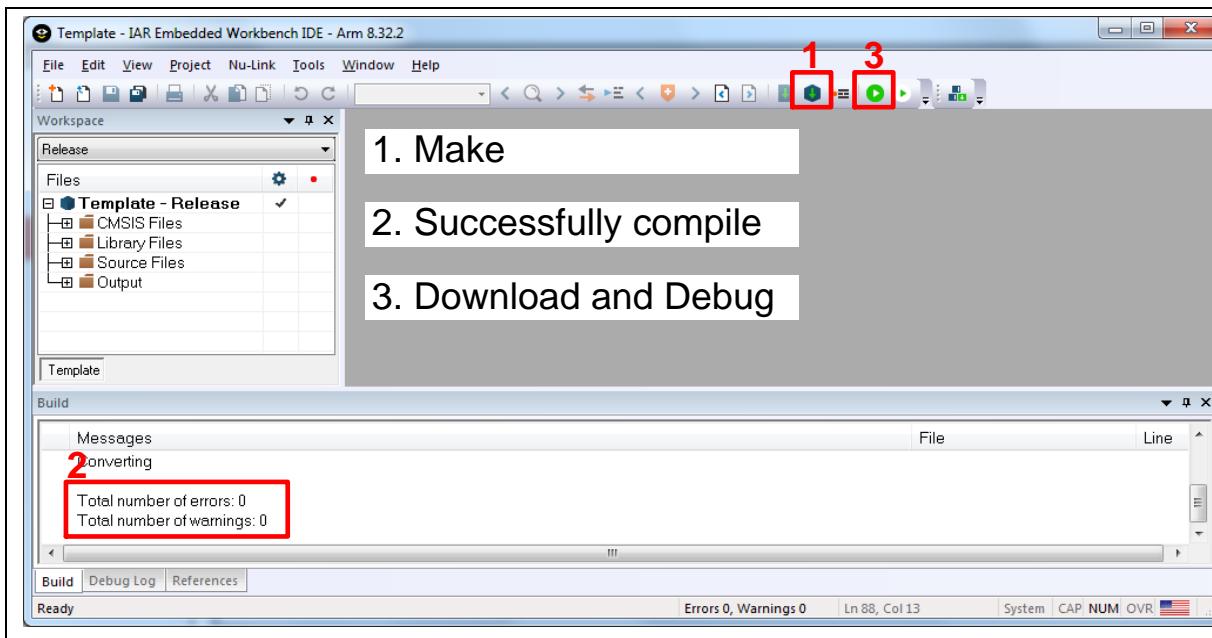


Figure 4-16 Compile and Download the Project

4. Figure 4-17 shows the debug mode under IAR EWARN. Click “Go” and the debug message will be printed out as shown in Figure 4-18. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

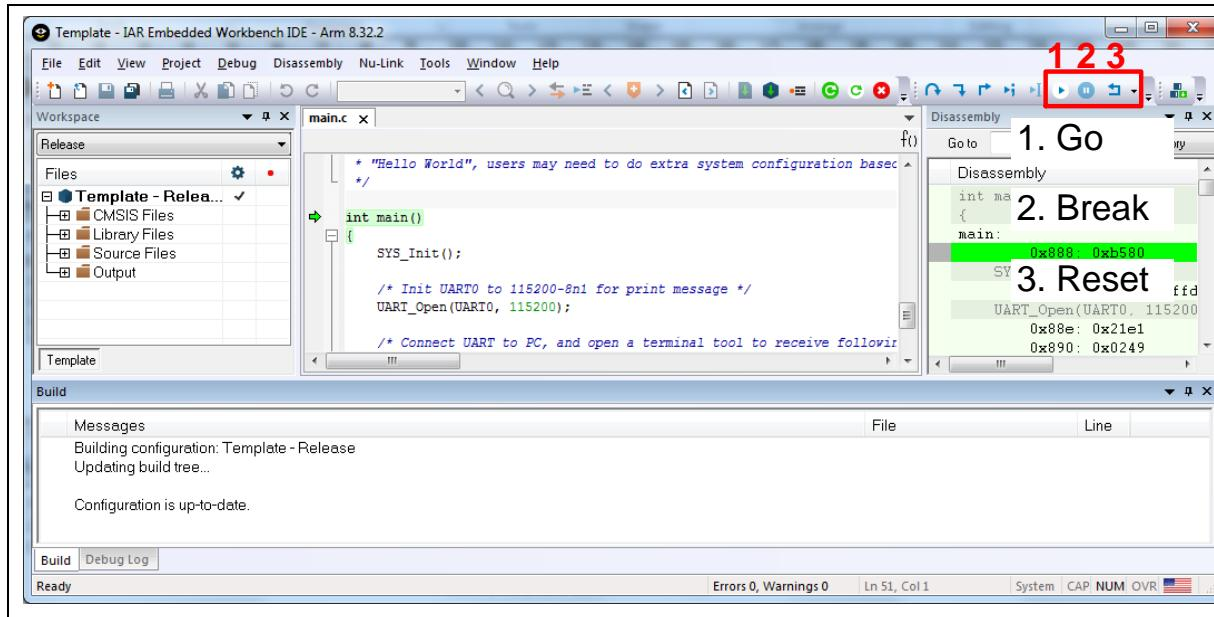


Figure 4-17 IAR EWARM Debug Mode

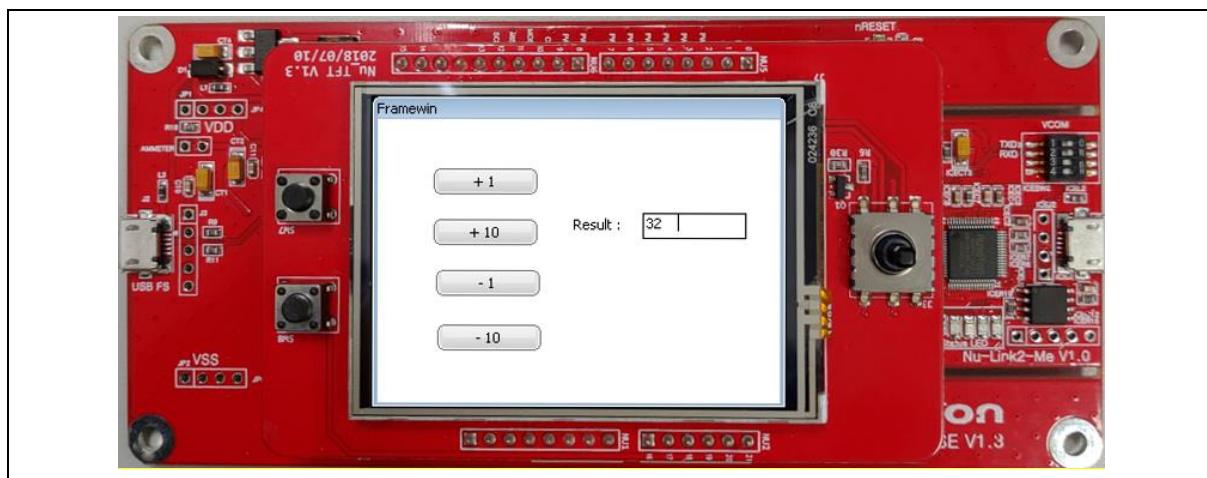


Figure 4-18 emWin_SimpleDemo Display

4.6.3 NuEclipse

This section provides steps to beginners on how to run a project by using NuEclipse. Please make sure the filenames and project folder path contain neither invalid character nor space.

1. Double-click NuEclipse.exe to open the toolchain.
2. Import the “emWin_SimpleDemo” project by following the steps presented in Figure 4-19 and Figure 4-20.

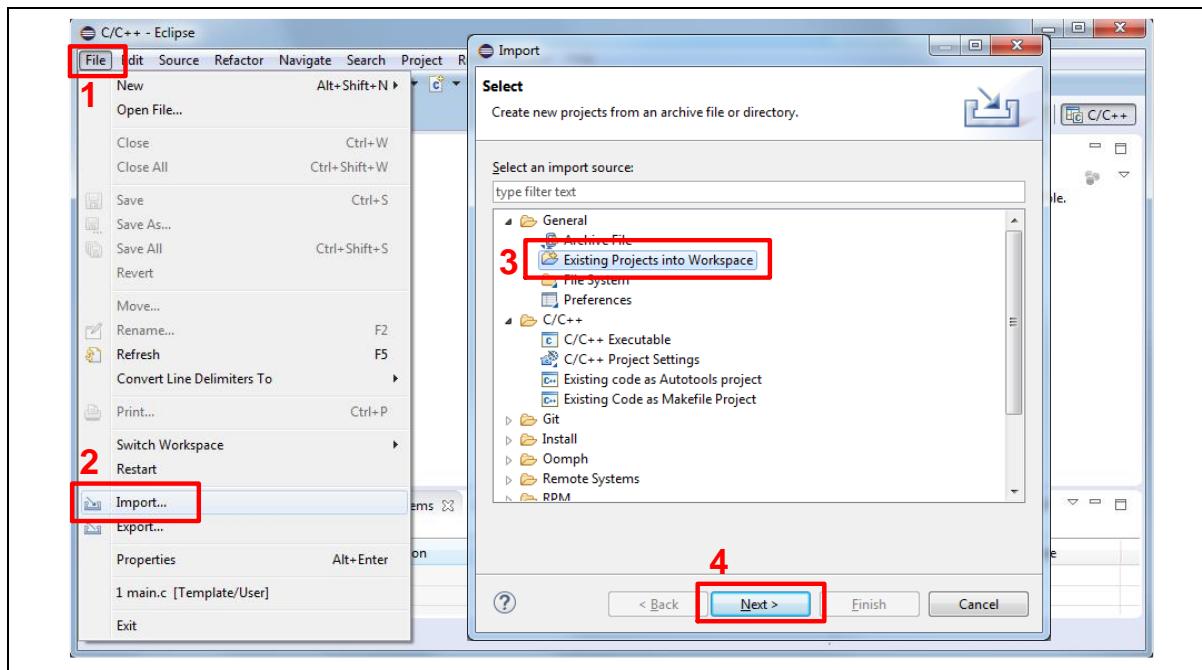


Figure 4-19 Import the Project in NuEclipse

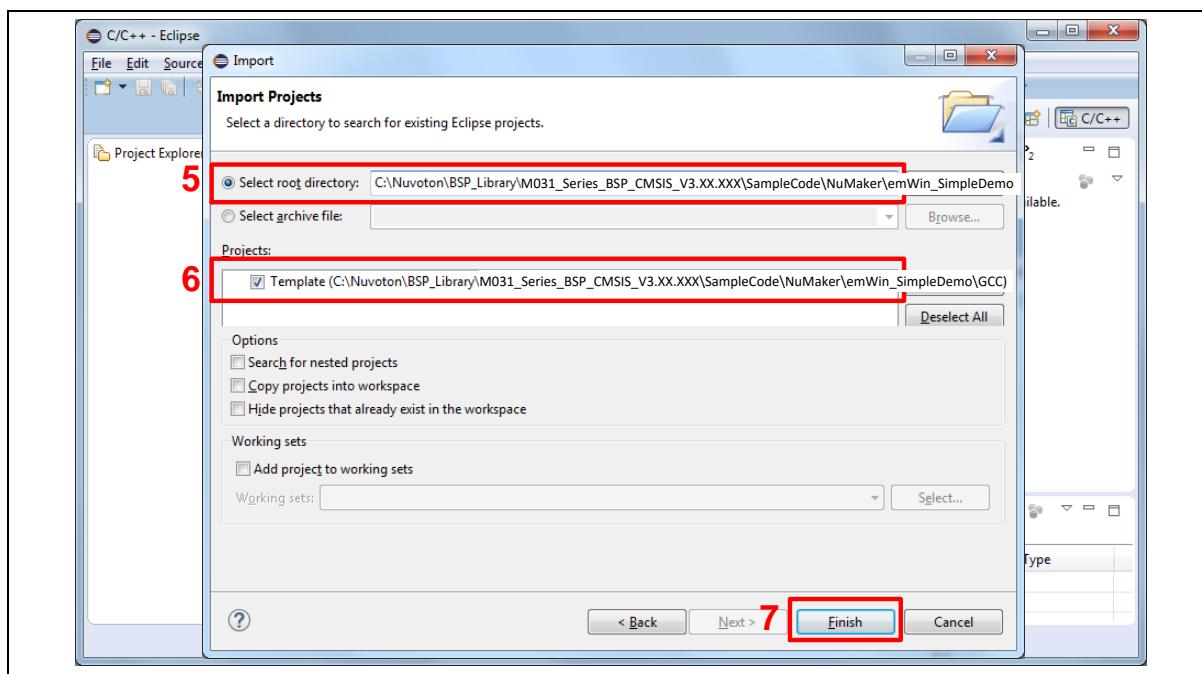


Figure 4-20 Import Projects Windows

3. Click the “Template” project and find the project properties as shown in Figure 4-21. Make sure the settings are the same as settings in Figure 4-22.

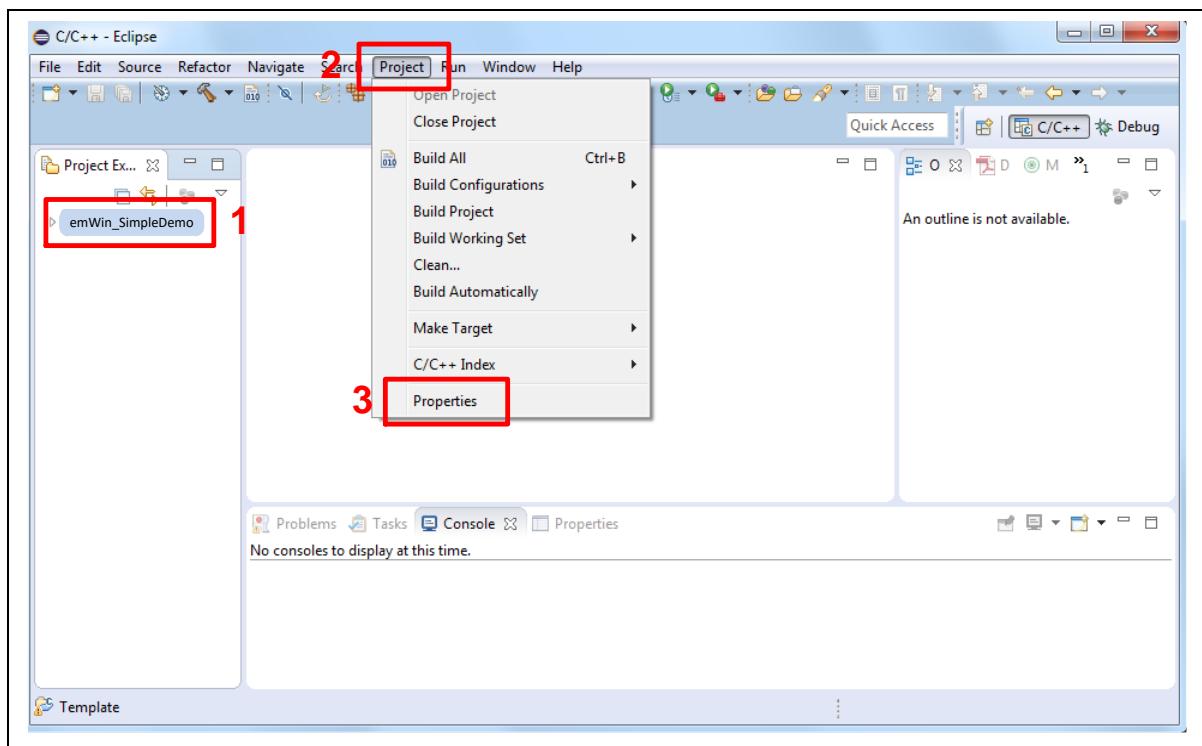


Figure 4-21 Open Project Properties Window

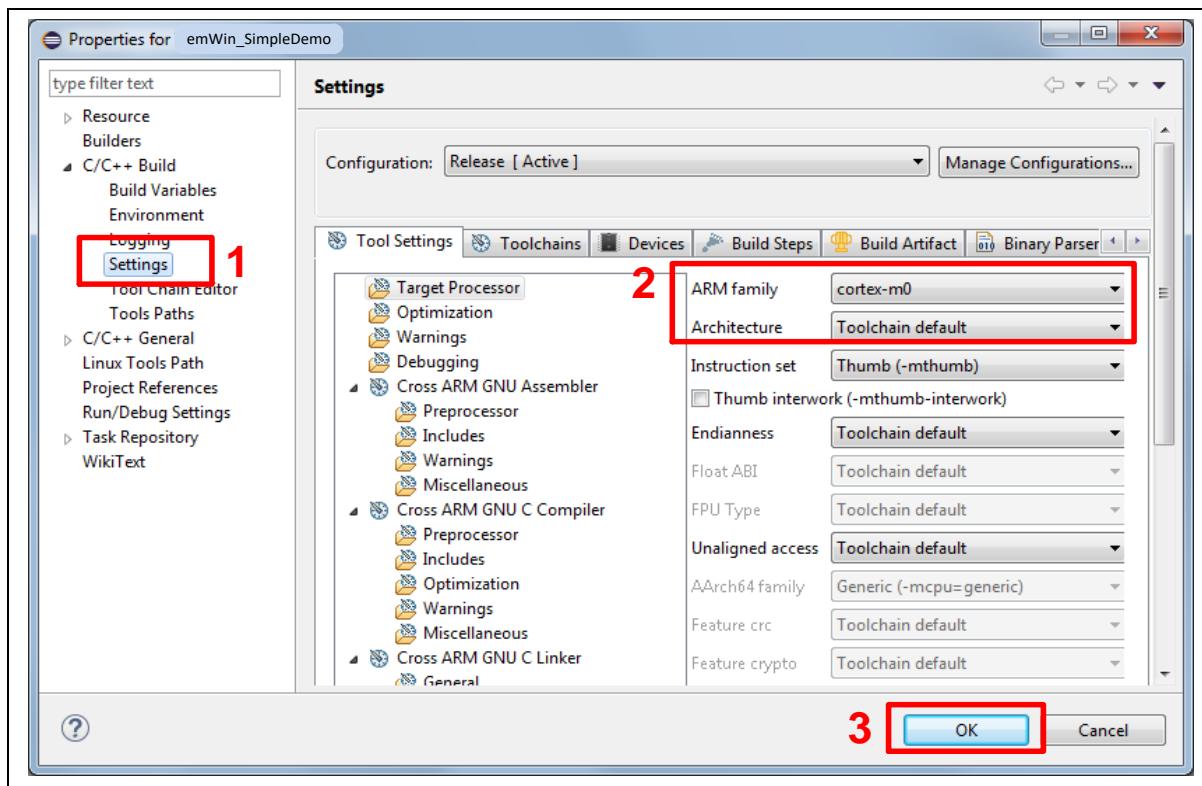


Figure 4-22 Project Properties Settings

4. Click the “Template” project and build the project.

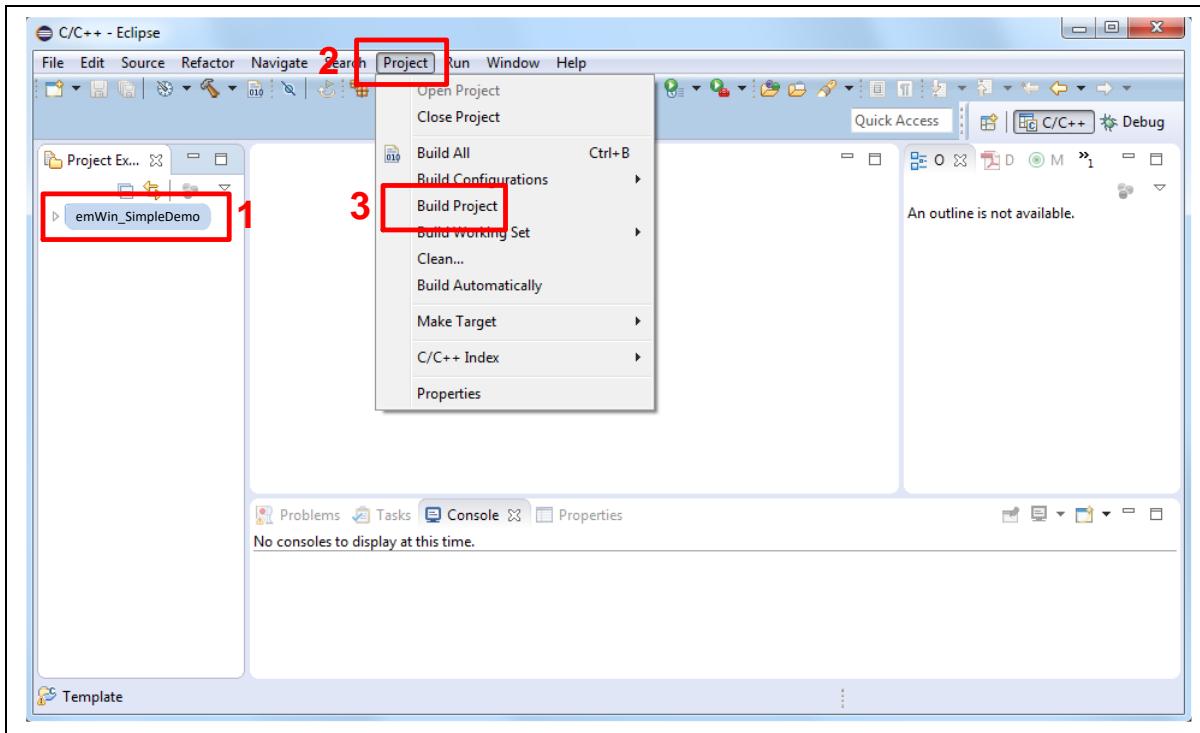


Figure 4-23 Build Project

5. After the project is built, click the “Template” project and set the “Debug Configuration” as shown in Figure 4-24. Follow the settings presented in Figure 4-25, Figure 4-26 and Figure 4-27 to enter debug mode.

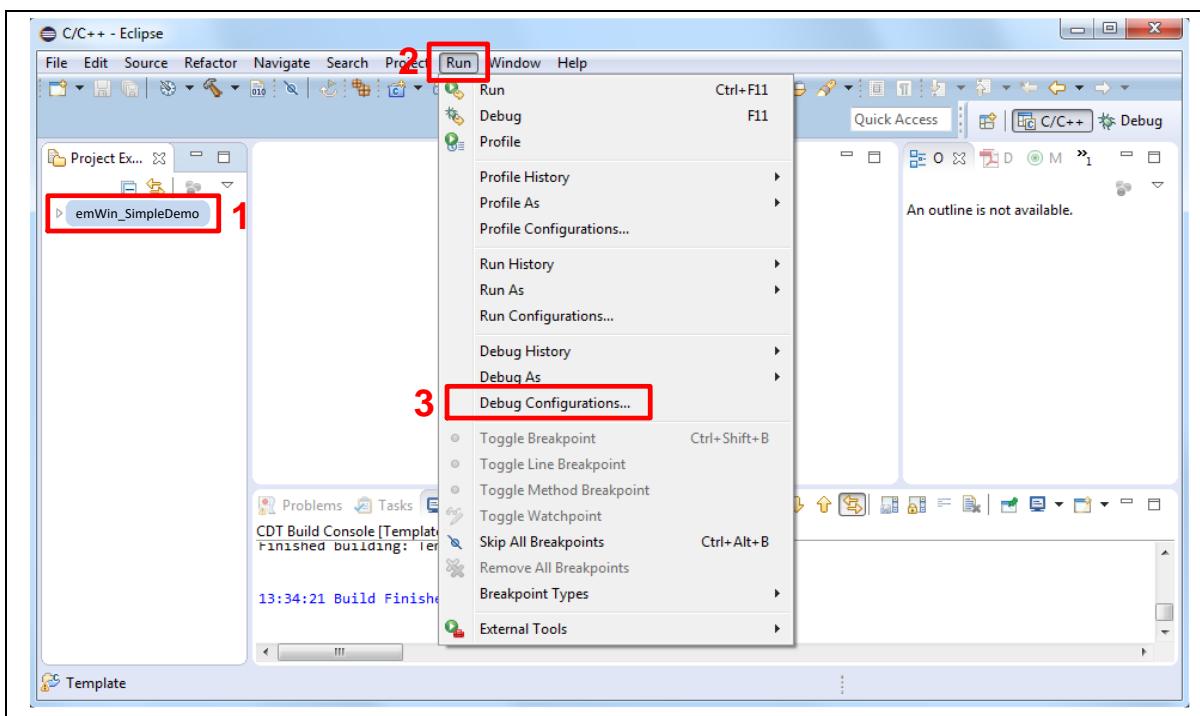


Figure 4-24 Open Debug Configuration

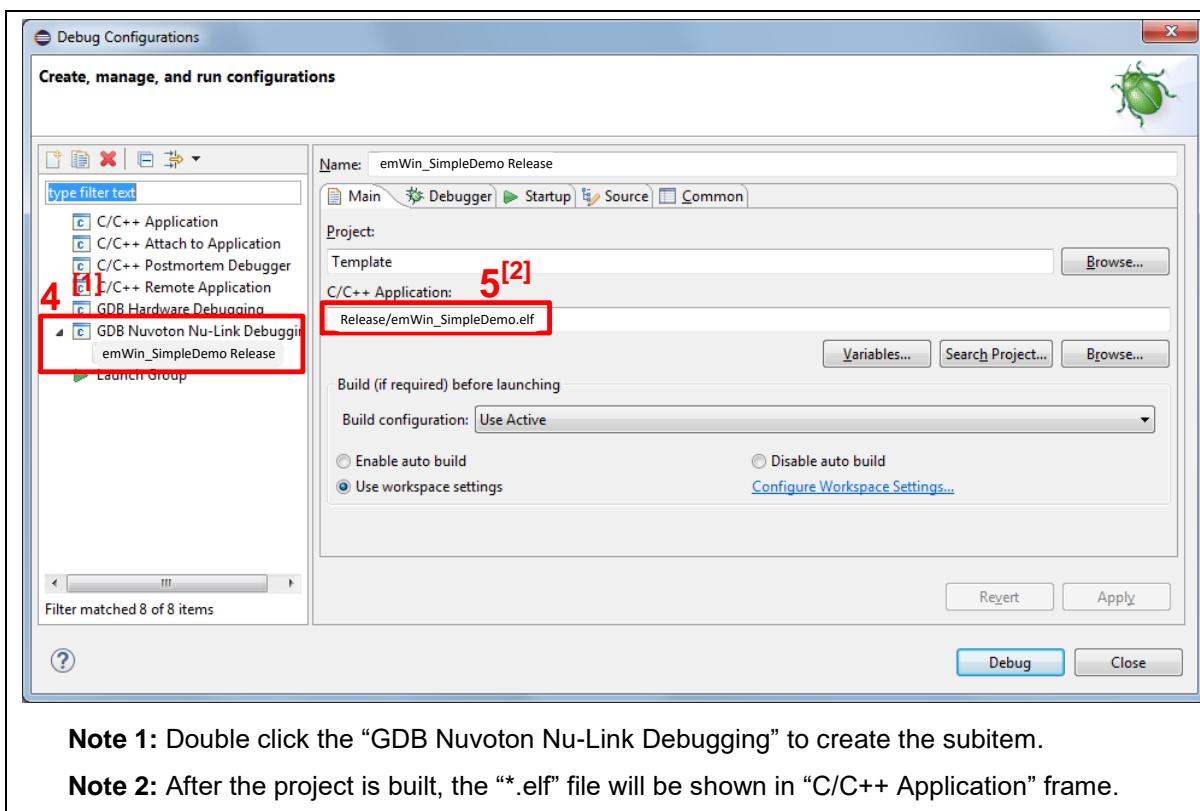


Figure 4-25 Main Tab Configuration

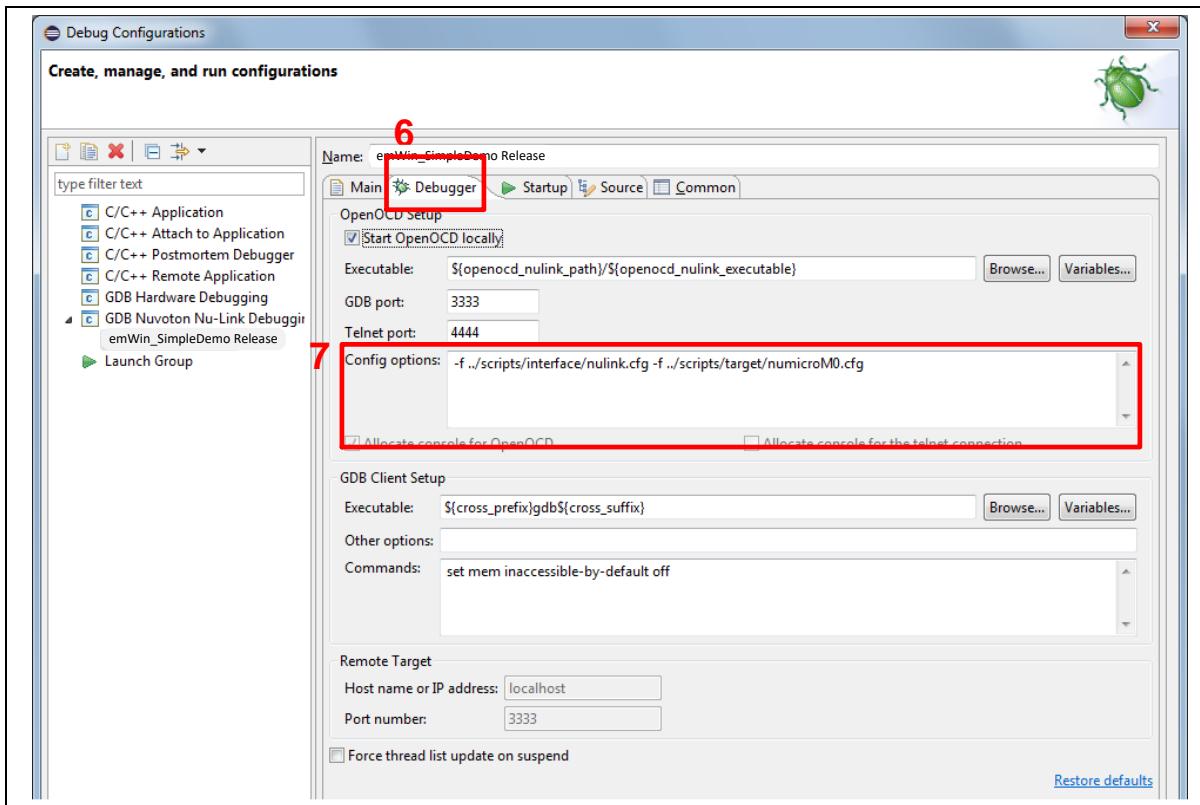


Figure 4-26 Debugger Tab Configuration

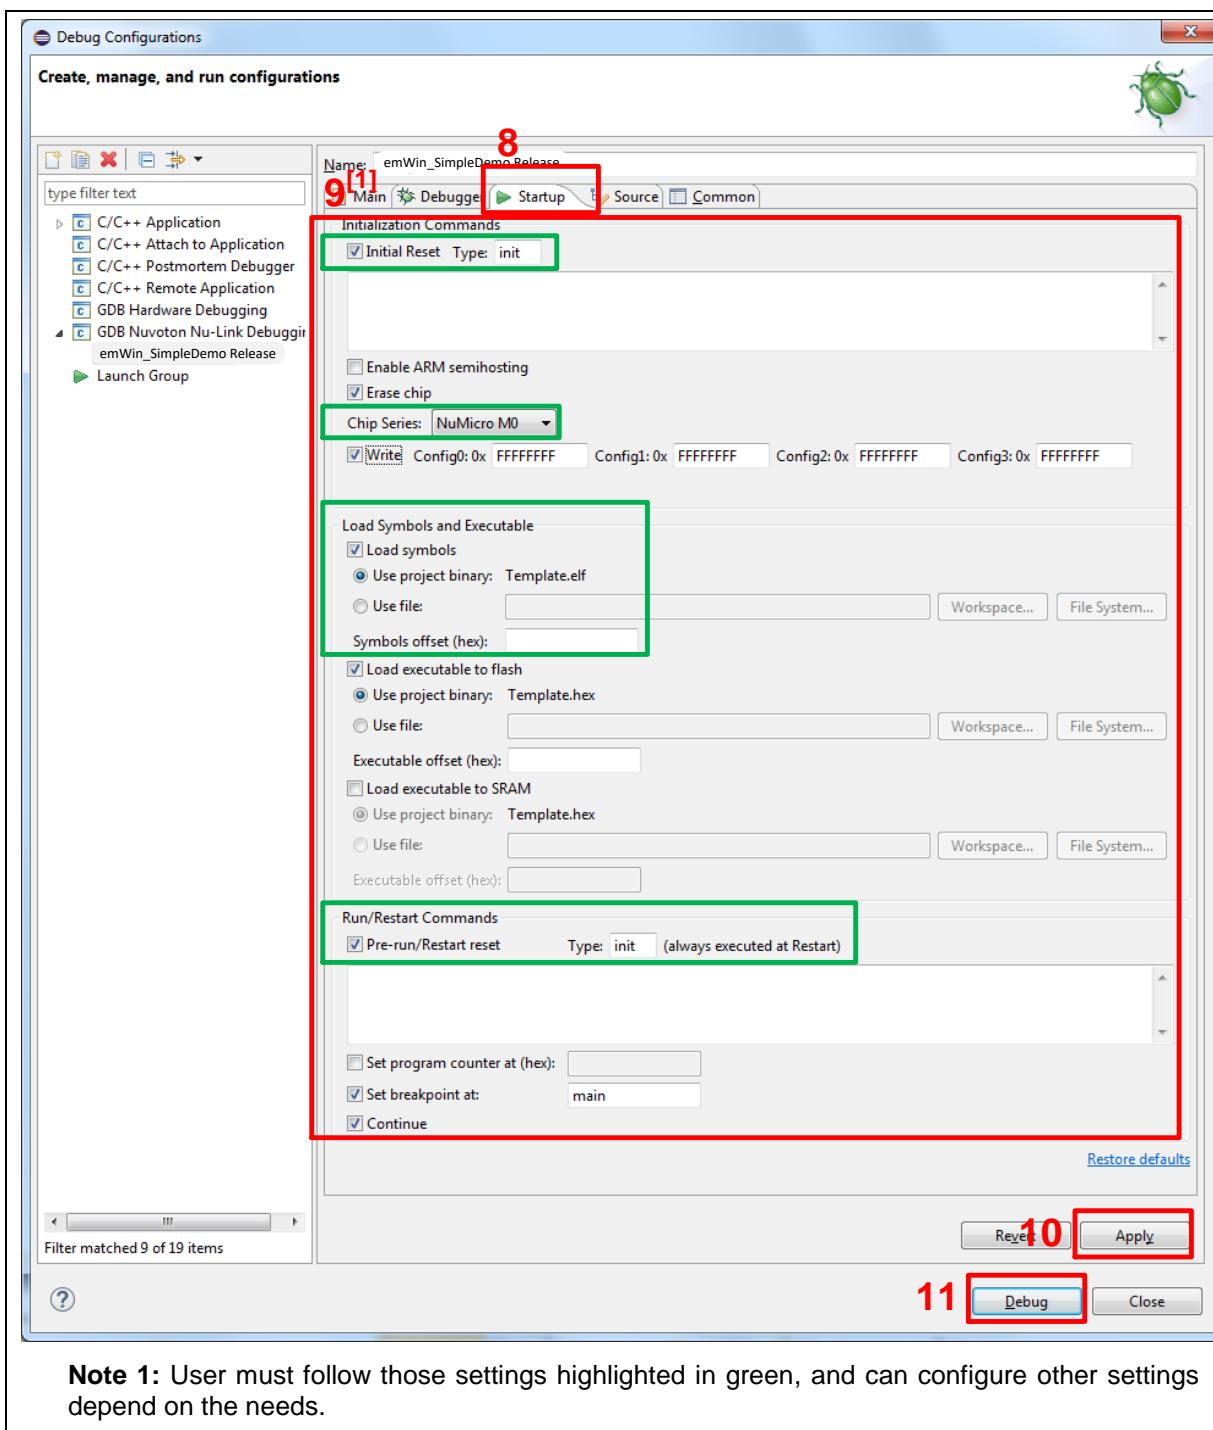


Figure 4-27 Startup Tab Configuration

6. Figure 4-28 shows the debug mode under NuEclipse. Click “Resume” and the debug message will be printed out as shown in Figure 4-29. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc. For more information about how to use NuEclipse, please refer to the NuEclipse User Manual.

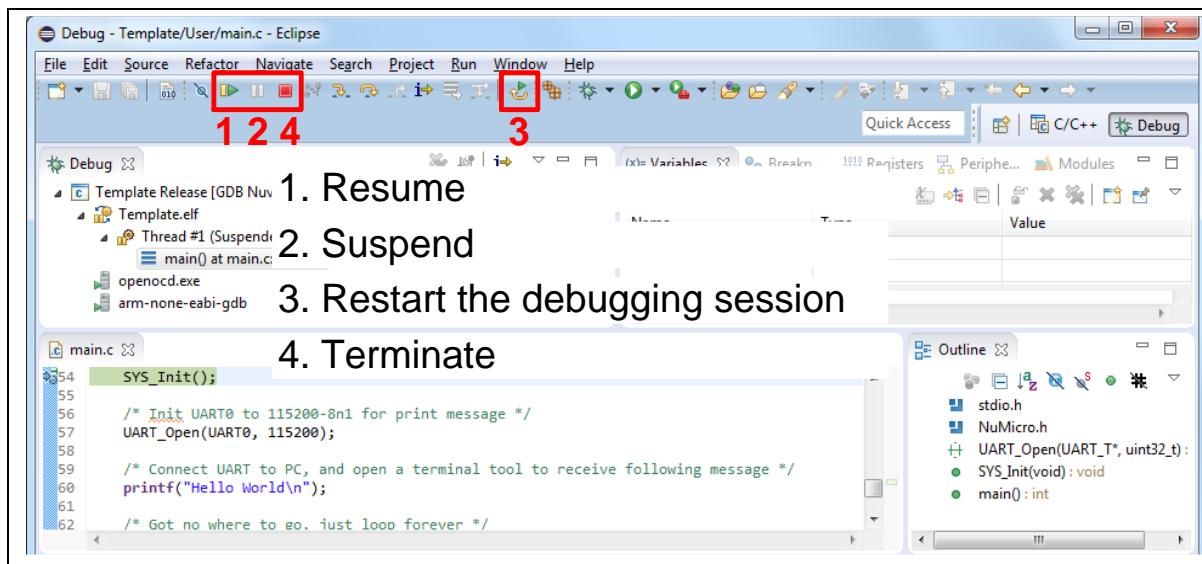


Figure 4-28 NuEclipse Debug Mode

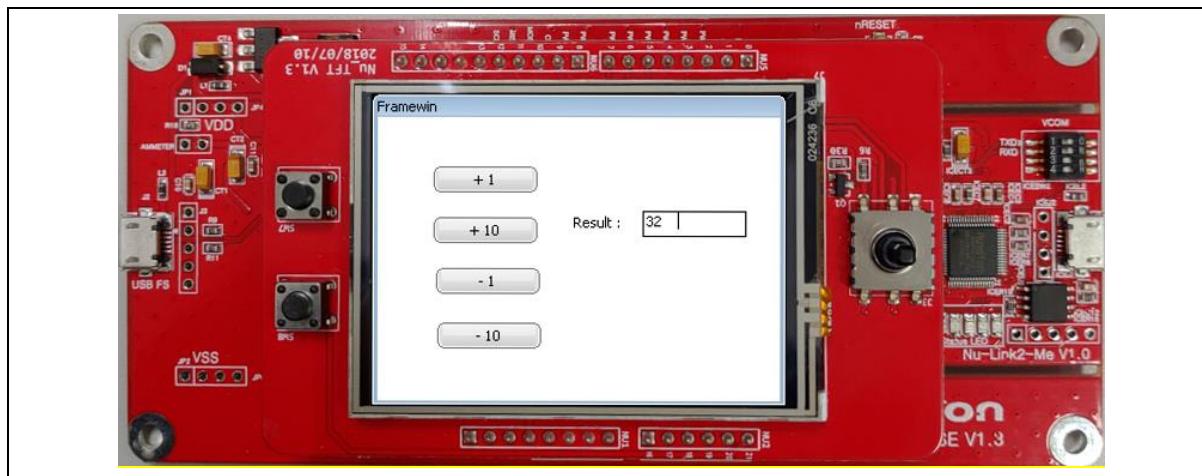


Figure 4-29 emWin_SimpleDemo Display

5 NUMAKER-M032KI SCHEMATICS

5.1 Nu-Link2-Me

Figure 5-1 shows the Nu-Link2-Me circuit. The Nu-Link2-Me is a debugger and programmer that supports on-line programming and debugging through SWD interface.

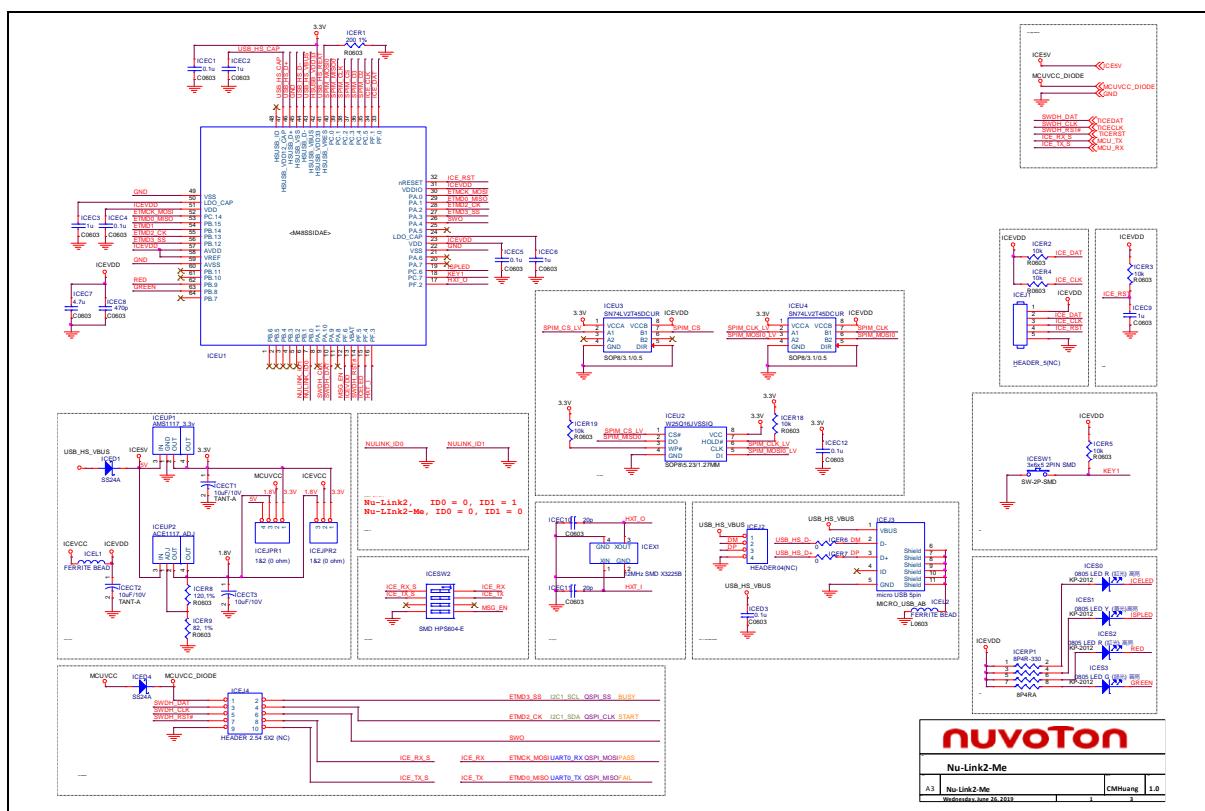


Figure 5-1 Nu-Link2-Me Circuit

5.2 M032 platform

Figure 5-2 shows the M032 platform circuit.

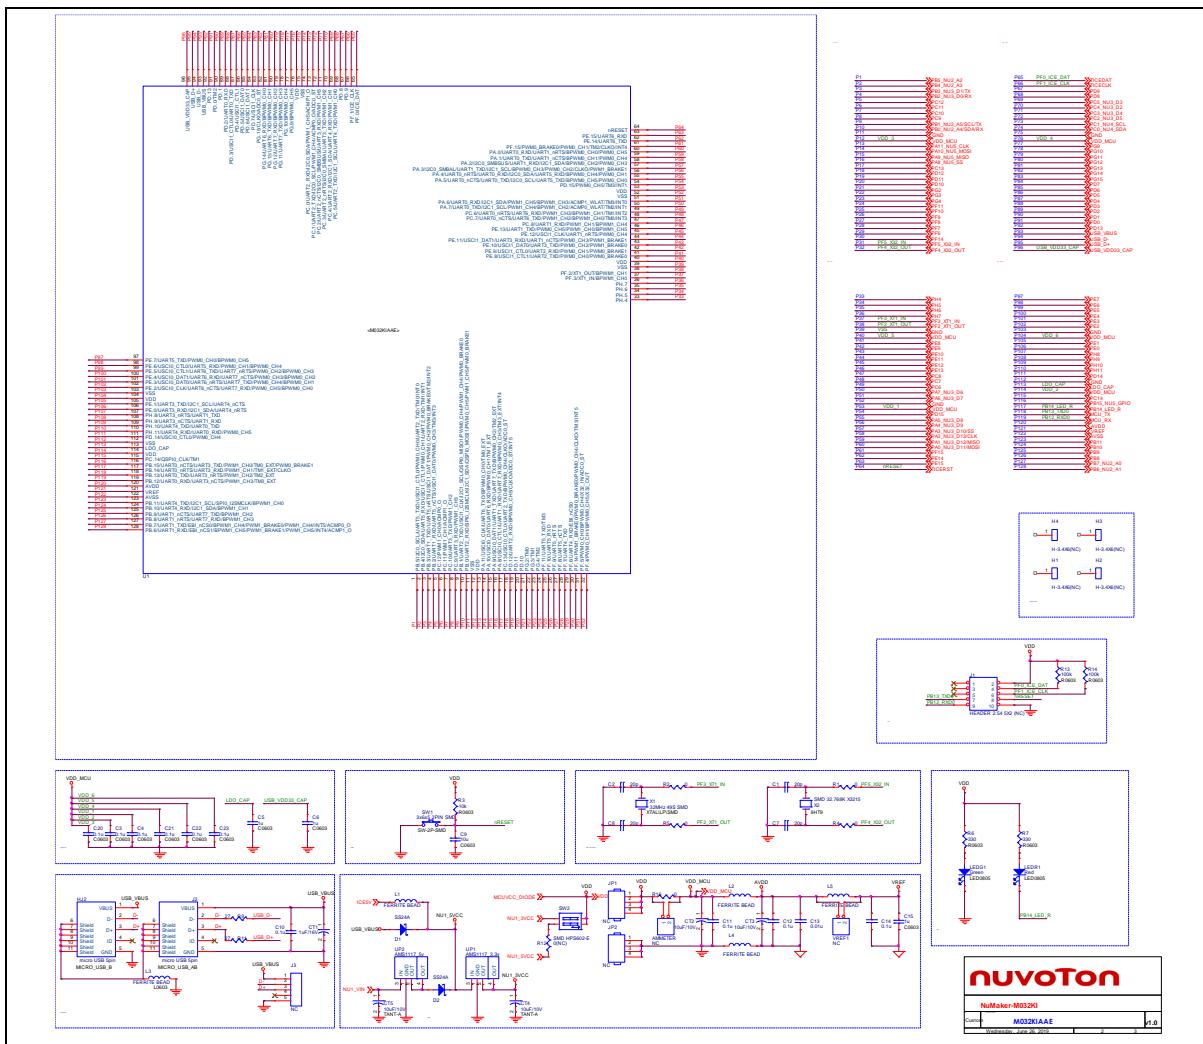


Figure 5-2 M032 platform Circuit

5.3 Extension Connector

Figure 5-3 shows extension connectors of NuMaker-M032KI.

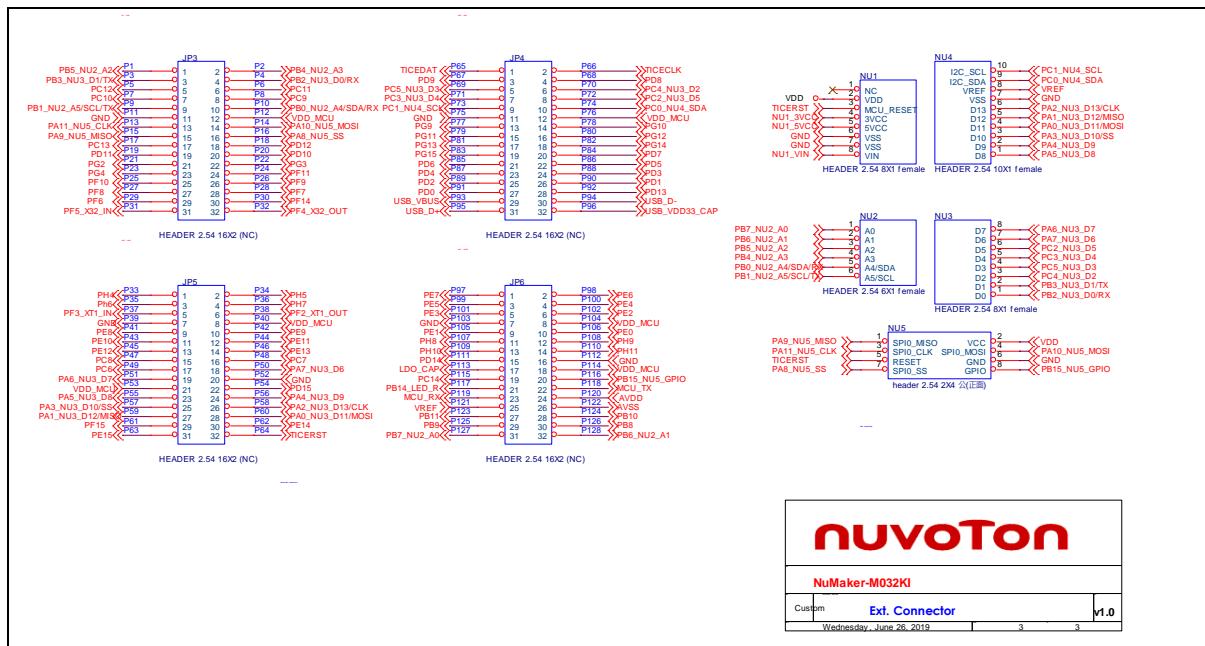


Figure 5-3 Extension Connectors Circuit

5.4 PCB Placement

Figure 5-4 and Figure 5-5 show the front and rear placement of NuMaker-M032KI.

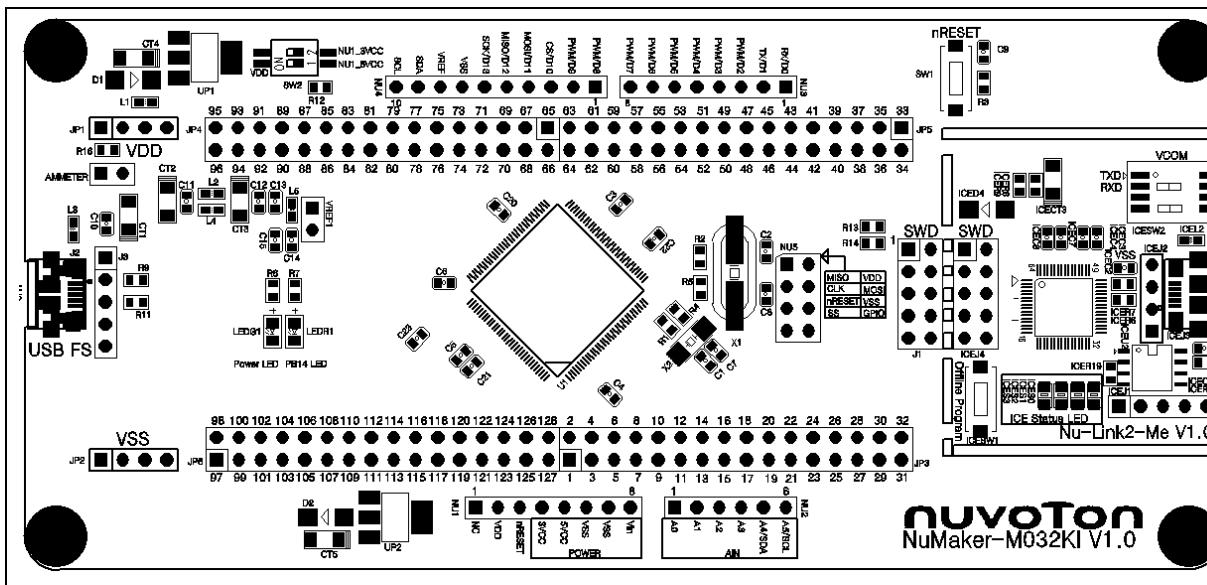


Figure 5-4 Front Placement

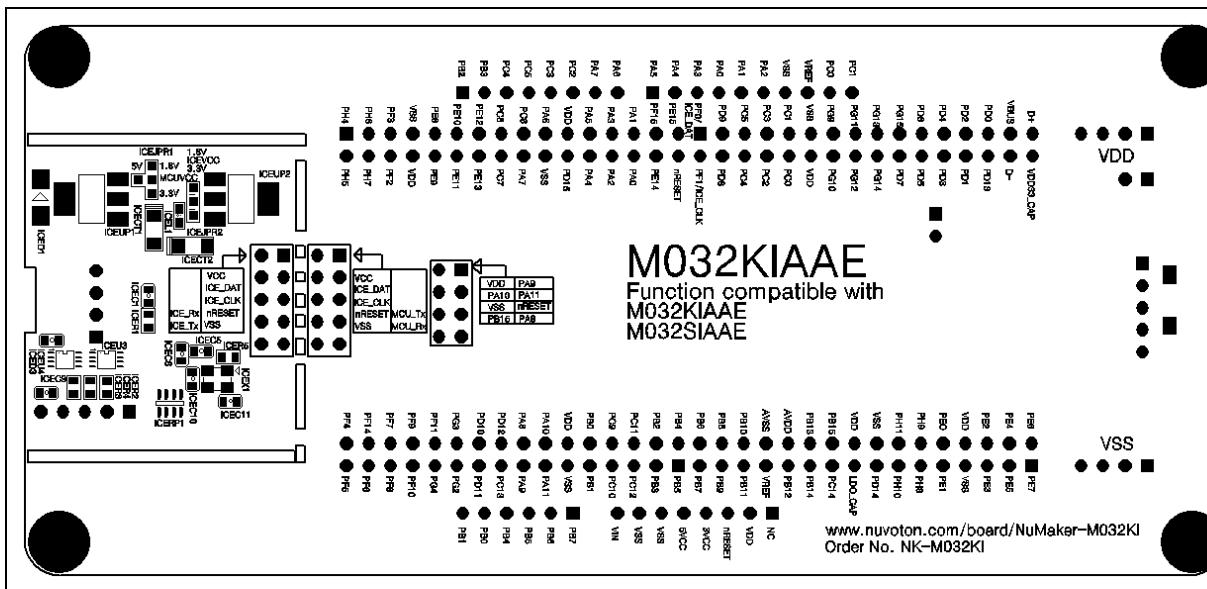


Figure 5-5 Rear Placement

6 NUTFT SCHEMATICS

6.1 NuTFT

Figure 6-1 shows the NuTFT circuit.

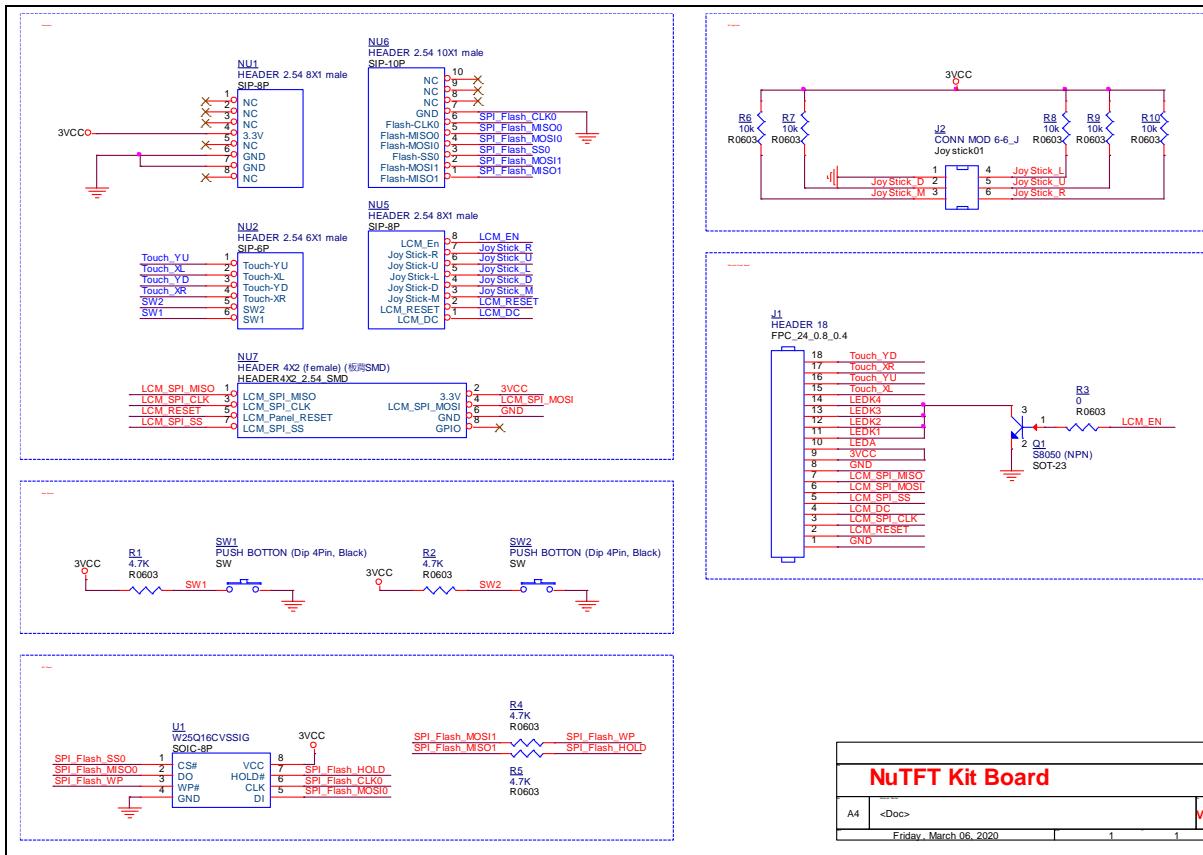


Figure 6-1 NuTFT

6.2 PCB Placement

Figure 6-2 and Figure 6-3 show the front and rear placement of NuTFT Extension board.

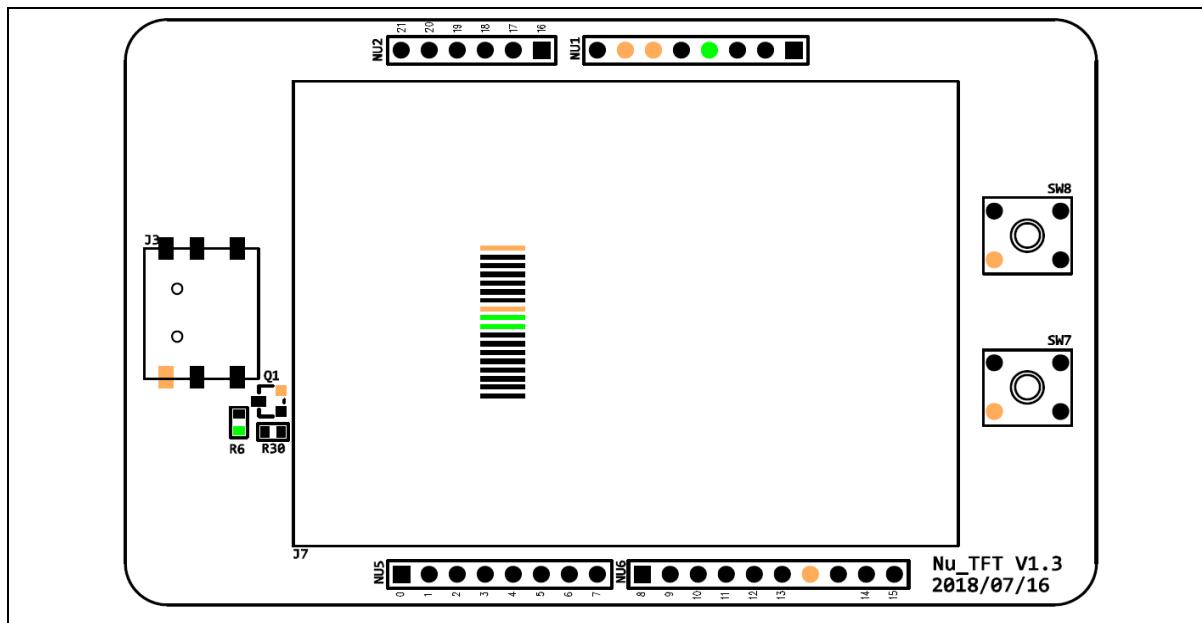


Figure 6-2 Front Placement

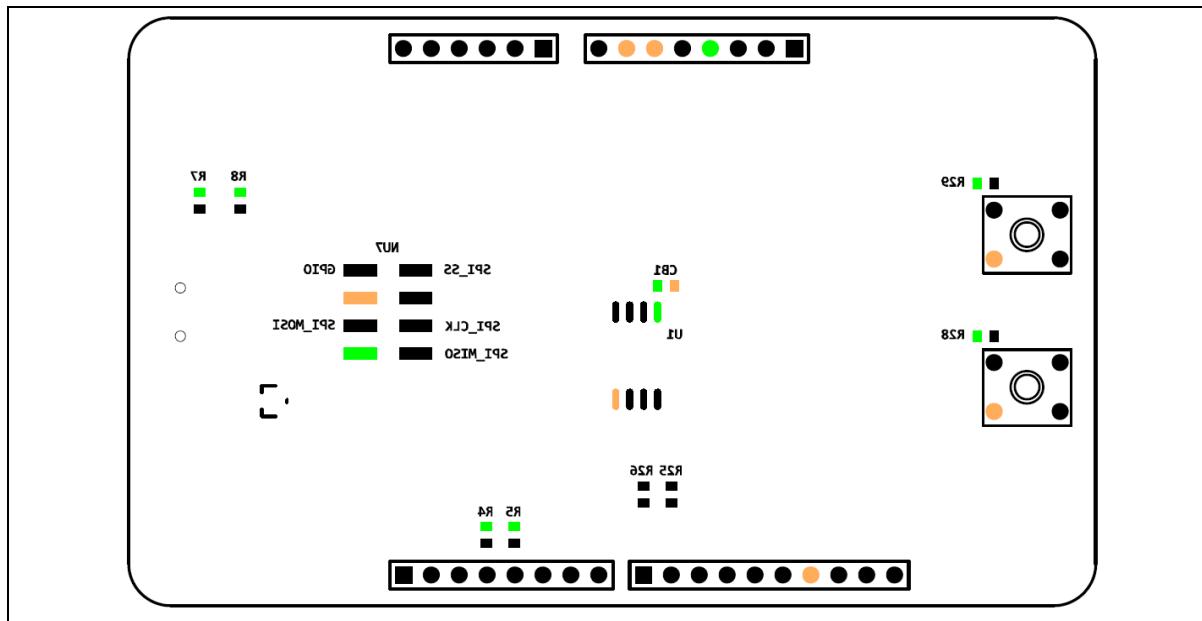


Figure 6-3 Rear Placement

7 REVISION HISTORY

Date	Revision	Description
2020.06.08	1.00	Initial version
2021.03.30	1.01	<ol style="list-style-type: none">1. Changed the kit name from NuMaker-emWin-M032KI to NuMaker-emWin-M032.2. Changed the extension board name from NuTFT Kit to NuTFT.3. Editorial changes had been made in chapter 1, section 3.3 and 3.4.4. Removed the emWin library quick start chapter and changed the example project from "Template" to "emWin_SimpleDemo" in chapter 4.5. Added supporting resources in section 1.2.

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.